



Manuals.plus /

› Kazeila /

› Kazeila Digital Programmable Garden Hose Timer Instruction Manual

Kazeila B07SBN9FS7

Kazeila Digital Programmable Garden Hose Timer Instruction Manual

Model: B07SBN9FS7

1. PRODUCT OVERVIEW

The Kazeila Digital Programmable Garden Hose Timer is designed to automate your garden watering schedule, providing convenience and efficient water management. This device features a large display, flexible programming options, and durable construction for reliable outdoor use.

Key Features:

- **Simple and Flexible Programming:** Watering duration from 1 second to 300 minutes; intervals from 1 hour to 15 days.
- **Large All-in-One Screen:** 3-inch HD display for clear data visibility, with automatic sleep mode for energy saving.
- **Multi-functions:** Includes Manual watering, Rain Delay, and Child Lock modes.
- **Waterproof and Durable:** IP65 rated with reinforced nylon fiber connector for enhanced longevity.
- **Smart Power System:** Displays remaining battery charge and detects low battery levels to prevent unexpected shutdowns.



Figure 1: Kazeila watering timer display with labeled components: Battery Indicator, Watering Icon, Real Time, How Long, How Often, Next Time, Start Time, Increase/Decrease buttons, Rain Delay, Manual Watering, Exit Current Setting, Start Setting/Confirm.



Figure 2: Kazeila watering timer highlighting key features: 3-inch Large Screen, IP65 Waterproof, All in One Display, Auto Sleep, 2xAA Batteries, Reinforced nylon fiber material, durable & unbreakable connector, and Metal Mesh Filter.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Kazeila Digital Programmable Garden Hose Timer Unit
- User Manual
- Various Adapters (e.g., 1/2 inch adapter for EU faucets)
- O-rings (5mm and 3mm)



Figure 3: Kazeila watering timer product packaging and contents, including the timer unit, user manual, various adapters, and O-rings.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the compartment cover.
3. Insert two (2) AA alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Note: The timer requires 2 AA batteries for operation. Replace batteries when the low battery indicator appears on the screen.

3.2 Faucet Installation

1. Ensure the faucet is clean and free of debris.
2. For USA-type 3/4 inch hose faucets, attach the timer directly. Ensure the 5mm O-ring is properly seated.
3. For EU-type 1/2 inch hose faucets, first screw the 1/2 inch adapter onto the faucet. Ensure the 3mm O-ring is properly seated within the adapter. Then, attach the timer to the adapter.
4. Screw the timer onto the faucet or adapter as tightly as possible by hand. The 360-degree rotating connector allows

for easy positioning.

5. Connect your garden hose or irrigation system to the outlet of the timer.

Quick Installation Diagram



Figure 4: Quick Installation Diagram for Kazeila watering timer, showing connection to USA-type (3/4 inch hose faucet) and EU-type (1/2 inch hose faucet with adapter) faucets, including O-rings and 360-degree rotating connector.

4. OPERATING INSTRUCTIONS

The timer features a large LCD screen and intuitive buttons for easy programming.

4.1 Setting Current Time

1. Press the **SETUP/OK** button to enter setup mode. The current time will flash.
2. Use the **+** and **-** buttons to adjust the hour.
3. Press **SETUP/OK** again to move to minutes, then adjust with **+** and **-**.
4. Press **SETUP/OK** to confirm and exit time setting.

4.2 Programming Watering Schedule

The timer allows you to set a start time, watering duration, and frequency.

1. Set Start Time:

- From the main screen, press **SETUP/OK** until 'START TIME' flashes.
- Use **+** and **-** to set the desired watering start hour and minute.
- Press **SETUP/OK** to confirm.

2. Set Watering Duration ('HOW LONG'):

- After setting the start time, 'HOW LONG' will flash.
- Use **+** and **-** to set the watering duration from 1 second to 300 minutes.
- Press **SETUP/OK** to confirm.

3. Set Watering Frequency ('HOW OFTEN'):

- After setting the duration, 'HOW OFTEN' will flash.
- Use **+** and **-** to set the interval from 1 hour to 15 days.
- Press **SETUP/OK** to confirm and save the program.

4.3 Manual Watering

To water immediately without affecting the programmed schedule:

1. Press the **MANUAL** button.
2. Use **+** and **-** to set the desired manual watering duration.
3. Press **SETUP/OK** to start manual watering.
4. To stop manual watering, press **MANUAL** again or **ESC/OFF**.

4.4 Rain Delay Function

To temporarily pause your watering schedule due to rain or other reasons:

1. Press the **RAIN DELAY** button.
2. Use **+** and **-** to select the delay duration (e.g., 24h, 48h, 72h).
3. Press **SETUP/OK** to activate the rain delay. The timer will resume its schedule after the delay period.
4. To cancel rain delay, press **RAIN DELAY** again.

4.5 Child Lock

To prevent accidental changes to your settings:

1. Press and hold the **SETUP/OK** button for 3 seconds to activate Child Lock. A lock icon will appear on the screen.

2. To deactivate, press and hold the **SETUP/OK** button for 3 seconds again.



Figure 5: The Kazeila watering timer can be used for various applications including pool filling, mist systems, sprinkler control, and drip irrigation.

5. MAINTENANCE

5.1 Battery Replacement

When the battery indicator shows low power, replace the batteries promptly to ensure continuous operation. Follow the steps in Section 3.1.

5.2 Cleaning

Clean the timer's exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents. Regularly check and clean the metal mesh filter at the inlet to prevent blockages.

5.3 Winter Storage

Before the first frost, disconnect the timer from the faucet, remove the batteries, and store the unit indoors in a dry, frost-free location to prevent damage.

6. TROUBLESHOOTING

- **No water flow:**
 - Check if the faucet is fully open.
 - Ensure the timer is programmed correctly and not in Rain Delay or OFF mode.
 - Check for blockages in the filter or hose.
 - Verify battery level.
- **Timer not turning on:**
 - Ensure batteries are inserted correctly and are not depleted. Replace if necessary.
- **Leaking from connections:**
 - Ensure all connections are tightened securely.
 - Check that O-rings are properly seated and not damaged. Replace if worn.
- **Incorrect watering schedule:**
 - Re-check your programmed settings for Start Time, Duration, and Frequency.
 - Ensure the current time on the timer is set accurately.

7. SPECIFICATIONS

Feature	Detail
Brand	Kazeila
Model	B07SBN9FS7
Material	Nylon
Product Dimensions (L x W x H)	8.3 x 9.8 x 12.6 cm
Item Weight	420 grams
Voltage	1.5 Volts
Batteries Required	2 x AA
Screen Size	3 Inches
Waterproof Rating	IP65

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Kazeila website. Keep your proof of purchase for warranty claims.

