

ZENITH p36n p36ln

Zenith Zig Zag Standard Presser Foot Instruction Manual

Model: p36n p36ln

INTRODUCTION

The Zenith Zig Zag Standard Presser Foot is an essential accessory designed for use with all automatic sewing machines, including popular brands like Singer, Usha, Brother, and Rajesh. This snap-on foot simplifies the process of creating various zigzag stitches, enhancing the versatility of your sewing projects. Crafted from durable alloy steel, it ensures reliable performance and longevity.



Figure 1: Zenith Zig Zag Standard Presser Foot, a versatile accessory for automatic sewing machines.

PRODUCT FEATURES

- **Versatile Stitching:** Enables a wide range of decorative and functional zigzag stitches.
- **Easy Snap-On Mechanism:** Designed for quick and effortless attachment to compatible sewing machines.
- **Universal Compatibility:** Works with all automatic sewing machines, including Singer, Usha, Brother, and Rajesh models.
- **Durable Construction:** Made from high-quality alloy steel for extended product life.

SETUP AND INSTALLATION

Installing the Zenith Zig Zag Standard Presser Foot is a straightforward process due to its snap-on design. Ensure your sewing machine is turned off and unplugged before proceeding with installation.

1. **Prepare the Machine:** Raise the needle to its highest position and lift the presser foot lever.
2. **Remove Existing Foot (if applicable):** If another presser foot is attached, press the release button or lever at the back of

the presser foot holder to detach it.

3. **Attach the Zig Zag Foot:** Position the Zenith Zig Zag Standard Presser Foot directly under the presser foot holder, aligning the crossbar of the foot with the groove on the holder. Lower the presser foot lever until the foot snaps securely into place.
4. **Verify Installation:** Gently tug on the presser foot to ensure it is firmly attached and does not wobble.

Use for all domestic machines



Figure 2: The Zenith Zig Zag Standard Presser Foot is compatible with all domestic automatic sewing machines.

OPERATING INSTRUCTIONS

Once installed, the Zig Zag Standard Presser Foot is ready for use. This foot is ideal for general sewing, including straight stitches, zigzag stitches, and other utility stitches that require a wider opening for the needle.

1. **Select Stitch Type:** On your sewing machine, select the desired stitch, such as a straight stitch or a zigzag stitch. Ensure the stitch width is appropriate for your project.
2. **Position Fabric:** Place your fabric under the presser foot, ensuring it is flat and aligned.
3. **Lower Presser Foot:** Lower the presser foot lever to hold the fabric securely in place.
4. **Begin Sewing:** Start sewing at a moderate speed, guiding the fabric smoothly. The wide opening of the zigzag foot allows the needle to move freely from side to side for zigzag stitches without hitting the foot.



Figure 3: The presser foot in action, guiding fabric for precise stitching.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Zenith Zig Zag Standard Presser Foot, follow these simple maintenance guidelines:

- **Cleaning:** After each use, wipe the presser foot with a soft, dry cloth to remove any lint or fabric fibers. Avoid using harsh chemicals or abrasive materials that could damage the alloy steel finish.
- **Storage:** Store the presser foot in a dry, clean place, preferably in a dedicated sewing accessory box, to prevent dust accumulation and potential damage.
- **Inspection:** Periodically inspect the foot for any signs of wear, bending, or damage. If the foot appears damaged, replace it to prevent issues with your sewing machine or stitching quality.

TROUBLESHOOTING

If you encounter issues while using your Zenith Zig Zag Standard Presser Foot, consider the following common problems and their solutions:

Problem	Possible Cause	Solution
Foot not snapping on securely.	Incorrect alignment or debris in the holder.	Ensure the crossbar is perfectly aligned with the holder's groove. Clean any debris from the holder.
Stitches are uneven or skipped.	Needle hitting the foot, or foot is bent/damaged.	Check if the needle is correctly installed and not bent. Inspect the presser foot for damage; replace if necessary. Ensure correct stitch width is selected.
Fabric not feeding smoothly.	Presser foot pressure too low or foot is dirty.	Adjust presser foot pressure on your machine if available. Clean the underside of the foot.

SPECIFICATIONS

Attribute	Detail
Model Number	p36n p36ln

Attribute	Detail
Material	Alloy Steel
Color	Steel
Item Weight	100 Grams (0.03 Kilograms shipping weight)
Dimensions (LxWxH)	10 x 6 x 4 Centimeters
Compatibility	All automatic sewing machines (Singer, Usha, Brother, Rajesh)
Country of Origin	India

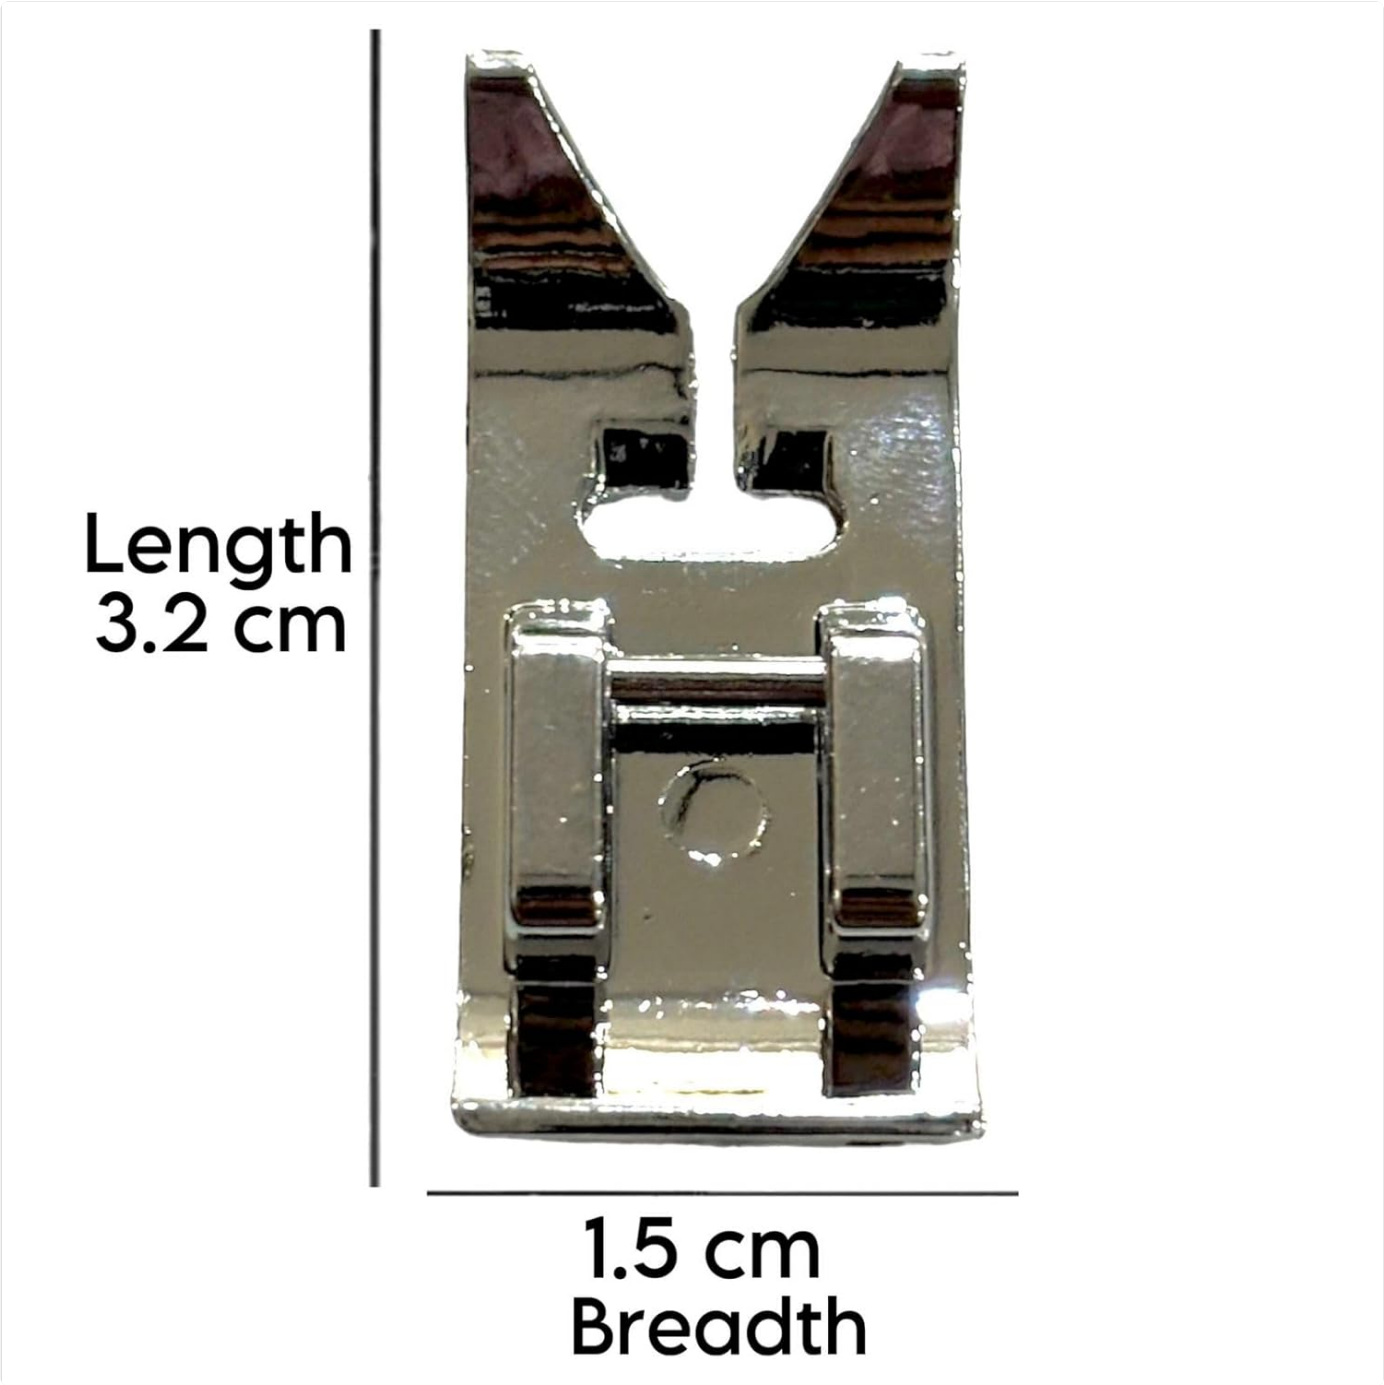


Figure 4: Detailed dimensions of the Zenith Zig Zag Standard Presser Foot.

Zenith products are manufactured with a commitment to quality and durability. While specific warranty details are not provided in this manual, we recommend purchasing genuine Zenith products from authorized retailers to ensure authenticity and access to any applicable support or return policies.

For further assistance or inquiries regarding your Zenith Zig Zag Standard Presser Foot, please refer to the support resources provided by your sewing machine manufacturer or the retailer from whom you purchased this accessory.

Important Note: Always ensure you are purchasing original products from reputable sellers. For this product, the manufacturer advises to "Buy Original Products from Perfect Deal."