

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [JOYACCESS](#) /

› [JOYACCESS Wireless Keyboard and Mouse Combo User Manual \(Model XK2SFR\)](#)

## JOYACCESS XK2SFR

# JOYACCESS Wireless Keyboard and Mouse Combo User Manual

Model: XK2SFR

## INTRODUCTION

The JOYACCESS Wireless Keyboard and Mouse Combo (Model XK2SFR) offers a convenient and efficient solution for your computing needs. This 2.4GHz wireless set features an ultra-thin, compact keyboard with an AZERTY layout and a silent, ergonomic mouse with adjustable DPI settings. Designed for compatibility with various devices, it provides a stable connection and smart power-saving features.

## PACKAGE CONTENTS

- 1 x JOYACCESS Wireless Keyboard
- 1 x JOYACCESS Wireless Mouse
- 1 x USB Nano Receiver (stored in the mouse battery compartment)
- 1 x User Manual (this document)

*Note: 3 AA alkaline batteries are required and are not included in the package.*

## SETUP INSTRUCTIONS

1. **Install Batteries:** Open the battery compartments on both the keyboard and the mouse. Insert the required AA batteries (not included), ensuring correct polarity.
2. **Locate USB Receiver:** The USB Nano receiver is typically stored in the battery compartment of the mouse for safekeeping. Carefully remove it.
3. **Connect Receiver:** Plug the USB Nano receiver into an available USB port on your computer or smart device.
4. **Power On:** Turn on the keyboard and mouse using their respective power switches. The devices should automatically connect to the receiver.
5. **Test Connection:** Verify that both the keyboard and mouse are functioning correctly. If not, refer to the Troubleshooting section.



Image: The mouse battery compartment, illustrating the storage location for the USB Nano receiver.



Connexion sans fil 2.4G  
**EASY PLUG & PLAY**

Image: A laptop wirelessly connected to the JOYACCESS keyboard and mouse combo, demonstrating the 2.4G wireless connection.

## OPERATING INSTRUCTIONS

### Keyboard Usage

- **AZERTY Layout:** The keyboard features a standard AZERTY layout for French-speaking users.
- **Multimedia Hotkeys:** Utilize the function (Fn) key in combination with F1-F12 keys for quick access to multimedia controls (e.g., volume, play/pause). Note that multimedia hotkeys may not be fully compatible with Mac systems.
- **Numeric Keypad:** The integrated numeric keypad allows for efficient data entry.

# 17 TOUCHES MULTIMÉDIA ET PAVÉ NUMÉRIQUE

CONCEPTION COMPACTE ET OPTIMISEZ VOTRE UTILISATION PLUS RAPIDEMENT ET PLUS CONFORTABLEMENT. LA FONCTIONNALITÉ DE CLAVIER MULTIMÉDIA N'EST PAS DISPONIBLE AVEC MAC OS

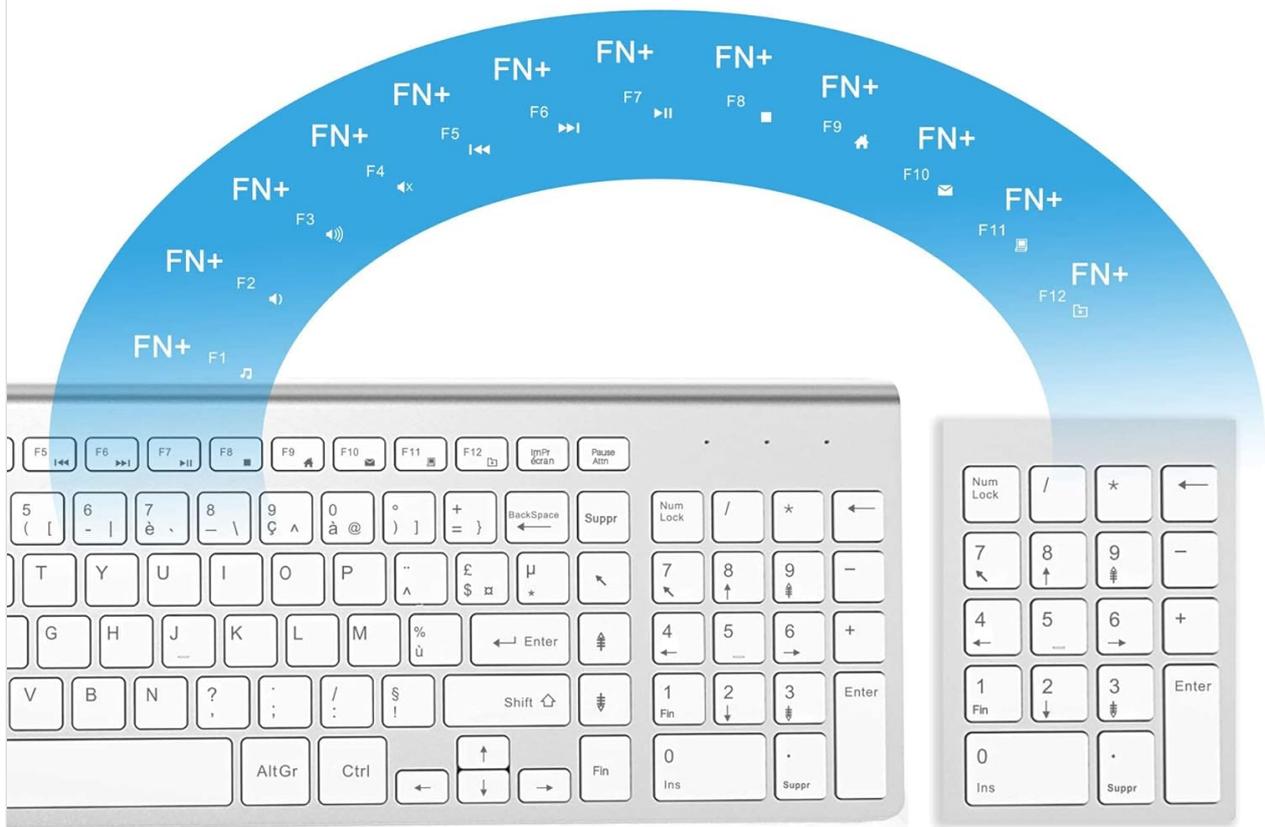


Image: A visual guide to the multimedia function keys (Fn + F1-F12) available on the keyboard.

## Mouse Usage

- **DPI Adjustment:** The mouse offers 5 adjustable DPI levels (800/1200/1600/2000/2400). Press the DPI button located on top of the mouse to cycle through the sensitivity settings.
- **Ergonomic Design:** The mouse is designed for comfortable use over extended periods.
- **Silent Clicks:** Both the keyboard and mouse are designed with silent click mechanisms to reduce noise during operation.



Image: The wireless mouse, highlighting its adjustable DPI settings (800, 1200, 1600, 2000, 2400).

## Smart Power Saving

To conserve battery life, both the keyboard and mouse feature an intelligent sleep mode:

- The mouse enters power-saving mode after 20 seconds of inactivity.
- The keyboard enters automatic sleep mode after 8 minutes of inactivity.
- To wake the devices, simply click any key on the keyboard or any button on the mouse.



Image: Illustration of the keyboard's automatic sleep mode and how pressing any key reactivates it to working mode.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the device.
- **Battery Replacement:** Replace batteries when performance degrades or the low battery indicator (if present) illuminates. Always use new, high-quality alkaline batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the USB receiver in the mouse compartment.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low or dead batteries; USB receiver not properly connected; device not powered on; interference.	Replace batteries; ensure USB receiver is firmly plugged into a working USB port; turn on devices; move closer to the receiver; try a different USB port.
Lag or delayed response	Distance from receiver; interference from other wireless devices; low battery.	Reduce distance to receiver (within 10m); remove obstacles; ensure no strong wireless interference; replace batteries.
Mouse cursor jumps or is erratic	Dirty optical sensor; unsuitable surface; DPI setting too high/low.	Clean the optical sensor; use a mouse pad or a smooth, non-reflective surface; adjust DPI settings.
Multimedia keys not working on Mac	Limited compatibility with Mac OS.	This is a known limitation; basic typing functionality should still work.

## SPECIFICATIONS

- **Brand:** JOYACCESS
- **Model:** XK2SFR
- **Connectivity:** 2.4GHz Wireless
- **Receiver:** USB Nano Receiver
- **Keyboard Layout:** AZERTY (French)
- **Keyboard Features:** Ultra-thin, Compact, Silent Scissor-switch keys, Multimedia hotkeys
- **Mouse DPI:** 800/1200/1600/2000/2400 (Adjustable)
- **Compatible Systems:** PC, Laptop (Windows, Mac OS - limited multimedia support)
- **Power Source:** Wireless (Batteries required, not included)
- **Operating Range:** Up to 10 meters
- **Color:** White / Silver

# DESIGN ULTRA FIN ET ERGONOMIQUE



Image: Technical drawing showing the dimensions of the keyboard and mouse for reference.

## WARRANTY AND SUPPORT

**Warranty:** This JOYACCESS product comes with a 1-year warranty against manufacturer defects from the date of purchase. Please retain your proof of purchase for warranty claims.

**Support:** For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact JOYACCESS customer support through the retailer's platform or the official JOYACCESS website. Provide your product model (XK2SFR) and a detailed description of the issue for faster service.