



Manuals.plus /

› UpStart Components /

› UpStart Components 80040 Washer Agitator Dogs Replacement Instruction Manual

UpStart Components AP-80040-2PK-DL6

UpStart Components 80040 Washer Agitator Dogs Instruction Manual

Model: AP-80040-2PK-DL6

INTRODUCTION

This manual provides instructions for the installation and maintenance of the UpStart Components 80040 Washer Agitator Dogs. These replacement parts are designed for compatibility with various washing machine models, including the Whirlpool LSR8233EQ1. Please read these instructions carefully before proceeding with installation to ensure proper function and safety.

SAFETY INFORMATION


- Always disconnect the washing machine from its power source before attempting any repairs or installations.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- If you are unsure about any step, consult a qualified appliance technician.
- Keep small parts away from children.

SETUP AND INSTALLATION

The UpStart Components 80040 Washer Agitator Dogs are designed for easy at-home installation. The following steps outline the general procedure for replacing agitator dogs in compatible washing machines.

1. **Disconnect Power:** Unplug the washing machine from the electrical outlet and turn off the water supply.
2. **Access Agitator:** Remove the fabric softener dispenser or cap from the top of the agitator. This usually involves pulling it straight up.
3. **Remove Agitator Bolt:** Locate the bolt at the bottom of the agitator. Use a socket wrench to loosen and remove this bolt.
4. **Remove Agitator:** Carefully pull the agitator straight up and out of the wash tub. It may require some force.

5. **Locate Agitator Dogs:** Once the agitator is removed, turn it upside down. You will see a cam assembly with the old agitator dogs.
6. **Replace Agitator Dogs:** Remove the old, worn agitator dogs. Insert the new UpStart Components 80040 Agitator Dogs into their slots in the cam assembly. Ensure they are seated correctly.
7. **Reassemble Agitator:** Place the agitator back onto the agitator shaft, aligning the splines. Reinstall the agitator bolt and tighten it securely.
8. **Replace Dispenser:** Reattach the fabric softener dispenser or cap.
9. **Restore Power:** Reconnect the washing machine to the power supply and turn on the water.

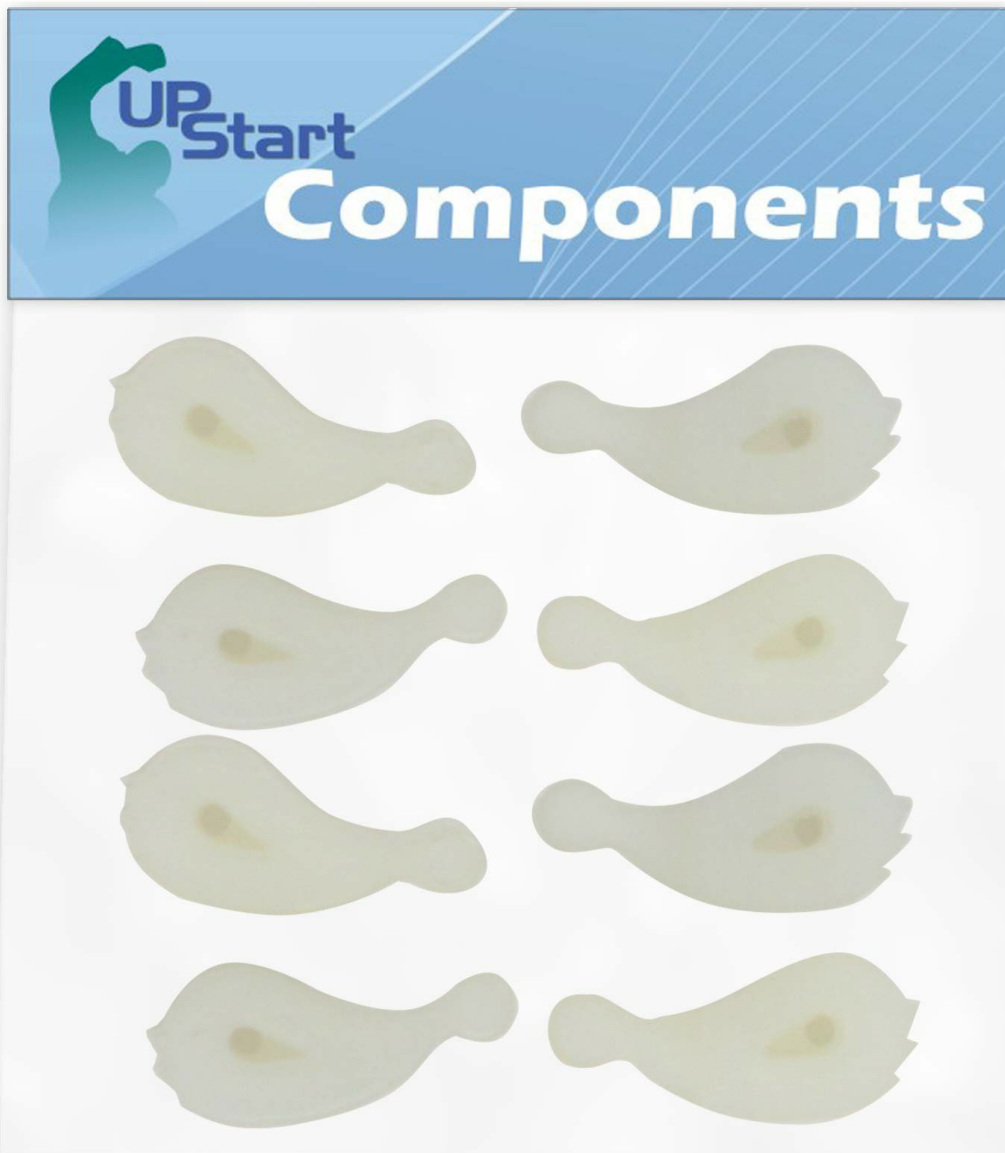

This image displays four individual white agitator dogs, which are small, curved plastic components designed to engage with the agitator shaft in a washing machine. They are typically made of durable plastic to withstand the mechanical forces during the wash cycle.

OPERATING INSTRUCTIONS

After successful installation of the UpStart Components 80040 Washer Agitator Dogs, your washing machine's agitator should function correctly, providing proper agitation during wash cycles. Operate your washing machine according to its manufacturer's instructions.

MAINTENANCE

The UpStart Components 80040 Washer Agitator Dogs are constructed from ultra-durable, high-quality material designed to resist wear and tear over time. To maximize their lifespan and ensure continued optimal performance of your washing machine:

- Avoid consistently overloading the washing machine, as this can put excessive strain on the agitator and its components.
- Periodically inspect the agitator dogs for signs of wear, such as rounding or chipping, especially if you notice reduced agitation effectiveness.
- Ensure the agitator bolt remains securely tightened.

TROUBLESHOOTING

If you experience issues after replacing the agitator dogs, consider the following:

- **Agitator Not Moving or Weak Agitation:** Verify that the agitator dogs are correctly seated in the cam assembly and that the agitator bolt is tightened. Ensure the agitator splines are properly engaged with the transmission shaft.
- **Unusual Noises During Agitation:** Check for any foreign objects caught in the agitator mechanism or ensure all components are securely fastened.
- **Clothes Not Cleaning Properly:** This could indicate insufficient agitation. Re-check the agitator dogs for proper installation and wear.

SPECIFICATIONS

Part Number	AP-80040-2PK-DL6
Compatible Part Numbers	80040, AP3119063, 285612, 285770, 3109, 3366877, 387091, 80040VP, AH388034, EA388034, ER80040, LP338, PS388034, TJ90LP338
Quantity	8 Pieces

WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. For support, technical assistance, or warranty inquiries, please contact UpStart Components directly through their official channels. This product is not affiliated with any original equipment manufacturers, and their warranties do not cover this replacement part.