Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Lemax /
- > Lemax Mrs. Claus Cookies Figurine (Model 92759) Instruction Manual

Lemax 92759

Lemax Mrs. Claus Cookies Figurine (Model 92759) - Instruction Manual

Official instructions for your Lemax collectible figurine.

1. Introduction

Thank you for choosing the Lemax Mrs. Claus Cookies Figurine, Model 92759. This polyresin figurine is designed to enhance your holiday village or festive display. This manual provides essential information for the proper setup, care, and maintenance of your collectible.

2. PRODUCT OVERVIEW

The Mrs. Claus Cookies figurine depicts Mrs. Claus holding a tray of freshly baked cookies. It is crafted from durable polyresin with intricate details.



Figure 1: Front view of the Lemax Mrs. Claus Cookies Figurine. Mrs. Claus is depicted in a red dress with white trim, holding a silver tray of cookies.

• Material: Polyresin

• Approximate Dimensions (H x W x D): 2.68 x 1.57 x 1.22 inches (6.8 x 4 x 3.1 cm)

• Model Number: 92759

• Year Released: 2019

3. SETUP AND PLACEMENT

- 1. **Unpacking:** Carefully remove the figurine from its packaging. Retain the original packaging for future storage.
- 2. Surface Preparation: Place the figurine on a flat, stable surface to prevent accidental falls.
- 3. **Location:** Choose a location away from direct sunlight, extreme temperatures, and high humidity to preserve the figurine's colors and material integrity. Avoid placing near heat sources or in areas prone to vibrations.



Figure 2: Example of a Lemax Christmas village display, illustrating suitable placement for figurines.

4. DISPLAYING YOUR FIGURINE

The Mrs. Claus Cookies figurine is a static decorative item. No assembly or power source is required. Simply place it in your desired location as part of your festive decor.

- Ensure the figurine is not easily knocked over, especially if placed in high-traffic areas.
- Consider pairing with other Lemax village pieces for a cohesive display.

5. MAINTENANCE AND CARE

- **Cleaning:** Dust the figurine regularly with a soft, dry cloth. For more stubborn dirt, lightly dampen the cloth with water and gently wipe the surface. Avoid abrasive cleaners or harsh chemicals, as these can damage the paint and finish.
- **Storage:** When not in use, store the figurine in its original packaging or a protective container in a cool, dry place. This helps prevent dust accumulation and potential damage.
- Handling: Always handle the figurine by its base to avoid damaging delicate parts.

6. TROUBLESHOOTING

| | Problem | Possible Cause | Solution |
|--|---------|----------------|----------|
|--|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|----------------------------|--|--|
| Figurine appears unstable. | Uneven surface or improper placement. | Ensure the figurine is on a flat, level surface. Adjust its position until stable. |
| Dust or dirt accumulation. | Lack of regular cleaning. | Wipe gently with a soft, dry or slightly damp cloth. |
| Fading colors. | Prolonged exposure to direct sunlight. | Relocate the figurine to an area away from direct sunlight. |

7. SPECIFICATIONS

| Feature | Detail |
|------------------------------------|--|
| Brand | Lemax |
| Model Number | 92759 |
| Product Type | Polyresin Figurine |
| Approximate Dimensions (H x W x D) | 2.68 x 1.57 x 1.22 inches (6.8 x 4 x 3.1 cm) |
| Item Weight | 1.06 ounces |
| Year Released | 2019 |

8. WARRANTY AND SUPPORT

For information regarding warranty, returns, or customer support, please refer to the retailer's policy where the product was purchased or visit the official Lemax website. Keep your proof of purchase for any warranty claims.

You can find more information about Lemax products at the Lemax Store.

9. RELATED PRODUCT VIDEOS

No official seller videos directly featuring the Lemax Mrs. Claus Cookies Figurine (Model 92759) were found in the provided data. Videos for other related Lemax or Christmas-themed figurines are available from various creators, but are not included here to maintain focus on the specific product and seller-verified content.

© 2024 Lemax. All rights reserved.



Lemax Thicket Falls Cabin Operating Instructions

User manual for the Lemax Thicket Falls Cabin, providing setup, operation, and maintenance instructions for this decorative Christmas item. Includes details on smoke function, water tank, and wick replacement.



Wall-mounted LFP Battery User Manual

User manual for the Wall-mounted LFP Battery, detailing product parts, size, installation steps, product details, parallel connection diagram, warnings, storage conditions, and technical data.



Menards Christmas Decor Sale: Trees, Lights, Ornaments & More - November 1-10, 2018

Shop the Menards Christmas Decor Sale from November 1-10, 2018. Find great deals on artificial Christmas trees, indoor and outdoor lights, ornaments, inflatables, wreaths, garlands, and festive home decor.



Deve Approved Battery List for Inverters

A comprehensive list of batteries approved for use with Deye inverters, including model numbers and compatibility information.