

vidaXL 247588

vidaXL Reclaimed Wood Side Table

Model: 247588

INTRODUCTION

Thank you for choosing the vidaXL Reclaimed Wood Side Table. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

This side table features a unique reclaimed wood tabletop and a sturdy cast iron base with an adjustable height mechanism, offering both functionality and a distinctive aesthetic.

SAFETY INFORMATION

- Always assemble the table on a soft, clean surface to prevent scratches.
- Ensure all components are securely fastened before use. Periodically check and retighten all connections.
- Do not exceed the table's weight capacity.
- Place the table on a level and stable surface to prevent tipping.
- Keep small parts and packaging materials away from children.
- **California Proposition 65 Warning:** This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Reclaimed Wood Tabletop
- Cast Iron Leg Assembly with Adjustable Mechanism
- Assembly Hardware (screws, bolts, washers, etc.)
- Assembly Guide (this document)

SETUP AND ASSEMBLY

Recommended for assembly: 2 people.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to

prevent damage.

2. **Inspect Parts:** Check all components against the package contents list to ensure everything is present and in good condition.
3. **Attach Tabletop:** Align the reclaimed wood tabletop with the designated mounting points on the top of the cast iron leg assembly.
4. **Secure Tabletop:** Using the provided hardware (screws/bolts), firmly attach the tabletop to the leg assembly. Ensure all fasteners are tightened securely, but do not overtighten to avoid damaging the wood.
5. **Position Table:** Carefully lift and place the assembled table in its desired location.
6. **Check Stability:** Gently rock the table to ensure it is stable and all connections are firm.



Image: The vidaXL Reclaimed Wood Side Table showing overall dimensions. The tabletop diameter is 17.7 inches (45 cm), and the height is adjustable from 17.7 inches (45 cm) to 24.4 inches (62 cm).

OPERATING INSTRUCTIONS

The side table features an adjustable height mechanism, allowing you to customize its height for various uses.

1. **Locate Crank Handle:** Identify the crank handle on the side of the cast iron base.
2. **Adjust Height:**
 - To **raise** the tabletop, turn the crank handle clockwise.
 - To **lower** the tabletop, turn the crank handle counter-clockwise.
3. **Secure Height:** Once the desired height (between 17.7 inches and 24.4 inches) is reached, ensure the mechanism is stable. There is a locking knob on the side of the mechanism to secure the height. Turn this knob clockwise to tighten and lock the table at the desired height.



Image: The side table demonstrating its adjustable height feature, with an arrow indicating vertical movement.



Image: A close-up view of the locking knob on the cast iron base, used to secure the table's height after adjustment.



Image: A detailed view of the crank handle on the cast iron base, which is used to manually adjust the table's height.

MAINTENANCE

Proper care will extend the life and appearance of your side table.

- **Cleaning:** Wipe the table surface and base with a dry, soft cloth. Do not use harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** This product is not stain resistant. Immediately wipe any spills with a dry cloth to prevent staining.
- **Wood Care:** Protect the reclaimed wood tabletop from direct sunlight, extreme temperatures, and high humidity, which can cause warping or cracking.
- **Mechanism Care:** If the height adjustment mechanism becomes stiff, apply a small amount of silicone-based lubricant to the moving parts.
- **Hardware Check:** Periodically inspect all screws and bolts to ensure they remain tight. Retighten as necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly	Loose assembly screws; Uneven floor surface	Check and tighten all assembly screws. Move the table to a level surface or use shims if necessary.
Height adjustment is difficult	Mechanism is dry or obstructed; Locking knob is too tight	Apply a small amount of silicone lubricant to the moving parts of the mechanism. Loosen the locking knob before adjusting height.
Wood surface appears dull or stained	Accumulated dust/dirt; Liquid spill not cleaned promptly	Wipe with a dry, soft cloth. For stains, consult a professional wood care specialist. Avoid harsh cleaners.

SPECIFICATIONS

- **Brand:** vidaXL
- **Model Number:** 247588
- **Product Dimensions (D x W x H):** 17.7" x 17.7" x (17.7" - 24.4") (45 cm x 45 cm x (45 cm - 62 cm))
- **Item Weight:** 14.3 Kilograms
- **Frame Material:** Reclaimed Wood (top), Cast Iron (base)
- **Shape:** Round
- **Color:** Multi Color (top), Dark Brown or Black (base)
- **Indoor/Outdoor Usage:** Indoor
- **Recommended Number of People for Assembly:** 2
- **Product Care Instructions:** Wipe with Dry Cloth

WARRANTY INFORMATION

All products sold by vidaXL are covered by a legal guarantee of at least 2 years. This warranty covers manufacturing defects and material flaws under normal use.

For specific warranty terms and conditions, or to make a warranty claim, please retain your proof of purchase and contact vidaXL customer service directly.

SUPPORT AND CONTACT

Should you require further assistance, have questions about your product, or need to report an issue, please contact vidaXL customer support.

You can find more information and contact details by visiting the official vidaXL store:
[vidaXL Store on Amazon](#)