

[manuals.plus](#) /› [Nedis](#) /› [Nedis DVB-S2 HD Receiver DVBS2265BK User Manual](#)

Nedis DVBS2265BK

Nedis DVB-S2 HD Receiver (Model: DVBS2265BK)

User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nedis DVB-S2 HD Receiver, model DVBS2265BK. This device is designed to receive DVB-S/S2 satellite signals and decode MPEG-2/4 H.264 and H.265 video formats, delivering high-definition television broadcasts. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, do not open the receiver. Refer all servicing to qualified service personnel. Observe the following safety precautions:

- Ensure the power supply voltage matches the rating label on the adapter.
- Do not expose the receiver to rain or moisture.
- Avoid placing the receiver near heat sources or in direct sunlight.
- Ensure adequate ventilation around the unit. Do not block ventilation openings.
- Disconnect the power adapter from the wall outlet during lightning storms or when unused for long periods.
- Do not use damaged power cords or plugs.

3. PACKAGE CONTENTS

Verify that all items listed below are present in the package:

- Nedis DVB-S2 HD Receiver (DVBS2265BK)
- Remote Control
- Power Adapter (12V DC)
- AV Cable (RCA)
- User Manual (this document)



Figure 3.1: Contents of the Nedis DVB-S2 HD Receiver package.

4. PRODUCT OVERVIEW

4.1 Front Panel



Figure 4.1: Front panel of the receiver.

- **Digital Display:** Shows channel number or time.
- **CH- / CH+:** Buttons to change channels.
- **POWER:** Button to turn the receiver on/off or to standby mode.

4.2 Rear Panel



Figure 4.2: Rear panel of the receiver.

- **LNB-IN:** Connects to the satellite dish LNB.
- **USB:** Two USB ports for media playback or Wi-Fi adapter.
- **HD-OUT:** HDMI output for connecting to a TV or monitor.
- **AV:** Analog audio/video output (RCA).
- **RS-232:** Serial port for service or firmware updates.
- **Ethernet:** RJ45 port for network connection.
- **DC 12V-IN:** Power input for the 12V DC adapter.

4.3 Remote Control

The remote control allows you to operate all functions of the receiver. Insert two AAA batteries (not included) into the battery compartment, observing polarity.

Key functions include:

- **POWER:** Turns the receiver on/off or to standby.
- **MUTE:** Mutes or restores audio.
- **0-9:** Numeric buttons for direct channel selection.
- **CH+/CH-:** Changes channels up or down.
- **VOL+/VOL-:** Adjusts volume.
- **MENU:** Accesses the main menu.
- **OK:** Confirms selections.
- **EXIT:** Exits current menu or screen.
- **INFO:** Displays channel information.
- **EPG:** Electronic Program Guide.
- **REC:** Starts recording (requires USB storage).
- **FAV:** Accesses favorite channel list.
- **AUDIO:** Selects audio track.
- **TEXT:** Teletext function.
- **LIST:** Displays channel list.

5. SETUP

Follow these steps to set up your Nedis DVB-S2 HD Receiver:

1. **Connect to TV:**

For best picture quality, connect an HDMI cable (not included) from the receiver's **HD-OUT** port to an HDMI input on your television. Alternatively, use the supplied AV cable to connect the receiver's **AV** ports to the corresponding AV inputs on your TV.

2. Connect to Satellite Dish:

Connect the coaxial cable from your satellite dish LNB to the **LNB-IN** port on the rear of the receiver.

3. Connect Power:

Connect the supplied 12V DC power adapter to the **DC 12V-IN** port on the receiver, then plug the adapter into a wall outlet.

4. Initial Scan:

Turn on your TV and select the correct HDMI or AV input. Power on the receiver using the front panel button or remote control. The receiver will likely guide you through an initial setup wizard. Follow the on-screen instructions to select your language, country, and perform a channel scan to find available satellite channels.

5. Wi-Fi Connection (Optional):

If you wish to use Wi-Fi features, connect a compatible USB Wi-Fi adapter (not included) to one of the USB ports. Navigate to the network settings in the receiver's menu to configure your Wi-Fi connection.

6. OPERATING INSTRUCTIONS

Once setup is complete, you can begin using your receiver:

- **Power On/Off:** Press the **POWER** button on the remote or front panel.
- **Channel Selection:** Use the **CH+/CH-** buttons or enter the channel number directly using the numeric keypad.
- **Volume Adjustment:** Use the **VOL+/VOL-** buttons.
- **Main Menu:** Press the **MENU** button to access settings, channel management, media player, and other features. Use the arrow keys to navigate and **OK** to confirm.
- **Electronic Program Guide (EPG):** Press **EPG** to view program schedules.
- **Media Playback:** Insert a USB storage device into a USB port. Navigate to the media player section in the menu to play supported audio (Dolby Digital, DTS, AAC, MP3, PCM) and video files.
- **Recording:** With a USB storage device connected, press **REC** to start recording the current program.

7. MAINTENANCE

Proper maintenance ensures the longevity of your receiver:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the receiver. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Keep the ventilation openings clear of dust and obstructions to prevent overheating.
- **Storage:** If storing the receiver for an extended period, disconnect it from power and store it in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty.	Check power adapter connection to receiver and wall outlet. Ensure outlet is functional.

Problem	Possible Cause	Solution
No signal / "No Signal" message	Satellite cable disconnected or dish misalignment. Incorrect channel scan settings.	Check LNB-IN cable connection. Verify satellite dish alignment. Perform a new channel scan.
No picture / No sound	Incorrect TV input selected. HDMI/AV cable loose or faulty.	Select the correct HDMI or AV input on your TV. Check cable connections.
Remote control not working	Batteries are dead or inserted incorrectly. Obstruction between remote and receiver.	Replace batteries, ensuring correct polarity. Remove any obstructions. Point remote directly at the receiver.

9. SPECIFICATIONS

Feature	Detail
Model Number	DVBS2265BK
Compatibility	DVB-S/S2, MPEG-2/4 H.264, H.265
Video Output	HDMI, AV (RCA)
Audio Output Mode	Stereo
Supported Audio Formats	Dolby Digital, DTS, AAC, MP3, PCM
USB Ports	2
Connectivity Technology	Wi-Fi (via optional USB adapter), Ethernet
Power Input	12 Volt DC
Color	Black
Compatible Devices	Television

10. WARRANTY AND SUPPORT

Nedis products are manufactured to high quality standards and are covered by a warranty period as specified in the terms and conditions of sale. This warranty does not cover damage caused by improper use, negligence, or unauthorized modifications.

For technical support or warranty claims, please contact your retailer or the Nedis customer service department. Contact information can typically be found on the Nedis website or product packaging.