

## Easytry123 HT-S5405 Series Compatible Remote

# Easytry123 Replacement Remote Control User Manual

For ONKYO HT-S5405, HT-S5405B, HT-R548, HT-RC560, HT-RC180, HT-S3200, HT-RC160, HT-S7200 DVD Home Theater Systems

## 1. INTRODUCTION

This document serves as a comprehensive guide for the Easytry123 replacement remote control. This remote is designed to function with specific ONKYO Home Theater System models, providing essential control over your audio and video components. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be fully supported.

Before use, please verify that your ONKYO system model is listed in the compatible models section to ensure proper functionality.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control showing the battery compartment for AAA batteries.

## 2.2 Initial Use

This replacement remote control operates via infrared (IR) technology and typically does not require any complex programming or pairing. Once batteries are installed, it should be ready for immediate use with compatible ONKYO models.

- Point the remote control directly at your ONKYO Home Theater System's IR receiver.
- Ensure there are no obstructions between the remote and the system.

## 3. OPERATING INSTRUCTIONS

The remote control features a standard layout for common functions. Below is a general overview of key buttons and their typical uses:



Figure 3.1: Front view of the Easytry123 replacement remote control.

- **ON/STANDBY:** Powers the system on or off.
- **INPUT / SELECTOR:** Cycles through available input sources (e.g., DVD, CD, TV, AUX).
- **VOLUME +/-:** Adjusts the master volume level.
- **MUTE:** Temporarily silences the audio output.
- **Navigation Pad (Up/Down/Left/Right/ENTER):** Used for menu navigation and selection.
- **RETURN:** Returns to the previous menu or screen.
- **Playback Controls (PLAY, PAUSE, STOP, SKIP, REWIND, FAST FORWARD):** Controls media playback for compatible devices.
- **Number Pad (0-9):** For direct input of channel numbers or track selection.
- **DISPLAY:** Changes the information displayed on the system's screen.
- **LISTENING MODE:** Cycles through various audio listening modes (e.g., Stereo, Surround).

*Note:* As a replacement remote, some specialized functions or buttons present on your original ONKYO remote may not be replicated or fully functional. Refer to your ONKYO system's original manual for detailed information on specific features.

## 4. MAINTENANCE

---

### 4.1 Battery Replacement

Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

### 4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

### 4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there is a clear line of sight between the remote's IR emitter and the system's IR receiver.
- Make sure the remote is pointed directly at the system.

- **Certain functions not working:**

- This remote is a replacement and may not support all functions of your original ONKYO remote. Refer to the product description and your ONKYO system's manual for expected functionality.
- Verify that your ONKYO model is listed as compatible with this remote.

- **Interference:**

- Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with IR signals. Try operating the remote in a different lighting condition.

## 6. SPECIFICATIONS

---

Feature	Description
Brand	Easytry123
Compatible Devices	ONKYO HT-S5405, HT-S5405B, HT-R548, HT-RC560, HT-RC180, HT-S3200, HT-RC160, HT-S7200 DVD Home Theater Systems
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic
Power Source	2 x AAA Batteries (not included)

## 7. WARRANTY AND SUPPORT

This product is manufactured by Easytry123. For information regarding returns or specific product support, please refer to the return policy of your place of purchase. Typically, a 30-day return policy for refund/replacement is offered by the seller.

For any issues not covered in this manual, please contact the seller or manufacturer directly through the platform where the purchase was made.

---

© 2024 Easytry123. All rights reserved.