

DIGIQUEST Easy Plus

DIGIQUEST Universal Easy Plus Remote Control

Model: Easy Plus | **Brand:** DIGIQUEST

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your DIGIQUEST Universal Easy Plus Remote Control. Designed for simplicity and ease of use, this remote features large, intuitive buttons, making it suitable for all users, including those in hotel or hospital environments. Please read this manual carefully before using the product.

PRODUCT FEATURES

- Simple Configuration
- Large, Intuitive Buttons for enhanced visibility
- Bright LED indicator
- Dedicated Teletext Button
- Equipped exclusively with main functions to avoid complexity
- Compatible with all TV brands

PACKAGE CONTENTS

- 1 x DIGIQUEST Universal Easy Plus Remote Control
- 1 x User Manual (this document)

SETUP

1. Battery Installation

The DIGIQUEST Universal Easy Plus remote control requires 2 x 1.5V LR03 - AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.



Image: The open battery compartment of the remote control, showing slots for two AAA batteries.

2. Programming the Remote Control

The remote offers four simple methods to configure it quickly with your TV. Choose the method that best suits your needs.

1. **Direct Code Entry:**

Enter the corresponding code for your TV brand directly. A list of over 10,000 available codes is typically provided in the included code booklet (if applicable) or can be found online on the DIGIQUEST support website.

2. **Automatic Search:**

The remote can automatically search for the correct code for your TV. Follow the instructions in the code booklet for initiating an automatic search. This process typically involves holding down a specific button until the TV responds.

3. **Manual Search:**

If automatic search is unsuccessful, you can perform a manual search. This involves cycling through codes one by one until your TV responds. Refer to the code booklet for detailed steps.

4. **Learning Function (from original remote):**

If you have your original TV remote control, the Easy Plus remote can learn functions directly from it. This method allows you to customize button assignments. Place the two remotes face-to-face and follow the learning procedure outlined in the code booklet.



Image: Front view of the DIGIQUEST Universal Easy Plus remote control, showcasing its large buttons.

OPERATING INSTRUCTIONS

Once programmed, the remote control is ready for use. Below is a description of the main buttons and their functions:



Image: A close-up view of the large, clearly labeled buttons on the remote control.

Button	Function
Power (Red Button)	Turns the TV On or Off.
TV	Selects the TV input source.
Mute (Speaker with X)	Mutes or unmutes the TV sound.
TEXT	Activates or deactivates Teletext mode.
Volume Up (+)	Increases the TV volume.
Volume Down (-)	Decreases the TV volume.
Channel Up (P^)	Changes to the next channel.
Channel Down (Pv)	Changes to the previous channel.
Number Buttons (0-9)	Directly select TV channels.
INFO	Displays program information (if available).
AV	Switches between available audio/video input sources.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these may damage the surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

- **Remote not working:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Re-program the remote control using one of the methods described in the "Programming the Remote Control" section.
- **Some buttons not working:**
 - The remote might not be fully compatible with all functions of your specific TV model. Try the learning function if available.
 - Ensure the remote is correctly programmed for your TV. Try re-programming with a different code if available for your TV brand.
- **Remote range is poor:**
 - Replace the batteries.
 - Ensure you are within the maximum operating range (up to 10 meters) and have a clear line of sight to the TV.

SPECIFICATIONS

Feature	Detail
Brand	DIGIQUEST
Model Name	Easy Plus
Color	Black
Connectivity Technology	Infrared
Special Feature	Universal compatibility
Compatible Devices	Television
Maximum Number of Supported Devices	1

Feature	Detail
Controller Type	Button control
Maximum Range	10 Meters
Power Source	2 x AAA 1.5V batteries (not included)
Manufacturer	DIGIQUEST
Country of Origin	China



Ben 4 semplici modalità per configurare velocemente il tuo nuovo telecomando,
scegli tra:



- Inserisci direttamente il codice corrispondente alla marca del tuo apparecchio, oltre 10.000 codici disponibili.
- Esegui una ricerca automatica.
- Esegui la ricerca manuale.
- Utilizza la funzione Learnig apprendimento da originale).

Ideale anche per
strutture
alberghiere,
ospedaliere, ecc.








Image: Side view of the remote control, illustrating its dimensions and ergonomic design.


WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided product details. Please refer to the product packaging or the official DIGIQUEST website for the most up-to-date warranty information and support contacts.

For further assistance, you may visit the [DIGIQUEST Brand Store](#).

Related Documents - Easy Plus

	<p>DIGIQuest VOICE 1.0 Digital Terrestrial Receiver User Manual</p> <p>User manual for the DIGIQuest VOICE 1.0 digital terrestrial receiver, covering setup, operation, features, and troubleshooting. Includes safety precautions and technical specifications.</p>
	<p>MDD Mediaplayer: Full HD Digital Terrestrial Receiver and Media Player</p> <p>Discover the MDD Mediaplayer, a Full HD digital terrestrial receiver with a 10-bit chipset and multimedia player capabilities. Watch movies, listen to music, and view photos on your TV. Features include USB playback, EPG, parental control, and a 12V input for mobile use.</p>
	<p>Manuale Utente Ricevitore Digitale Terrestre DIGIQuest VOICE 1.0</p> <p>Scopri il ricevitore digitale terrestre DIGIQuest VOICE 1.0. Questa guida utente completa offre istruzioni dettagliate per l'installazione, la configurazione, le funzionalità avanzate e la risoluzione dei problemi, garantendo la migliore esperienza di visione.</p>
	<p>Manuale Utente Macchina da Caffè DIGIQuest COFFY (HOME0035)</p> <p>Guida completa per la macchina da caffè DIGIQuest COFFY (modello HOME0035). Include istruzioni dettagliate per l'uso sicuro, la preparazione del caffè, la pulizia, la manutenzione e la risoluzione dei problemi.</p>
	<p>DIGIQuest Guida Rapida: Collegamenti e Programmazione Telecomando</p> <p>Questa guida rapida fornisce istruzioni essenziali per l'installazione e la configurazione del ricevitore TV digitale DIGIQuest, inclusi collegamenti, posizionamento del sensore e programmazione del telecomando multifunzione per diverse marche di TV.</p>



DECODER DIGITALE TERRESTRE FULL HD
FULL HD DIGITAL TERRESTRAL RECEIVER
DECODEUR DIGITAL TERRESTRE FULL HD

DIGIQUEST SH5
AVR1000208


2021

MANUALE UTENTE
USER MANUAL
MANUAL DEL USUARIO

DIGIQUEST SH5 - Manuale Utente Ricevitore Digitale Terrestre Full HD

Manuale completo per il DIGIQUEST SH5, un ricevitore digitale terrestre Full HD. Guida all'installazione, configurazione, uso dei menu, funzioni multimediali, risoluzione problemi e specifiche tecniche.

Documents - DIGIQUEST – Easy Plus

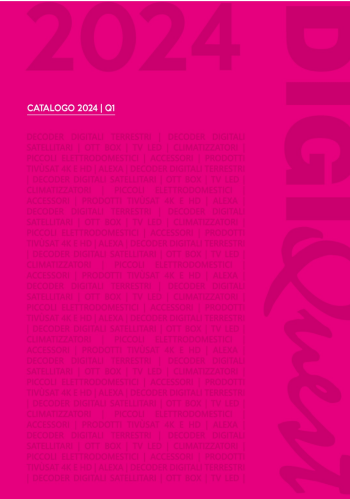


[\[pdf\]](#) Accessories Catalog

BOZZA Catalogo 2024 DAF5mBua3eo BAFd61 nBIU paola urbinati Digiquest it DIGIQUESTCAT2024Q1 size 73529300 digiquest ecom dms BSTYLE CATALOGO Privacy Home ZDQG shop |||

CATALOGO PRODOTTI tivsat NAGRA MERLIN PRODOTTI tivsat NAGRA TIGER DIGIQUEST ALEXA DECODER DIGITAL ... le impostazioni in assenza di batterie.

ART. TLC143 EAN: 8032622989670 SCATOLA CON GANCI UNIVERSAL **EASY PLUS** Telecomando con tasti grandi, leggero e di facile utilizzo, dotato esclusivamente delle fu...

lang:it score:16 filesize: 70.12 M page_count: 77 document date: 2024-03-18

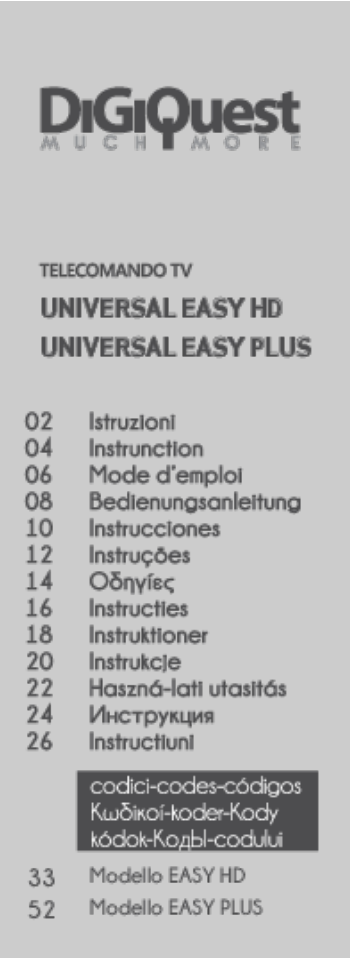

[\[pdf\]](#)

UNIVERSAL EASY HD PLUS 33 52 000000000000000015295 ART ICOL TLC113 size 8922087 shop digiquest it ecom dms DQSOL |||

UNIVERSAL EASY HD UNIVERSAL **EASY PLUS** 33 Modello EASY HD 52 Modello **EASY PLUS** Inserimento delle batterie Sollevare il coperchio del vano batterie ed inserire 2 batterie AAA ministilo da 1,5V , rispettando la polarit /-. Programmazione diretta Cercare la marca della TV nella tabella riportata sul...

lang:it score:12 filesize: 8.51 M page_count: 82 document date: 2024-05-31

