

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› [Easytry123 Replacement Remote Control Instruction Manual for Integra A/V Receivers](#)

Easytry123 Easytry7606

Easytry123 Replacement Remote Control Instruction Manual

For Integra DTR-30.2, DTR-20.2, DTR-40.2, DTR-80.2, DTR-70.2, DTR-40.5 A/V Receivers

INTRODUCTION

This manual provides essential instructions for the Easytry123 replacement remote control, designed for use with various Integra A/V Receiver models, including DTR-30.2, DTR-20.2, RC-770M, DTR-40.2, RC-772M, DTR-80.2, DTR-70.2, RC-809M, RC-869M, and DTR-40.5. This remote is a direct replacement and aims to provide core functionality for your compatible receiver.

Please note that as a replacement item, some advanced or specific functions of your original remote may not be fully replicated. Ensure your receiver model is listed for optimal compatibility.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow the steps below to install them correctly:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image showing the back of the remote control with the battery cover removed, revealing two AAA battery slots for installation.



Image showing the back of the remote control with the battery cover securely closed after installation.

OPERATING INSTRUCTIONS

This replacement remote control is designed for ease of use. Once batteries are installed, it should function directly with your compatible Integra A/V Receiver without additional programming.

Basic Functions:

- Power On/Off:** Use the **POWER** button to turn your receiver on or off.
- Volume Control:** Adjust the audio level using the **VOLUME UP** and **VOLUME DOWN** buttons.
- Input Selection:** Cycle through available input sources (e.g., HDMI 1, CD, Tuner) using the dedicated input buttons or an **INPUT SELECTOR** button.
- Mute:** Temporarily silence the audio output with the **MUTE** button.
- Navigation:** Use the directional arrow buttons and **ENTER/OK** button for menu navigation on your receiver's display.



Image showing the front of the Easytry123 replacement remote control, highlighting the layout of various function buttons.

For specific advanced functions or detailed receiver settings, please refer to your Integra A/V Receiver's original instruction manual.

MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, consider the following:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and your A/V receiver's infrared sensor.
 - Make sure you are within the effective range of the receiver.
- **Certain Functions Not Working:**
 - As a replacement remote, it may not support all advanced or specific functions of your original Integra remote. This is normal for universal or replacement units.
 - Verify that your Integra A/V Receiver model is explicitly listed as compatible with this remote.
- **Receiver Not Responding to Any Command:**
 - Ensure your receiver is powered on.
 - Try manually operating your receiver to confirm it is functioning correctly.

SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Model Number	Easytry7606
Compatible Devices	Integra A/V Receiver (DTR-30.2, DTR-20.2, RC-770M, DTR-40.2, RC-772M, DTR-80.2, DTR-70.2, RC-809M, RC-869M, DTR-40.5)
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	Ergonomic design
Item Weight	0.01 ounces
Package Dimensions	3 x 2 x 1 inches

WARRANTY AND SUPPORT

This product is a replacement remote control. For any issues or support inquiries, please contact the seller directly through your purchase platform. Specific warranty details, if any, would be provided at the point of purchase by the seller.

© 2026 Easytry123. All rights reserved.