

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA TISKEN Suction Cup Hook (Model ik3104) Instruction Manual

IKEA ik3104

IKEA TISKEN Suction Cup Hook (Model ik3104) Instruction Manual

Your guide to installation, use, and care.

1. PRODUCT OVERVIEW

The IKEA TISKEN Suction Cup Hook provides a practical and drill-free solution for organizing items in your home. Designed for smooth surfaces, this hook offers strong adhesion and easy removal without leaving marks.

Key Features:

- Tool-free assembly: Attaches with a simple push.
- Strong suction: Securely grips smooth surfaces like glass and tiles.
- Damage-free removal: Can be removed without leaving holes or marks.
- Weight capacity: Each hook holds up to 3 kg.



Image 1.1: A set of four IKEA TISKEN suction cup hooks in various colors.

2. SETUP AND INSTALLATION

Follow these steps to properly install your TISKEN suction cup hook:

1. **Choose a Suitable Surface:** The TISKEN hook is designed for smooth, non-porous surfaces such as glass, mirrors, and glazed tiles. It will not adhere effectively to textured, porous, or uneven surfaces like painted walls, wallpaper, or unfinished wood.
2. **Clean the Surface:** Thoroughly clean the chosen surface with a suitable cleaner and dry it completely. Ensure there is no dust, dirt, grease, or moisture, as these can prevent proper suction.



Image 2.1: Cleaning the wall surface before installation.

3. **Attach the Hook:** Position the suction cup hook on the clean, dry surface. Press firmly on the center of the suction cup until you feel it secure. This action expels air from underneath the cup, creating a vacuum seal.



Image 2.2: Pressing the suction cup firmly to attach the hook.

4. **Verify Security:** Gently pull on the hook to confirm it is securely attached and does not slide or detach.



Image 2.3: TISKEN hooks installed on a tiled wall, demonstrating usage.

3. OPERATION AND USAGE

Once installed, the TISKEN hook is ready for use. It is ideal for hanging various lightweight items in bathrooms, kitchens, or other areas with suitable surfaces.

- Hang items such as hand towels, washcloths, small utensils, or lightweight accessories.
- Do not exceed the maximum weight capacity of 3 kg per hook to ensure continued adhesion and prevent damage.
- Regularly check the hook's stability, especially after hanging items, to ensure it remains securely attached.



4. MAINTENANCE

To maintain the appearance and functionality of your TISKEN hook:

- **Cleaning:** Wipe the hook and suction cup with a soft cloth dampened with water or a mild, non-abrasive cleaning solution. Dry thoroughly. Avoid harsh chemicals or abrasive scrubbers, which can damage the plastic or the suction cup material.
- **Re-application:** If the hook's grip weakens over time, remove it, clean both the suction cup and the mounting surface, and re-apply following the installation steps.

5. REMOVAL

To remove the TISKEN suction cup hook without damaging the surface:

1. **Insert a Thin Object:** Carefully insert a credit card or a similar thin, rigid object between the edge of the suction cup and the wall surface.
2. **Break the Seal:** Gently slide the object around the perimeter of the suction cup. This will allow air to enter and break the vacuum seal, releasing the hook.
3. **Lift Off:** Once the seal is broken, the hook can be easily lifted off the surface. This method ensures no residue, holes, or marks are left behind.



Image 5.1: Using a credit card to safely remove the suction cup hook.

6. TROUBLESHOOTING

If you encounter issues with your TISKEN suction cup hook, consider the following solutions:

- **Hook does not stick or falls off:**

- Ensure the mounting surface is perfectly smooth, clean, and dry. Suction cups require a non-porous, airtight surface.
 - Clean both the surface and the suction cup thoroughly with soap and water, then dry completely before re-application.
 - Press firmly on the suction cup during installation to expel all air and create a strong vacuum seal.
 - Verify that the weight of the items hung does not exceed the 3 kg limit.
- **Difficulty removing the hook:**
 - Use a thin, flat object (like a credit card) to carefully slide under the edge of the suction cup to break the vacuum seal. Do not pull forcefully, as this may damage the hook or the surface.

7. SPECIFICATIONS

Attribute	Detail
Brand	IKEA
Model Number	ik3104
Material	Polycarbonate plastic
Mounting Type	Wall Mount (Suction Cup)
Weight Limit	3 Kilograms
Recommended Surfaces	Glass, Tile
Product Dimensions (approx.)	8.27 x 5.51 x 1.57 inches (packaging)
Item Weight (approx.)	7.4 ounces (for the set)
Color	Multicolor

8. WARRANTY AND SUPPORT

Specific warranty information and direct support contacts are not detailed in the provided product data. For any warranty claims, product support, or further assistance, please refer to your original purchase receipt or contact IKEA customer service directly through their official website or local store.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question