

WallarGe B07SKTFBGN

WallarGe Pendulum Wall Clock Instruction Manual

Model: B07SKTFBGN

Brand: WallarGe

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your WallarGe Pendulum Wall Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

The WallarGe Pendulum Wall Clock features a classic design with a quartz movement, hourly music chimes, and a decorative pendulum. It is designed for indoor use and operates on batteries.

PACKAGE CONTENTS

- WallarGe Pendulum Wall Clock
- AA Battery (for quartz clock)
- C Size Batteries (for chime)
- Wall Hook
- Instruction Manual (this document)



Image: Rear view of the clock, highlighting the battery compartments for the quartz movement and chime, along with the chime controls and hanging hole.

SETUP INSTRUCTIONS

1. Install Batteries:

- Open the battery cover on the back of the clock.
- Insert one AA battery into the compartment designated for the quartz clock. Ensure correct polarity (+/-).
- Insert two C size batteries into the compartment designated for the chime. Ensure correct polarity (+/-).

2. Release Pendulum:

- Locate the foam rubber protective case or stopper securing the pendulum during shipping. Carefully remove it.
- Gently shake the clock to activate the pendulum. It should swing freely.

3. Set Time:

- Use the time knob located on the back of the clock to adjust the hands to the correct time. Turn

the knob clockwise until the desired time is set.

4. Mounting:

- Hang the clock on a wall using the provided wall hook. Ensure the clock is hung perpendicularly to the ground for proper pendulum operation.

Your browser does not support the video tag.

Video: This video demonstrates the installation process, including battery insertion and pendulum activation. (Source: Merchant Video)

OPERATING INSTRUCTIONS

Chime Functionality

The WallarGe Pendulum Wall Clock features an hourly chime with 12 different melodies. The chime will play a different melody at the top of each hour.

- **Chime ON/OFF Switch:** Locate the ON/OFF switch on the back of the clock to enable or disable the hourly chime.
- **Volume Control:** Adjust the volume of the chime using the MIN/MAX volume knob on the back of the clock.
- **Light Sensor:** The clock is equipped with a built-in light control sensor (located under the number 6 on the clock face). This sensor automatically mutes the chime when the room is dark, preventing chimes during nighttime hours.



Image: Front view of the clock, indicating its dimensions and the location of the built-in light control sensor.



Image: The clock face with a list of the 12 melodies played hourly, including "Waltz of the Flowers" and "Twinkle, Twinkle, Little Star."

Your browser does not support the video tag.

Video: A short demonstration of the WallarGe Music Chime Wall Clock with Pendulum, showcasing its hourly melodies.
(Source: WallarGe Direct)

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace all batteries annually, or when the clock hands slow down or the chime becomes faint or stops. Always replace all batteries at the same time.
- **Pendulum Care:** Ensure the pendulum swings freely. Avoid obstructing its movement.
- **Placement:** Place the clock on a stable surface or hang it securely on a wall. Avoid direct sunlight or extreme temperature changes, which can affect accuracy and material integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not keeping accurate time or stops.	• Low or dead AA battery. • Clock mechanism obstruction.	• Replace the AA battery with a new one. • Ensure hands are not bent or touching each other or the clock face.
Chime not sounding.	• Low or dead C size batteries. • Chime switch is OFF. • Volume is set to MIN. • Room is dark (light sensor activated).	• Replace C size batteries with new ones. • Ensure chime switch is set to ON. • Adjust volume knob towards MAX. • Ensure the room has sufficient light during desired chime hours.
Pendulum not swinging.	• Protective foam not removed. • Clock not hung level. • Pendulum mechanism stuck.	• Remove all protective packaging from the pendulum. • Ensure the clock is hung straight and level on the wall. • Gently shake the clock to initiate pendulum movement.

SPECIFICATIONS

- **Brand:** WallarGe
- **Model:** B07SKTFBGN
- **Dimensions:** 11.5"W x 19"H
- **Weight:** 4.34 pounds
- **Power Source:** Battery Powered (1x AA for clock, 2x C for chime)
- **Display Type:** Analog
- **Clock Form:** Pendulum
- **Material:** Glass, Plastic (imitated wood frame)
- **Special Feature:** Music Chimes, Light Sensor
- **Indoor/Outdoor Usage:** Indoor

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact WallarGe customer service directly. Contact details can typically be found on the product packaging or the official WallarGe website.