

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Inalsa](#) /
- › [INALSA MasterChef 10BK 10L Oven Toaster Griller Instruction Manual](#)

## Inalsa MASTERCHEF 10BK

# INALSA MasterChef 10BK 10L Oven Toaster Griller Instruction Manual

Model: MASTERCHEF 10BK | Brand: Inalsa

<a href="#">Introduction</a>	<a href="#">Safety Instructions</a>	<a href="#">What's in the Box</a>	<a href="#">Product Features</a>	<a href="#">Setup</a>	<a href="#">Operation</a>
	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty &amp; Support</a>	

## 1. INTRODUCTION

Thank you for choosing the INALSA MasterChef 10BK 10L Oven Toaster Griller. This versatile appliance is designed to simplify your cooking experience, offering functions for baking, toasting, and grilling. Please read this manual carefully before use to ensure safe and efficient operation.



Image: The INALSA MasterChef 10BK 10L Oven Toaster Griller, a compact black and silver appliance with a transparent door, ideal for small kitchens.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or gloves when handling hot materials.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any other materials not specifically designed for oven use.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

### 3. WHAT'S IN THE BOX

Your INALSA MasterChef 10BK Oven Toaster Griller comes with the following components:

- Main Unit (Oven Toaster Griller)
- Aluminium Anodized Baking Pan
- Cromed Wire Rack (Grill Tray)
- Hand Glove
- Instruction cum Warranty Card



Image: A visual representation of the included accessories: a baking pan, a grill tray, and a tray handle, designed to help you prepare various dishes.

### 4. PRODUCT FEATURES

- **Compact 10L Capacity:** Perfect for small families (1-2 members), ideal for baking cupcakes, toasting bread, grilling sandwiches, and preparing quick snacks.
- **800W Fast & Even Heating:** Equipped with 800 Watts of power for efficient heating, ensuring quick meals without excessive electricity consumption.
- **Adjustable Temperature Control:** Customize your cooking with precise temperature control from 100°C to 250°C.
- **60-Minute Timer with Auto Shut-off:** Features a 60-minute timer with an auto shut-off function for safe and hassle-free operation, preventing overcooking. Includes a "Stay On" function for longer tasks.
- **Multiple Cooking Functions:** Versatile for baking, toasting, grilling, and roasting. Prepare mini pizzas, crispy toasts, grilled sandwiches, cookies, and small cakes.
- **Space-Saving & User-Friendly Design:** Compact and lightweight body fits easily on kitchen counters. Features easy-to-use control knobs, a heat-resistant body, and stable anti-skid feet.
- **See-Through Glass Door:** The resilient, see-through door is connected to the baking rack, allowing you to smoothly and safely pull the rack toward you as the door is opened.
- **Double Heating Elements:** High-efficiency heating elements positioned on the top and bottom of the oven ensure even toasting, baking, browning, and reheating.
- **Easy Clean:** Keep the toaster oven clean with the in-built crumb tray.



Image: The INALSA MasterChef 10BK demonstrating its 3-in-1 versatility for various dishes like cookies, barbecue, bread, burgers, fish, cakes, pizzas, and chicken.

## 5. SETUP GUIDE

1. **Unpack the Appliance:** Carefully remove the oven toaster griller and all accessories from its packaging. Retain the packaging for future storage or transport.
2. **Remove Packing Materials:** Remove any protective films, stickers, or packing materials from inside and outside the appliance.
3. **Clean Before First Use:** Wipe the exterior with a damp cloth. Wash the baking pan, grill rack, and tray

handle in warm, soapy water, then rinse and dry thoroughly.

4. **Placement:** Place the appliance on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the oven (at least 10-15 cm clearance on all sides). Do not place it near flammable materials.
5. **First Use (Burn-off):** Before cooking food, operate the oven empty for approximately 15 minutes at the maximum temperature setting (250°C) with the timer set to "Stay On". This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
6. **Power Connection:** Ensure the power cord is securely plugged into a grounded electrical outlet.

## 6. OPERATING INSTRUCTIONS

The INALSA MasterChef 10BK features three control knobs for easy operation:



**One Appliance, Endless Dishes  
From Crisp Toast to Perfect Pizza.**

Image: Close-up of the control panel, highlighting the temperature control knob (100°C - 250°C), the 60-minute timer knob with "Stay On" function, and the power indicator light.

### 6.1. Temperature Control Knob

This knob allows you to select the desired cooking temperature from 100°C to 250°C. Turn the knob clockwise to increase the temperature.

### 6.2. Function Selector Knob

This knob allows you to choose the heating elements to be used for cooking:

- **Top Heating:** Activates the upper heating elements, ideal for grilling or browning.
- **Bottom Heating:** Activates the lower heating elements, suitable for baking or reheating.
- **Both Top & Bottom Heating:** Activates both upper and lower heating elements for even cooking, perfect for most baking and roasting tasks.

### 6.3. Timer Knob

This knob sets the cooking time up to 60 minutes. Turn the knob clockwise to set the desired time. The oven

will automatically shut off and a bell will ring when the set time has elapsed.

- **"Stay On" Function:** For longer cooking tasks, turn the timer knob counter-clockwise past the "OFF" position to the "Stay On" setting. The oven will remain on until manually turned off.

## 6.4. General Cooking Steps

1. Place the food on the appropriate accessory (baking pan or grill rack) and slide it into the desired rack position inside the oven.
2. Close the oven door securely.
3. Set the **Temperature Control Knob** to the desired temperature.
4. Select the appropriate cooking function using the **Function Selector Knob**.
5. Set the **Timer Knob** to the desired cooking time. The power indicator light will illuminate.
6. When cooking is complete, the timer will ring, and the oven will turn off. If using the "Stay On" function, manually turn the timer knob to "OFF".
7. Carefully remove the cooked food using the tray handle and oven mitts.

Your browser does not support the video tag.

Video: A short demonstration of the INALSA MasterChef 10BK Oven Toaster Griller, showcasing its features like temperature and timer controls, and the use of accessories for cooking various dishes.

## 7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven toaster griller.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
2. **Clean Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Clean Interior:** The interior walls can be wiped with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaning solution is wiped away.
4. **Crumb Tray:** The in-built crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards. Slide out the crumb tray, discard crumbs, and wash it in warm, soapy water. Rinse and dry thoroughly before replacing.
5. **Accessories:** Wash the baking pan, grill rack, and tray handle in warm, soapy water. Rinse and dry completely. These are not dishwasher safe.
6. **Do Not Immerse:** Never immerse the main unit of the oven toaster griller in water or any other liquid.

## 8. TROUBLESHOOTING

If you encounter any issues with your INALSA MasterChef 10BK, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged in. Check if the outlet is working. Set the timer knob to the desired time or "Stay On" position.

Problem	Possible Cause	Solution
Food is not cooking evenly.	Incorrect rack position; uneven food placement; oven not preheated.	Adjust rack position for optimal heat distribution. Arrange food evenly on the tray. Always preheat the oven for 5-10 minutes before placing food inside.
Excessive smoke or burning smell.	Food residue on heating elements or crumb tray; excessive grease.	Unplug the oven and allow it to cool. Clean the heating elements and crumb tray thoroughly. Avoid excessive grease buildup.
Timer bell does not ring.	Timer knob not set correctly.	Ensure the timer knob is turned past the 10-minute mark to activate the bell mechanism.

If the problem persists after trying these solutions, please contact INALSA customer support.

## 9. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Inalsa
Model Name	MASTERCHEF 10BK
Capacity	10 Litres
Power	800 Watts
Colour	Black/Silver
Product Dimensions (D x W x H)	26.3D x 34.3W x 21.3H Centimeters
Special Feature	Temperature Control, Timer
Control Type	Knob
Door Style	Dropdown Door
Finish Type	Powder Coated Finish
Door Material Type	Tempered Glass
Power Source	Corded Electric
Temperature Range	100-250 Degrees Celsius
Item Weight	2 kg 500 g
Country of Origin	China



## Power That Performs 800W Heating

Fast, Even Cooking with high-efficiency heat output for perfect results every time.

Image: A visual guide comparing different INALSA Oven Toaster Griller sizes, indicating that 10L-19L models are suitable for 2-3 members, while 24L-46L models are for families of more than 3 members.

## 10. WARRANTY AND SUPPORT

Your INALSA MasterChef 10BK Oven Toaster Griller comes with a **2-Year Warranty** from the date of purchase. Please refer to the included "Instruction cum Warranty Card" for detailed terms and conditions. For any product-related queries, service requests, or technical support, please contact INALSA customer service. Contact details can be found on your warranty card or the official INALSA website.

Always ensure you have your purchase receipt and product model number (MASTERCHEF 10BK) ready when contacting support.