

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sniper](#) /
- › [Sniper 22-inch HD Travel TV User Manual - Model SN-2203](#)

Sniper SN-2203

Sniper 22-inch HD Travel TV User Manual

Model: SN-2203

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Sniper 22-inch HD Travel TV. This versatile television is designed for use in various environments, including caravans, motorhomes, and boats, offering integrated DVB-T2 Freeview, DVB-S2 satellite reception, and a built-in DVD player. It supports multiple power inputs (12V, 24V, and Mains) and includes Bluetooth audio connectivity and USB PVR functionality.



Figure 1: Front view of the Sniper 22-inch HD Travel TV. This image displays the front of the Sniper 22-inch HD Travel TV, highlighting its compact design and screen. It features a black bezel and the 'SNIPER' logo at the bottom center. The screen shows a vibrant image, featuring a close-up of a woman's eye with colorful makeup. The screen also displays technical specifications and logos for various services and features.

demonstrating its display capabilities.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items are present: TV unit, remote control, 12V/24V cigarette lighter cable, mains power adapter, and stand. Inspect the TV for any signs of damage. If any damage is found, do not proceed with setup and contact your retailer.

2. Attaching the Stand or Wall Mounting

The TV comes with a removable stand for tabletop use. To attach the stand, align it with the mounting points on the bottom of the TV and secure it with the provided screws. For wall mounting, the TV supports a VESA 100 x 100 mm bracket (not included). Ensure the wall mount is securely installed according to its manufacturer's instructions before attaching the TV.



Figure 2: Sniper 22-inch HD Travel TV with dimensions labeled. This image provides a clear view of the Sniper 22-inch HD Travel TV with its key dimensions (width, height, depth) explicitly labeled in millimeters. This is useful for planning installation and understanding the physical footprint of the device.

3. Power Connection

The TV can be powered using three methods:

- **12V/24V DC:** Connect the supplied cigarette lighter cable to the DC input on the TV and to a 12V or 24V power source in your vehicle or boat.
- **Mains (100-240V AC):** Connect the mains power adapter to the AC input on the TV and then plug it into a standard wall outlet.

Ensure the correct power source is used to avoid damage to the unit.

4. Antenna/Satellite Connection

- **Freeview (DVB-T2):** Connect a terrestrial antenna cable to the 'ANT IN' port on the TV.
- **Satellite (DVB-S2):** Connect a satellite dish cable to the 'LNB IN' F-type connector on the TV.

5. Initial Channel Scan

After connecting power and an antenna/satellite, turn on the TV. The first-time setup wizard will guide you through selecting your language, country, and performing an automatic channel scan for both terrestrial (Freeview) and satellite channels. Follow the on-screen prompts.

OPERATING INSTRUCTIONS

1. Basic TV Functions

- **Power:** Press the power button on the remote control or the TV to turn it on/off.
- **Channel Selection:** Use the CH+/- buttons or the numeric keypad on the remote to change channels.
- **Volume Control:** Use the VOL+/- buttons to adjust the volume.
- **Source Selection:** Press the 'SOURCE' button to switch between TV, HDMI, AV, VGA, and Media Player inputs.

2. Integrated DVD/CD Player

Insert a DVD or CD into the disc slot located on the side of the TV. The TV will automatically switch to DVD mode and begin playback. Use the remote control for playback functions such as Play, Pause, Stop, Fast Forward, and Rewind.

3. USB PVR Functionality

To record or pause live TV, connect a USB flash drive or external hard drive (minimum 8GB, formatted to FAT32 or NTFS) to one of the USB ports. Access the PVR menu via the remote control to initiate recording or enable time-shift (pause live TV) functions. Refer to the on-screen guide for detailed PVR settings.

4. Bluetooth Audio Connection

The TV features integrated Bluetooth for connecting external audio devices like soundbars or headphones.

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the TV, navigate to the Bluetooth settings menu.
3. Select 'Scan for Devices' and choose your audio device from the list to pair.



Figure 3: Person using Bluetooth headphones with the Sniper TV. This image illustrates the Bluetooth audio feature of the Sniper TV, showing a person wearing wireless headphones while watching the television. This highlights the ability to connect external Bluetooth audio devices for a personalized listening experience.

5. External Device Connectivity

The TV provides multiple ports for connecting external devices:

- **HDMI (x2):** For high-definition audio and video from devices like gaming consoles or media players.
- **Mini AV Input:** For standard definition audio and video from older devices.
- **Mini YPbPR Input:** For component video input.
- **VGA Input:** For connecting a PC or laptop.
- **USB (x2):** For PVR functions, media playback, and software updates.
- **Headphone Output:** For connecting wired headphones.
- **Coaxial Audio Output:** For connecting to an external audio receiver.

178° viewing angle



505mm

22"

343mm

175mm

Dimensions without stand: 505 x 323 x 52mm (WxHxD)

Figure 4: Sniper TV displaying the WebOS Hub smart TV interface. This image shows the Sniper TV screen displaying the WebOS Hub smart TV interface. It illustrates the user-friendly menu system with various app icons like Netflix, YouTube, and Prime Video, indicating the TV's smart capabilities.

MAINTENANCE

1. Cleaning

Before cleaning, ensure the TV is powered off and unplugged. Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet. For stubborn marks, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the TV's surface.

2. Storage

If storing the TV for an extended period, disconnect all cables and store it in a cool, dry place, preferably in its original

packaging, to protect it from dust and physical damage.

TROUBLESHOOTING

If you encounter issues with your Sniper TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable loose; no power from source.	Check all power connections. Ensure the power source (12V/24V/Mains) is active.
No signal	Antenna/satellite cable loose; incorrect input source; no channels scanned.	Verify antenna/satellite cable connection. Select the correct input source (DVB-T2/DVB-S2). Perform a channel scan.
Poor sound quality	Internal speakers; volume too low.	Adjust volume. Consider connecting external speakers or a soundbar via Bluetooth or headphone output for improved audio.
DVD not playing	Disc inserted incorrectly; disc damaged; TV not in DVD mode.	Ensure disc is inserted correctly with label facing up. Check disc for scratches. Select DVD source.
Bluetooth device not connecting	Device not in pairing mode; TV Bluetooth off; interference.	Ensure the Bluetooth device is in pairing mode. Check TV Bluetooth settings. Move other Bluetooth devices away to reduce interference.
Remote control not working	Batteries depleted; obstruction; remote sensor blocked.	Replace batteries (2 AAA). Ensure no obstructions between remote and TV. Clean TV's remote sensor.

If the problem persists after attempting these solutions, please contact your retailer or Sniper customer support for further assistance.

SPECIFICATIONS

Feature	Specification
Model Number	SN-2203
Screen Size	22 Inches
Display Technology	LED
Resolution	1920 x 1080 (Full HD)
Aspect Ratio	16:9
Contrast Ratio	1000:1
Brightness	250 Nit
Viewing Angle	178 degrees
Tuners	Integrated DVB-T2 (Freeview), DVB-S2 (Satellite)
Integrated Features	DVD/CD Player, Bluetooth Audio, USB PVR

Feature	Specification
Connectivity	2x HDMI, 2x USB, Mini AV In, Mini YPbPR In, VGA In, Headphone Out, Coaxial Audio Out, CI Slot
Power Input	12V DC, 24V DC, 100-240V AC
Power Consumption	~22W (On), ~0.4W (Standby)
Energy Efficiency Class	E
Dimensions (without stand)	505 x 300 x 52 mm (W x H x D)
Dimensions (with stand)	505 x 343 x 175 mm (W x H x D)
Weight (without stand)	3.1 kg
Weight (with stand)	3.3 kg
VESA Mount	100 x 100 mm
Remote Control Batteries	2 x AAA (included)

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or further assistance, please reach out to the Sniper customer service department through the contact details provided with your product or on the manufacturer's official website.

