

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Oris](#) /

> [Oris Divers Sixty-Five Chronograph Automatic Watch User Manual - Model 01 771 7744 4354-07 5 21 45](#)

Oris 01 771 7744 4354-07 5 21 45

Oris Divers Sixty-Five Chronograph Automatic Watch User Manual

Model: 01 771 7744 4354-07 5 21 45

INTRODUCTION

This manual provides essential instructions for the proper use, care, and maintenance of your Oris Divers Sixty-Five Chronograph Automatic Watch. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

The Oris Divers Sixty-Five Chronograph is a precision Swiss automatic timepiece featuring a chronograph function, date display, and water resistance up to 100 meters (330 feet). It is equipped with a stainless steel case, a black dial with luminous hands and markers, and a brown leather strap.



Figure 1: Front view of the Oris Divers Sixty-Five Chronograph watch, showcasing the black dial, luminous hands, and chronograph sub-dials.

WATCH COMPONENTS

- **Crown:** Used for winding the movement and setting the time and date.
- **Pushers (Top and Bottom):** Used to operate the chronograph functions.
- **Bezel:** Unidirectional rotating bezel for dive timing.
- **Dial:** Displays time, date, and chronograph measurements.
- **Hands:** Hour, minute, second, and chronograph hands.
- **Strap:** Brown leather strap with a buckle clasp.





Figure 2: Side view of the watch, highlighting the crown and chronograph pushers.

SETUP AND INITIAL OPERATION

Winding the Watch

Your Oris watch is equipped with an automatic mechanical movement. It is powered by the natural motion of your wrist. If the watch has stopped or has not been worn for an extended period, it may require manual winding.

1. Unscrew the crown counter-clockwise to position 1 (winding position).
2. Turn the crown clockwise approximately 20-30 times. This will provide sufficient power reserve to start the watch.
3. Push the crown back in and screw it clockwise to ensure water resistance.

Setting the Time and Date

1. Unscrew the crown counter-clockwise.
2. Pull the crown out to position 2 (date setting position). Turn the crown clockwise or counter-clockwise to set the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
3. Pull the crown out further to position 3 (time setting position). The second hand will stop. Turn the crown to set the hour and minute hands. To ensure accuracy, set the time a few minutes ahead and then turn it back to the correct time.
4. Once the time and date are set, push the crown back into position 1 and screw it clockwise firmly against the case to maintain water resistance.

OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Start:** Press the top pusher (A) to start the chronograph second hand.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time (seconds and minutes) will be displayed on the sub-dials.
3. **Reset:** After stopping the chronograph, press the bottom pusher (B) to reset all chronograph hands to zero.

Note: Do not operate the chronograph pushers underwater, as this can compromise the watch's water resistance.

WATER RESISTANCE

Your Oris Divers Sixty-Five Chronograph watch is water-resistant up to 100 meters (330 feet). This rating makes it suitable for swimming, snorkeling, and light recreational diving. However, it is not intended for saturation diving.

- Always ensure the crown is fully screwed down before exposing the watch to water.
- Do not operate the crown or pushers while the watch is wet or submerged.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly with a soft cloth.
- Water resistance is not a permanent condition and may be affected by aging gaskets or accidental impacts. It is recommended to have the water resistance checked annually by an authorized service center.



Figure 3: View of the watch case back, indicating the 10 BAR / 100M water resistance rating.

MAINTENANCE AND CARE

Cleaning

To clean your watch, use a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, ensuring the crown is fully screwed down. Rinse thoroughly with fresh water and dry immediately.

Leather Strap Care

The leather strap is susceptible to wear and tear from moisture, sweat, and direct sunlight. To prolong its life:

- Avoid prolonged exposure to water.
- Clean with a dry, soft cloth.
- Allow it to air dry naturally if it gets wet.
- Avoid direct contact with cosmetics, perfumes, and chemical products.

Service

Like any precision instrument, your mechanical watch requires periodic servicing to ensure its accuracy and reliability. It is recommended to have your Oris watch serviced every 3-5 years by an authorized Oris service center.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running slow.	Insufficient power reserve.	Manually wind the watch (refer to "Winding the Watch" section). Wear the watch regularly to keep it wound.
Date changes at noon instead of midnight.	Time is set incorrectly (AM/PM).	Advance the hour hand by 12 hours.
Chronograph hands do not reset to zero.	Requires adjustment or service.	Consult an authorized service center.
Moisture under the crystal.	Compromised water resistance.	Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

SPECIFICATIONS

Model Number	01 771 7744 4354-07 5 21 45
Movement	Swiss Automatic
Case Material	Stainless Steel
Case Diameter	43 mm
Case Thickness	17 mm
Crystal	Sapphire Crystal
Dial Color	Black
Band Material	Leather
Band Color	Brown
Band Width	21 mm
Clasp Type	Buckle

Water Resistance	100 Meters (330 Feet)
Functions	Time (Hour, Minute, Second), Date, Chronograph (60 seconds, 30 minutes), Luminous Hands/Markers

WARRANTY INFORMATION

Your Oris watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty are provided with your watch at the time of purchase. Please retain your proof of purchase and warranty card.

The warranty typically covers manufacturing defects but does not cover normal wear and tear, accidental damage, loss, theft, or damage resulting from improper use or unauthorized repairs. For warranty claims, please contact an authorized Oris service center.



Figure 4: Oris watch packaging, including the product manual and warranty information.

SUPPORT AND CONTACT

For further assistance, service, or inquiries regarding your Oris Divers Sixty-Five Chronograph watch, please refer to the official Oris website or contact an authorized Oris retailer or service center.

- **Official Oris Website:** www.oris.ch (for locating service centers and additional information)
- **Authorized Retailer:** Contact the retailer where you purchased your watch.