

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Salton](#) /

› [Salton Coffee, Spice & Herb Electric Grinder \(Model CG1990WH\) Instruction Manual](#)

## Salton CG1990WH

# Salton Coffee, Spice & Herb Electric Grinder Instruction Manual

Model: CG1990WH

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Salton Coffee, Spice & Herb Electric Grinder, Model CG1990WH. Please read all instructions thoroughly before first use and retain for future reference.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- To protect against electrical hazards, do not immerse the appliance, power cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Ensure the lid is securely in place before operating the grinder. The safety mechanism prevents operation without the lid.

## PARTS DESCRIPTION







**Figure 1:** Front view of the Salton Electric Grinder. The grinder is white with a clear lid and a visible Salton logo at the base.



**Figure 2:** The grinder shown with its clear lid, highlighting the transparent cover for monitoring grinding progress.

1. Clear Lid
2. Stainless Steel Grinding Blades
3. Grinding Chamber
4. Motor Housing
5. Power Cord
6. One-Touch Pulse Control Button (integrated into lid/housing)

1. **Unpacking:** Carefully remove the grinder from its packaging. Retain the packaging for storage or in case of return.
2. **Initial Cleaning:** Before first use, wipe the exterior of the grinder with a damp cloth. Clean the grinding chamber and lid with a soft brush or damp cloth. Ensure all parts are completely dry before assembly and use. Do not immerse the motor housing in water.
3. **Placement:** Place the grinder on a stable, dry, and level surface. Ensure the power cord is not dangling where it can be pulled or tripped over.

## OPERATING INSTRUCTIONS

---

### General Operation

1. Ensure the grinder is unplugged before adding ingredients.
2. Fill the grinding chamber with the desired amount of coffee beans, spices, or herbs. Do not overfill; the capacity is designed for up to 8 cups of coffee beans.
3. Place the clear lid securely onto the grinder. The safety mechanism prevents operation if the lid is not properly seated.
4. Plug the grinder into a standard electrical outlet.
5. Press and hold the one-touch pulse control button to begin grinding. Release the button to stop.
6. Monitor the grinding process through the clear lid to achieve the desired consistency.
7. Once grinding is complete, unplug the grinder from the outlet before removing the lid and emptying the contents.

### Grinding Coffee Beans

The Salton grinder can grind coffee beans for up to 8 cups of coffee. The grinding time will determine the fineness of the grind:

- **Coarse Grind:** For French press or percolators (approx. 10-15 seconds).
- **Medium Grind:** For automatic drip coffee makers (approx. 15-20 seconds).
- **Fine Grind:** For espresso machines (approx. 20-25 seconds).

Use the pulse control to achieve precise grind levels. Grind only the amount of coffee needed for immediate use to ensure maximum freshness.



**Figure 3:** The grinder positioned next to whole coffee beans, indicating its function for coffee preparation.

### Grinding Spices and Herbs

This grinder is also suitable for grinding various dry spices and herbs. The high-speed stainless steel blades ensure quick and uniform results.

- Ensure the grinding chamber is clean and free of coffee residue before grinding spices or herbs to prevent flavor transfer.
- Add whole spices (e.g., peppercorns, star anise, cinnamon sticks) or dried herbs to the chamber.
- Use short pulses to achieve the desired consistency, from coarse to extra fine.



**Figure 4:** The grinder displayed alongside an assortment of spices and herbs, highlighting its versatility beyond coffee.

## MAINTENANCE AND CLEANING

Regular cleaning will ensure optimal performance and longevity of your grinder.

1. **Always unplug the grinder** before cleaning.
2. **Grinding Chamber and Blades:** Use a small brush (e.g., a clean toothbrush or a brush specifically designed for



grinders) to remove any residual grounds or particles from the grinding chamber and around the blades. Wipe with a damp cloth if necessary, then dry thoroughly.

- 3. **Lid:** The clear lid can be washed with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
- 4. **Motor Housing:** Wipe the exterior of the motor housing with a soft, damp cloth. Do not immerse the motor housing in water or any other liquid.
- 5. **Storage:** Store the grinder in a dry place with the lid securely in place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in. Lid not securely in place. Pulse button not pressed.	Ensure the power cord is firmly plugged into a working outlet. Verify the lid is correctly aligned and fully seated on the grinding chamber. Press and hold the pulse control button firmly.
Grinding is uneven.	Overfilling the chamber. Insufficient grinding time.	Do not overfill the grinding chamber. Fill to the recommended capacity. Increase grinding time or use shorter, more frequent pulses to achieve desired consistency.
Grinder stops during operation.	Overheating. Lid dislodged.	Unplug the grinder and allow it to cool down for at least 10-15 minutes before resuming use. Ensure the lid remains securely in place during operation.

SPECIFICATIONS

- **Model:** CG1990WH
- **Brand:** Salton
- **Color:** White
- **Capacity:** Grinds beans for up to 8 cups of coffee
- **Blade Material:** High-speed Stainless Steel
- **Control:** One-touch pulse control
- **Safety Features:** Safety mechanism prevents operation without lid in place
- **Product Dimensions:** 3.5 x 3.5 x 6.7 inches
- **Item Weight:** 1.3 pounds
- **UPC:** 061283114631

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official Salton website. Keep your proof of purchase for warranty claims.

**Manufacturer:** Salton

**Website:** [Visit the Salton Store on Amazon](#)

## Related Documents - CG1990WH

 <p>salton® digital coffee maker cordless 12-cup Model FC2074</p> <p>Instruction Booklet</p>	<p><a href="#">Salton FC2074 Digital Coffee Maker Instruction Booklet</a></p> <p>User manual and safety instructions for the Salton FC2074 digital coffee maker, including setup, operation, cleaning, descaling, and warranty information.</p>
 <p>salton® cordless electric kettle cordless 1.8L Model JK1903</p> <p>Instruction Booklet</p>	<p><a href="#">Salton JK1903 Cordless Electric Kettle Instruction Booklet</a></p> <p>Instruction booklet for the Salton JK1903 cordless electric kettle. Includes important safety safeguards, setup instructions, usage guidelines, cleaning, and warranty information.</p>
 <p>salton® heated lunchbox food warmer - 1.5L capacity Model SP2111</p> <p>Instruction Booklet</p>	<p><a href="#">Salton Heated Lunchbox Food Warmer SP2111 Instruction Manual</a></p> <p>Instruction manual for the Salton Heated Lunchbox Food Warmer, model SP2111. Includes safety precautions, operating instructions, care and cleaning, and warranty information.</p>
 <p>salton® digital toaster cordless 2-slice Model ET2072</p> <p>Instruction Booklet</p>	<p><a href="#">Salton Digital Toaster ET2072 Instruction Booklet</a></p> <p>Instruction booklet for the Salton Digital Toaster, Model ET2072. Includes important safeguards, parts description, operating instructions, and warranty information.</p>
 <p>salton® table de cuisson par induction portable Model ID1401</p> <p>Mode d'emploi</p>	<p><a href="#">Salton ID1401 Portable Induction Cooktop User Manual</a></p> <p>Comprehensive user manual for the Salton ID1401 portable induction cooktop, covering safety precautions, operating instructions, features, troubleshooting, and warranty information.</p>





## [Salton PC1048 5-en-1 Autocuiseur Électronique - Mode d'Emploi](#)

Manuel d'utilisation pour l'autocuiseur électronique Salton modèle PC1048. Ce guide fournit des instructions de sécurité, des descriptions de pièces, des conseils d'utilisation, des recettes et des informations de garantie pour le modèle 5-en-1.