

[Manuals.plus](#) /

› [Beyution](#) /

› New BN59-01303A Remote Control fit for Samsung Smart TV UA43NU7090 UA50NU7090 UA55NU7090 UA65NU7090 UA43NU7100 UA49NU7100 UA55NU7100 UA65NU7100 UA75NU7100 UA58NU7103 UA58NU7103K UE55NU7023 UE55NU7093

Beyution BE-BN59-01303A

Instruction Manual

Product: BN59-01303A Remote Control

Brand: Beyution

Model: BE-BN59-01303A

1. PRODUCT OVERVIEW

This manual provides instructions for the Beyution BN59-01303A Replacement Remote Control, designed for use with various Samsung Smart TV models. This is an infrared remote control.

Compatible Samsung Smart TV Models include:

- UA43NU7090, UA50NU7090, UA55NU7090, UA65NU7090
- UA43NU7100, UA49NU7100, UA55NU7100, UA65NU7100, UA75NU7100
- UA58NU7103, UA58NU7103K
- UE55NU7023, UE55NU7093
- UE40NU7102, UE40NU7122, UE40NU7172, UE40NU7192
- UE43NU7102, UE43NU7122, UE43NU7172, UE43NU7192
- UE49NU7102, UE49NU7172
- UE55NU7102, UE55NU7172
- UE65NU7102, UE65NU7172
- UE75NU7102, UE75NU7172
- UE55NU7172U





Figure 1: Front view of the BN59-01303A remote control. This image displays the full layout of the remote, including the red power button at the top left, a numerical keypad, volume and channel controls, directional navigation buttons, and dedicated function keys for various TV

features.

2. SETUP

2.1 Battery Installation

The BN59-01303A remote control requires two (2) AAA batteries for operation. It is recommended to use brand new alkaline batteries for optimal performance.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 2: Rear view of the remote control with the battery compartment open. This image illustrates where the two AAA batteries are inserted, showing the spring contacts and the battery polarity markings.

Important Note:

If the remote control does not function after battery installation, ensure that brand new alkaline batteries are used. Rechargeable batteries may not provide sufficient power. Also, verify that there are no obstructions between the remote control and the television's infrared receiver.

3. OPERATING INSTRUCTIONS

This remote control operates via infrared (IR) signal. Point the remote directly at your Samsung Smart TV's IR receiver for proper functionality. No pairing or programming is required; simply insert batteries and use.

3.1 Basic Functions

- **Power Button (●):** Turns the TV on or off.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9):** Direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigates menus and selects options.
- **Return Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.

3.2 Smart TV Functions

- **Settings Button:** Accesses the TV's main settings menu.

- **Home Button:** Returns to the Smart Hub or home screen.
- **Guide Button:** Displays the electronic program guide (EPG).
- **Info Button:** Shows information about the current program or input.
- **E-Manual Button:** Accesses the TV's built-in electronic manual.
- **Colored Function Buttons (A, B, C, D):** These buttons perform specific functions depending on the context of the TV's menu or application. Refer to your TV's on-screen prompts for their current use.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or it stops responding. Always replace both batteries at the same time.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components.

5. TROUBLESHOOTING

Common Issues and Solutions		
Problem	Possible Cause	Solution
Remote not responding.	Dead or low batteries. Incorrect battery polarity. Obstruction between remote and TV.	Replace with new alkaline batteries. Check battery orientation. Ensure clear line of sight to TV's IR receiver.
Remote works intermittently.	Weak batteries. Interference from other devices.	Replace batteries. Move potential interfering devices away from the TV.
Specific buttons not working.	Dirt or debris under the button. Internal damage.	Clean the remote surface. If problem persists, the remote may need replacement.
Remote works for some TVs but not mine.	Incompatible TV model.	Verify your TV model is listed in the "Compatible Samsung Smart TV Models" section. If not, this remote may not be compatible.

If troubleshooting steps do not resolve the issue, please contact customer support for further assistance.

6. SPECIFICATIONS

- **Model Number:** BE-BN59-01303A
- **Compatible Brand:** Samsung
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 2 ounces (approximately)

- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Television)

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by the seller at the time of purchase. Typically, replacement parts may come with a limited warranty against manufacturing defects.

For technical support or inquiries regarding compatibility, please contact the seller directly. Provide your product model number (BN59-01303A) and your TV model number for efficient assistance.

Seller: KCI REMOTE INC (as per product information)

Contact: Refer to your purchase documentation or the seller's information on the platform where the product was acquired.

© 2024 Beyution. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question