

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chicco](#) /

› [Chicco Next2Moon Mobile Crib Projector User Manual](#)

Chicco 8058664111329

Chicco Next2Moon Mobile Crib Projector User Manual

Model: 8058664111329

INTRODUCTION

The Chicco Next2Moon Mobile Crib Projector is designed to create a soothing environment for newborns, aiding in sleep through gentle projections and calming melodies. This versatile device offers multiple configurations, functioning as a mobile, a bed projector, or a bedside projector. It features a detachable panel for expanded projection and includes soft plush toys.

SAFETY INFORMATION

- Always supervise infants when the product is in use.
- Ensure the product is securely attached to the crib or placed on a stable surface.
- Keep small parts and batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product will not be used for an extended period.
- Dispose of batteries responsibly according to local regulations.
- This product is intended for newborns and infants.

PACKAGE CONTENTS

Verify that all components are present before assembly:

- Chicco Next2Moon Projector Unit
- Fabric Panel with Hanging Figures
- Soft Plush Toys (attached to fabric panel)
- Instruction Manual

SETUP

1. Battery Installation

1. Locate the battery compartment on the base of the projector unit.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 x 1.5V AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Assembly and Attachment

The Next2Moon Projector offers three primary configurations:

- **Mobile Configuration:** Attach the projector unit with the fabric panel and hanging figures to the side of the crib. Ensure it is securely fastened and out of the baby's reach. This configuration is compatible with Chicco Next2Me cribs and most co-sleeping and wooden cribs.
- **Bed Projector Configuration:** For a wider projection, the fabric panel can be detached. The projector unit can then be mounted to the crib, projecting images directly onto the ceiling.
- **Bedside Projector Configuration:** Detach the projector unit from the crib and place it on a stable bedside table. This allows for ceiling projection in any room.



Image: The Chicco Next2Moon Projector shown in its mobile configuration, with a blue bear figure on a moon-shaped base, projecting a scene of bears and stars onto an overhead surface. This illustrates the projection feature and the overall design of the unit.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power button on the projector unit. Press once to turn on, and press again to turn off.

2. Projection Modes

- **Fabric Panel Projection:** When the fabric panel is attached, the projector will display images onto the panel, creating a localized visual experience for the baby.
- **Ceiling Projection:** Detach the fabric panel to enable projection directly onto the ceiling. This creates

a broader, room-filling visual.

3. Music and Sounds

The projector offers a selection of classical music and nature sounds. Use the dedicated music button to cycle through available melodies or to turn the sound off.

4. Timer Settings

The integrated timer allows for automatic shut-off after a set duration. Select from 15, 30, or 45-minute cycles using the timer button. The unit will automatically power down once the selected time has elapsed.

MAINTENANCE AND CARE

- Cleaning:** Wipe the plastic surfaces of the projector unit with a soft, damp cloth. Do not immerse the unit in water. The fabric panel and plush toys can be surface cleaned with a mild detergent and air-dried.
- Battery Replacement:** Replace batteries when the projection or sound becomes weak or inconsistent. Refer to the "Battery Installation" section for instructions.
- Storage:** Store the projector in a cool, dry place away from direct sunlight when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh AA batteries.
No projection or dim projection.	Low batteries; projector lens is obstructed or dirty.	Replace batteries. Clean the projector lens with a soft, dry cloth. Ensure no objects are blocking the projection path.
No sound or distorted sound.	Low batteries; volume is too low or muted.	Replace batteries. Adjust the volume using the music button.
Unit does not attach securely to crib.	Incompatible crib model; incorrect attachment method.	Ensure your crib is compatible with the Next2Moon system. Review the assembly instructions for proper attachment.

SPECIFICATIONS

- Model Number:** 8058664111329
- Product Dimensions:** 24.41 x 16.14 x 7.87 inches
- Item Weight:** 2.64 pounds
- Power Source:** 3 x 1.5V AA Batteries (not included)
- Material:** Plastic
- Timer Settings:** 15, 30, 45 minutes

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Chicco website or contact Chicco customer service directly. Keep your purchase receipt as proof of purchase.

Chicco Official Website: www.chicco.com