

## GOLDEN HOUR GH-124

# GOLDEN HOUR GH-124 Luxury Military Sports Men's Watch Instruction Manual

Model: GH-124

## INTRODUCTION

---

This manual provides comprehensive instructions for the operation and maintenance of your GOLDEN HOUR GH-124 Luxury Military Sports Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

## PRODUCT OVERVIEW

---

The GOLDEN HOUR GH-124 is a multi-functional watch featuring both analog and digital time displays, a stopwatch, alarm, calendar, and luminous hands for visibility in low light conditions. It is designed for durability and comfort.

### Key Features:

- Analog and Digital Dual Time Display
- Military 12/24-hour format
- Calendar (Day, Date, Month)
- Stopwatch function
- Hourly Chime
- Alarm Clock
- Luminous Hands and Digital Backlight
- 3ATM Water Resistance

### Watch Components:



**Image Description:** An exploded diagram of the GOLDEN HOUR GH-124 watch face, labeling various buttons and display areas. Labels include "Week", "Light", "Mode Display", "Mode", "Time", "Start", "Adjust The Time", "Reset", "Month", and "Date". This image helps identify the functions of each button and display segment.

## SETUP

---

### Initial Time Setting (Analog):

1. Pull out the crown (the knob on the right side of the watch) to the first click position.
2. Rotate the crown to set the analog hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog timekeeping.

### Digital Time and Date Setting:


1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET** button to cycle through the settings (seconds, hour, minute, month, date, day of week).
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

## OPERATING INSTRUCTIONS

### Using the Backlight:

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds, enhancing visibility in dark environments.

# LUMINOUS FUNCTION

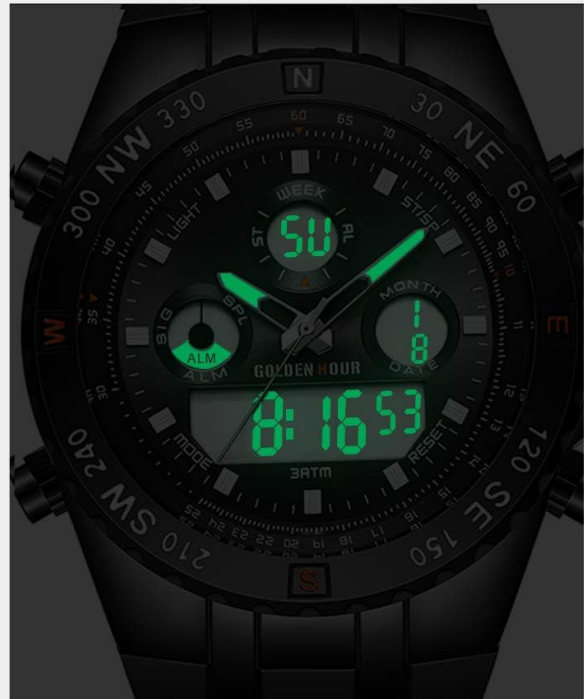

Normal Behavior

Dark Night

**VISIBLE IN THE NIGHT**

**Image Description:** A comparison image showing the GOLDEN HOUR GH-124 watch in normal lighting and then with its luminous digital display activated in a dark environment, highlighting the visibility feature.

### Stopwatch Function:

1. Press the **MODE** button until the stopwatch mode is displayed (usually indicated by "ST" or "STOP").
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the timing.
4. Press the **RESET** button to clear the stopwatch to zero.

### Alarm Setting:

1. Press the **MODE** button until the alarm setting mode is displayed (usually indicated by "AL" or "ALARM").
2. Use the **RESET** button to select the hour or minute to set.
3. Use the **START** button to adjust the flashing value.

4. Press the **MODE** button to exit the alarm setting mode.
5. To activate/deactivate the alarm, press the **START** button while in alarm mode. An alarm icon will appear/disappear.

## MAINTENANCE

---

### Cleaning:

Wipe the watch case and band regularly with a soft, dry cloth. For the rubber band, a damp cloth with mild soap can be used, followed by thorough drying.

### Water Resistance (3ATM):

This watch is rated 3ATM (30 meters) water resistant. This means it can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, diving, or snorkeling. Avoid pressing buttons underwater.

### Battery Replacement:

When the display dims or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

---

- **Analog hands not moving:** Check if the crown is fully pushed in. If not, pull it out, set the time, and push it back in. If the issue persists, the battery may be low or depleted.
- **Digital display is blank or dim:** The battery may be low. Replace the battery.
- **Incorrect time/date:** Refer to the "Digital Time and Date Setting" section to reset the time and date.
- **Watch fogging up:** This could indicate a breach in the water resistance seal. Avoid further water exposure and have it inspected by a technician.

## SPECIFICATIONS


---

Feature	Detail
Model Number	GH-124
Case Diameter	50mm
Case Thickness	17mm
Band Width	26mm
Band Material	Silicone
Case Material	Alloy
Bottom Cover Material	304 Steel
Water Resistance	3ATM (30 meters)
Movement	Japanese Quartz

# PRODUCT PARAMETERS



Wearing size 6.9"(175mm) to 9.0" (230mm)

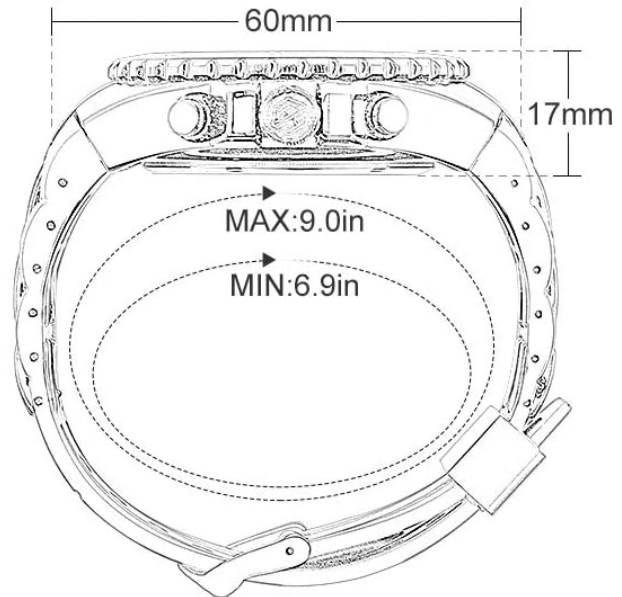

Weight: 145g	Band Material: Silicone
Case Material: Alloy	Bottom Cover Material: 304 Steel



Case Diameter: 50mm



Band Width: 26mm



Case Thickness: 17mm



Band Length: 170-230mm

**Image Description:** A technical drawing illustrating the product parameters of the GOLDEN HOUR GH-124 watch, including case diameter (50mm), case thickness (17mm), band width (26mm), and band length (170-230mm). It also lists materials like silicone for the band, alloy for the case, and 304 steel for the bottom cover.

## WARRANTY AND SUPPORT

### Warranty Information:

GOLDEN HOUR products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official GOLDEN HOUR website. Keep your purchase receipt as proof of purchase.

### Customer Support:

If you encounter any issues or have questions regarding your GOLDEN HOUR GH-124 watch, please contact GOLDEN HOUR customer support through their official website or the retailer where the product was purchased. Provide your model number (GH-124) and a detailed description of the issue for efficient assistance.

## IMPORTANT SAFETY INFORMATION

- Do not attempt to open the watch case or modify the internal components, as this will void the warranty and

may damage the watch.

- Avoid exposing the watch to extreme temperatures (hot or cold) or strong magnetic fields.
- Keep the watch away from harsh chemicals, solvents, and detergents, which can damage the case, band, or seals.
- Dispose of batteries responsibly according to local regulations.