

[Manuals.plus](#) /

› [M SANMERSEN](#) /

› M SANMERSEN Piano Mat Instruction Manual, Model B07SP9Z683

M SANMERSEN B07SP9Z683

M SANMERSEN Piano Mat Instruction Manual

Model: B07SP9Z683

Brand: M SANMERSEN

1. INTRODUCTION

The M SANMERSEN Piano Mat is a musical playmat designed to introduce children to musical instruments and notes through interactive play. This manual provides essential information for safe setup, operation, maintenance, and troubleshooting to ensure optimal use of your piano mat.



Image: A child playing on the M SANMERSEN Piano Mat, demonstrating its interactive nature.

2. SAFETY INFORMATION

- Always supervise children during play.
- Keep the mat away from water and moisture to prevent electrical hazards.
- Do not use damaged batteries or mix old and new batteries.
- Ensure the mat is placed on a flat, stable surface to prevent tripping.
- Do not fold or store the mat with batteries installed for extended periods.

3. PACKAGE CONTENTS

The M SANMERSEN Piano Mat package includes:

- 1 x M SANMERSEN Piano Mat
- Instruction Manual (this document)

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the control panel of the piano mat.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 x AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.



Image: Detailed view of the battery compartment requiring 3 AA batteries.

4.2 Unfolding the Mat

Carefully unroll the piano mat and lay it flat on a clean, dry surface. Ensure there are no creases or obstructions that could affect its functionality.

Your browser does not support the video tag.

Video: A demonstration of unfolding the M SANMERSEN Piano Mat from its packaging.

5. OPERATING INSTRUCTIONS

Enjoy Different Sound Effects

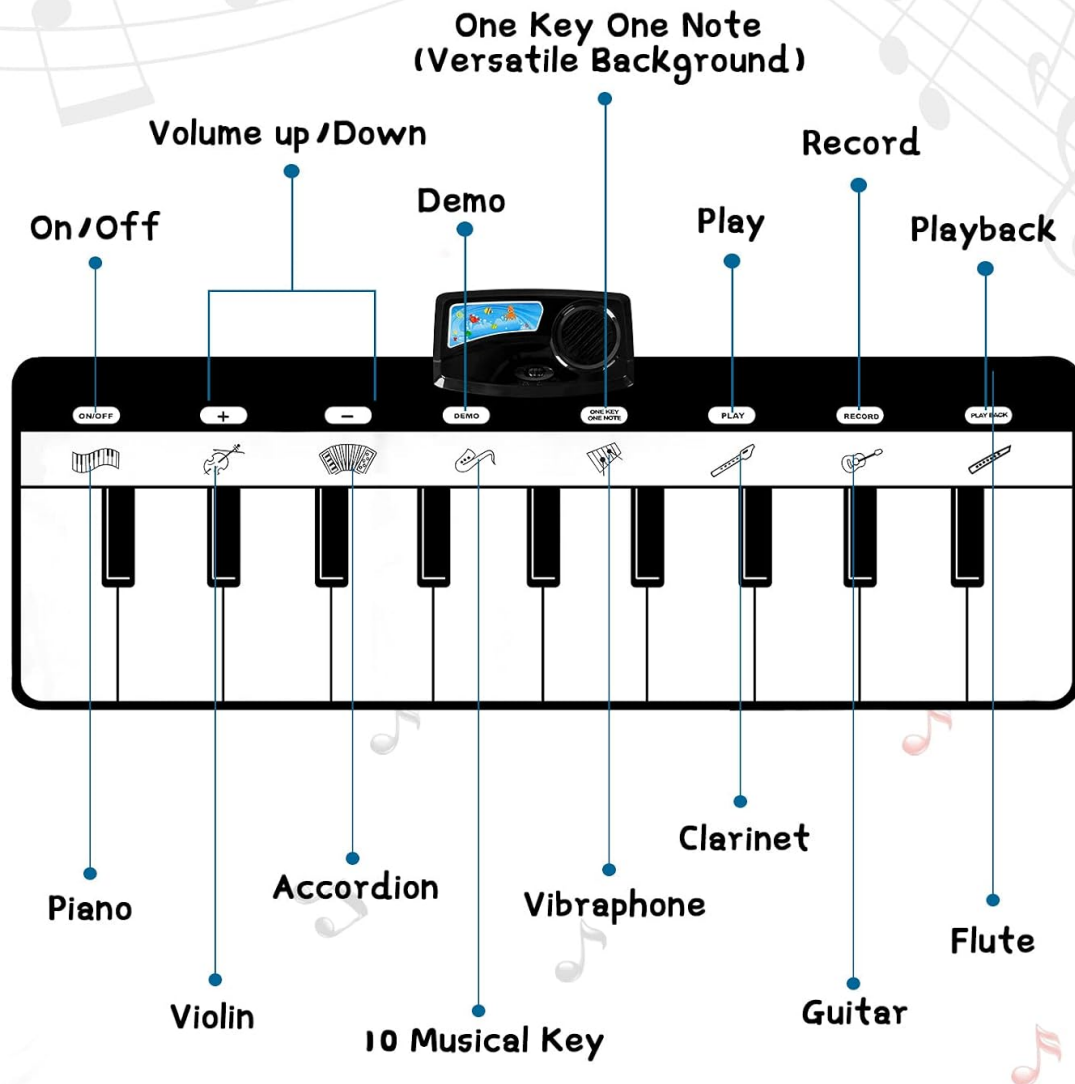 


Image: Overview of the piano mat's control panel and key functions.

5.1 Power On/Off

Locate the **ON/OFF** switch on the control panel. Slide the switch to 'ON' to power on the mat. Slide it to 'OFF' to power off.

5.2 Volume Control

Use the '+' and '-' buttons on the control panel to adjust the volume to a comfortable level.

5.3 Piano Keys

The mat features 10 large piano keys. Press or step on any key to produce a musical note. The keys are touch-sensitive.

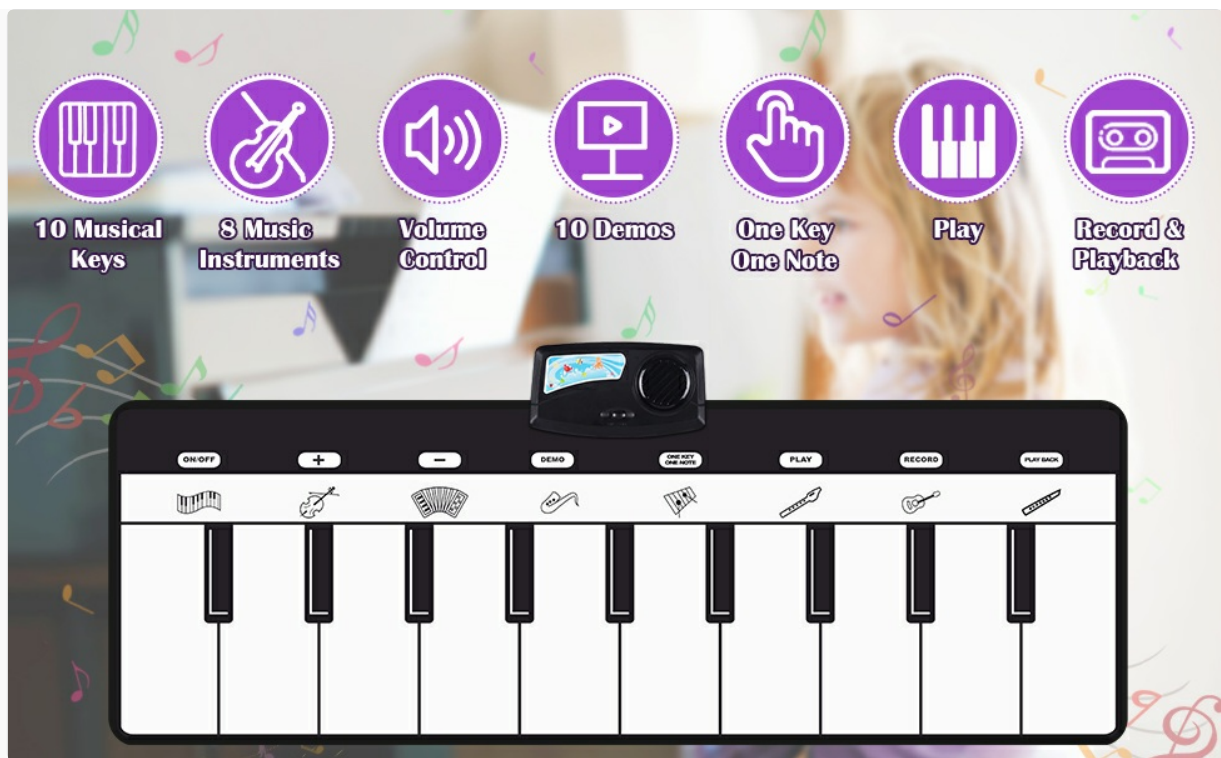 


Image: Visual representation of the mat's key features, including the 10 musical keys.

5.4 Instrument Sounds

The mat offers 8 different musical instrument sounds. Select an instrument by pressing its corresponding icon on the control panel. Available instruments include: Piano, Violin, Accordion, Saxophone, Xylophone, Clarinet, Guitar, and Flute.

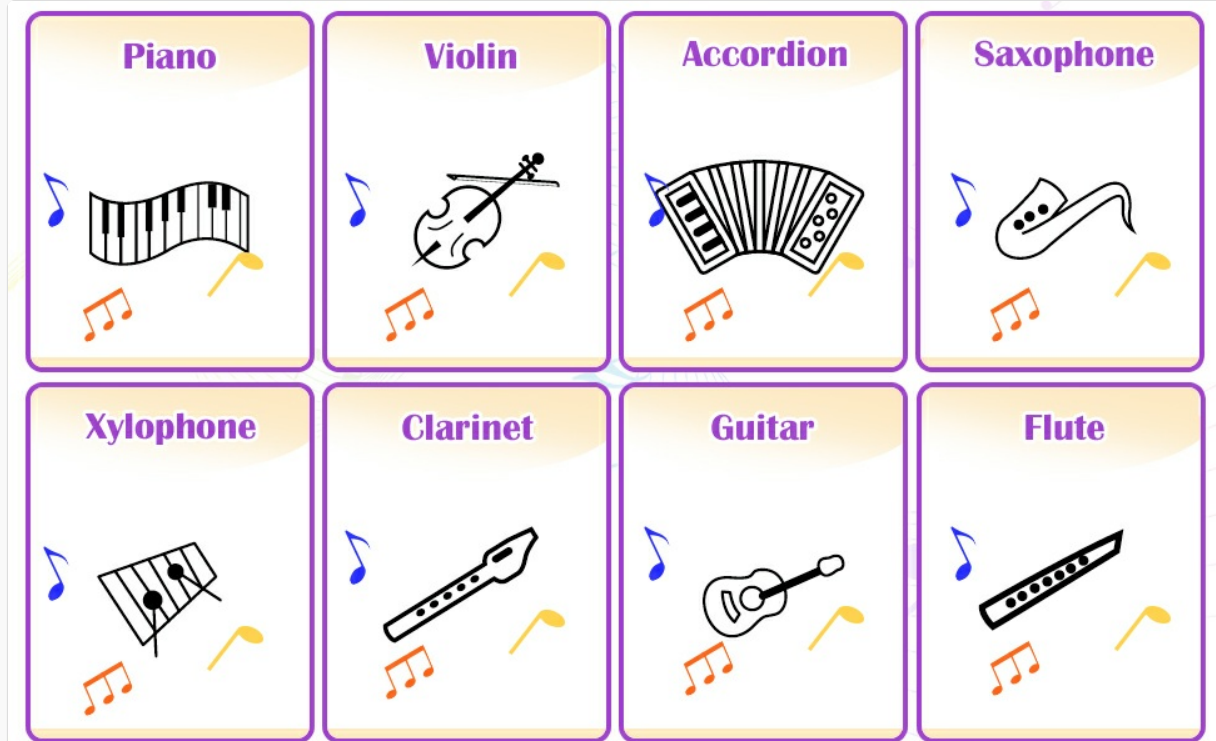 


Image: Icons for the 8 selectable instrument sounds.

5.5 Play Modes

The mat features 5 multifunction music modes. Refer to the specific icons on the mat for mode selection. These modes allow for various interactive musical experiences.

5.6 Record & Playback

To record your own music, press the **'RECORD'** button. Play your desired sequence on the piano keys. To listen to your recorded melody, press the **'PLAYBACK'** button.

5.7 Demo Mode

Press the **'DEMO'** button to play pre-recorded melodies. The mat includes 10 demo songs.

Your browser does not support the video tag.

Video: A demonstration of the piano mat's built-in demo songs.

5.8 One Key One Note Mode

Activate the **'ONE KEY ONE NOTE'** mode for a simplified play experience where each key press plays a complete note of a melody.

Your browser does not support the video tag.

Video: A guide on how to play the piano mat, likely demonstrating various modes including 'One Key One Note'.

6. MAINTENANCE

6.1 Cleaning

Wipe the surface of the piano mat with a soft, damp cloth. Do not immerse the mat or its control panel in water. Avoid using harsh chemicals or abrasive cleaners.

6.2 Storage

The mat features a foldable design for easy storage. After use, ensure the mat is dry, then fold it neatly. Remove batteries if storing for an extended period. Store in a cool, dry place away from direct sunlight.



Image: Illustrates the mat's foldable design and soft fabric.

Your browser does not support the video tag.

Video: A short preview demonstrating the portability of the piano mat.

7. TROUBLESHOOTING

7.1 No Sound or Low Volume

- Ensure the mat is powered on.
- Check battery installation and replace batteries if necessary.
- Adjust the volume using the '+' button.

7.2 Keys Not Responding

- Ensure the mat is laid flat and there are no objects obstructing the keys.
- Check battery power.
- Power off and then on the mat to reset.

8. SPECIFICATIONS

- **Product Dimensions:** 43.3 x 14.2 x 1.2 inches
- **Item Weight:** 12 ounces
- **Model Number:** B07SP9Z683
- **Manufacturer Recommended Age:** 3 years and up
- **Batteries:** 3 AA batteries required (not included)
- **Material:** Non-toxic and harmless soft fabric

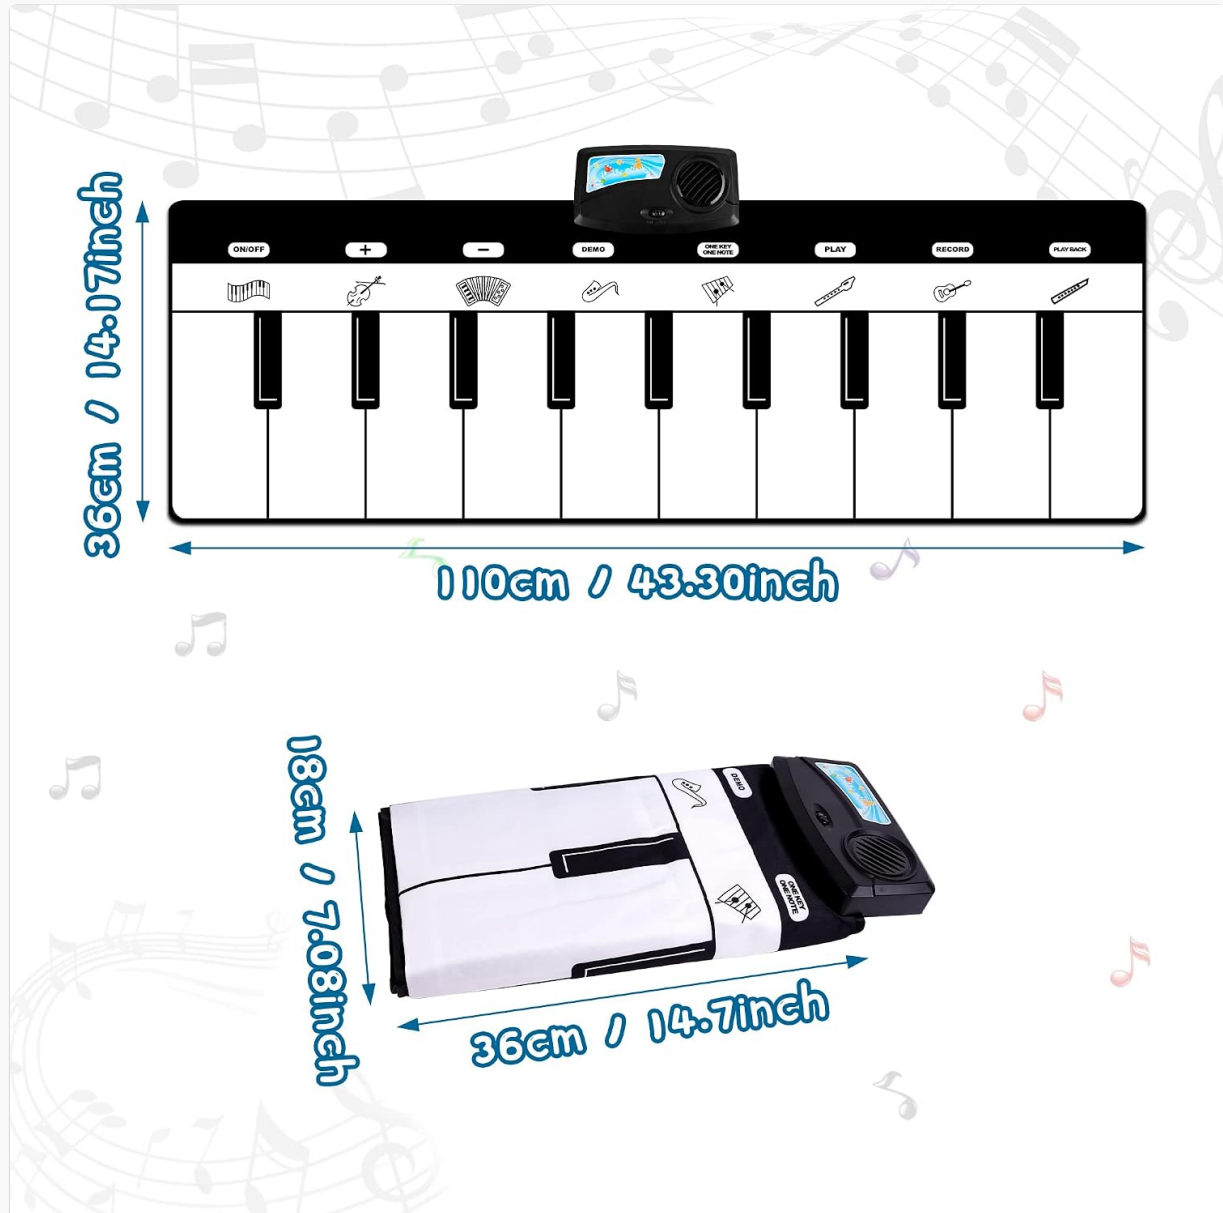 


Image: Dimensions of the piano mat, both unfolded and folded.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the retailer's return policy or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.