

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ShinePick](#) /

› ShinePick CT007 4-in-1 Wireless Karaoke Microphone Instruction Manual

ShinePick CT007

ShinePick CT007 4-in-1 Wireless Karaoke Microphone Instruction Manual

Model: CT007

INTRODUCTION

Welcome to your new ShinePick CT007 4-in-1 Wireless Karaoke Microphone. This device combines a microphone, wireless speaker, player, and recorder, designed for versatile audio entertainment. Please read this manual carefully to ensure proper use and maintenance of your device.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures or humidity.
- Keep away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself.
- Use only the provided charging cable.
- Keep out of reach of small children.

PACKAGE CONTENTS

- 1 x ShinePick CT007 Wireless Karaoke Microphone
- 1 x Charging Cable
- 1 x Audio Cable (3.5mm)
- 1 x Instruction Manual

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your microphone.

High Quality Microphone



- 1 Play/Pause/Scan mode, LED light mode
- 2 Sturdy Shell(Dual Powerful Speakers)
- 3 The Previous Song
- 4 The Next Song
- 5 Volume+
- 6 Volume-
- 7 Microphone Volume
- 8 Magic Sound Mode
- 9 Power/Wireless
- 10 Aluminum alloy Handle
- 11 Micro-USB Port
- 12 Audio Output Port
- 13 TF Card Slot
- 14 Charing/Recording Port

Image: Detailed view of the ShinePick CT007 microphone, highlighting its control panel and various ports.

Control Panel Functions:

1. **Play/Pause/Scan Mode, LED Light Mode:** Press to play/pause music or scan for FM radio. Long press to toggle LED lights.
2. **Sturdy Shell (Dual Powerful Speakers):** Integrated speakers for audio output.
3. **Previous Song:** Press to go to the previous track.
4. **Next Song:** Press to go to the next track.
5. **Volume +:** Increase music volume.
6. **Volume -:** Decrease music volume.
7. **Microphone Volume:** Adjust microphone input volume.
8. **Magic Sound Mode (Remix):** Toggle different voice effects.
9. **Power/Wireless:** Long press to power on/off. Short press to switch between modes (Bluetooth, TF card, AUX).
10. **Aluminum Alloy Handle:** Ergonomic design for comfortable grip.
11. **Micro-USB Port:** For charging the device.
12. **Audio Output Port (3.5mm AUX):** For wired connection to other devices.
13. **TF Card Slot:** Insert a Micro SD card for playing stored music.

14. **Charging/Recording Port:** Multi-functional port for charging and recording.

SETUP

Charging the Microphone

Before first use, fully charge the microphone.

1. Connect the Micro-USB end of the charging cable to the microphone's Micro-USB port (11).
2. Connect the USB-A end to a compatible USB power adapter (not included) or computer USB port.
3. The charging indicator light will illuminate. It will turn off or change color when fully charged.

Powering On/Off

Long press the **Power/Wireless** button (9) for approximately 3 seconds to turn the microphone on or off. A voice prompt will indicate the power status.

Bluetooth Pairing

1. Turn on the microphone. It will automatically enter Bluetooth pairing mode, indicated by a voice prompt "The Bluetooth device is ready to pair."
2. Enable Bluetooth on your smartphone, tablet, or other device.
3. Search for "ShinePick" or "CT007" in the list of available Bluetooth devices.
4. Select the device to connect. A voice prompt will confirm successful pairing.
5. Once paired, you can play music from your device through the microphone's speaker.

Wired Connection (AUX)

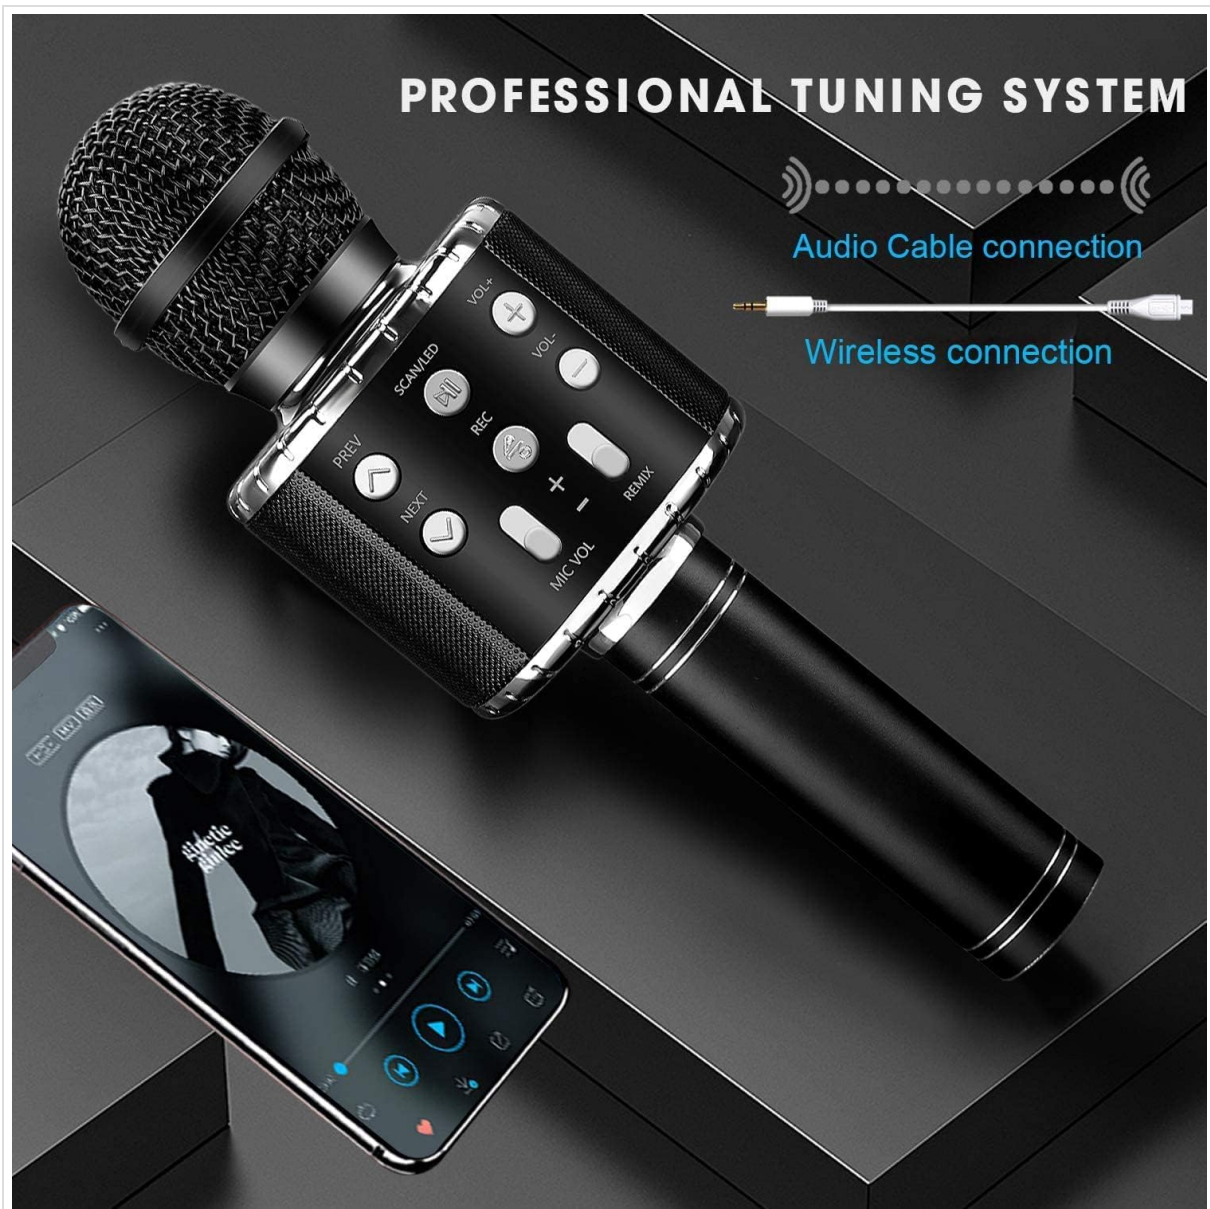


Image: The microphone connected to a smartphone via an audio cable, illustrating wired connectivity.

1. Connect one end of the 3.5mm audio cable to the microphone's Audio Output Port (12).
2. Connect the other end to the audio input jack of your external device (e.g., speaker, headphones).
3. The microphone will automatically switch to AUX mode.

TF Card Playback

1. Insert a Micro SD (TF) card (up to 32GB, not included) into the TF Card Slot (13) with the contacts facing down.
2. The microphone will automatically detect the card and begin playing music files stored on it.
3. Use the **Previous Song** (3) and **Next Song** (4) buttons to navigate tracks.

OPERATING INSTRUCTIONS



Image: Individuals enjoying the microphone in different scenarios, including karaoke, singing practice, and listening to music.

Karaoke Mode

Connect the microphone to your device via Bluetooth or AUX. Play your favorite karaoke tracks.

1. Adjust the music volume using **Volume +** (5) and **Volume -** (6).
2. Adjust your voice volume using the **Microphone Volume** slider (7).
3. Use the **Magic Sound Mode (Remix)** button (8) to apply different voice effects (e.g., echo).

Recording Function

To record your singing or voice:

1. Connect the microphone to your smartphone via the provided audio cable (from the microphone's Audio Output Port to your phone's headphone jack).
2. Open a karaoke app or recording app on your phone.
3. Start recording within the app. Your voice and the music playing through the microphone will be recorded.

Selfie Mode

The microphone can also function as a remote shutter for your smartphone camera.

1. Ensure the microphone is connected to your phone via Bluetooth.
2. Open your phone's camera app.
3. Press the **Power/Wireless** button (9) or the **Play/Pause** button (1) to trigger the camera shutter.

Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the ShinePick Karaoke Wireless Microphone.

MAINTENANCE

- Clean the microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the microphone in a cool, dry place when not in use.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not block the speaker grilles or microphone mesh.

TROUBLESHOOTING

Problem	Solution
Microphone does not turn on.	Ensure the battery is charged. Long press the Power/Wireless button.
Cannot connect via Bluetooth.	Ensure Bluetooth is enabled on your device and the microphone is in pairing mode. Forget previous connections and try pairing again.
No sound from the microphone.	Check microphone volume (Mic Vol) and main volume. Ensure proper connection (Bluetooth or AUX).
Echo effect is too strong/weak.	Adjust the Magic Sound Mode (Remix) setting.
Poor sound quality.	Ensure the microphone is held correctly (speak directly into the mesh). Check for interference or obstructions.

SPECIFICATIONS

Feature	Detail
Model Name	CT007
Brand	ShinePick
Connectivity	Wireless (Bluetooth), 3.5mm AUX
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Capacity	2400mA (8-10 hours continuous usage)
Compatible Devices	Android, iOS, Smart-phones, PC, Laptops

Feature	Detail
TF Card Support	Up to 32GB (not included)
Audio Sensitivity	115 Decibels
Signal-to-Noise Ratio	115 dB
Frequency Response	0.1 kHz - 10 kHz
Item Weight	385 Grams
Material	Polymer
Color	Black (for this variant)

WARRANTY & SUPPORT

This product comes with a 6-month warranty. For any issues or support, please contact ShinePick Direct via Amazon message.

Manufacturer: ShinePick

Model Number: CT007B-SP-US-123

UPC: 606314751982