

Manuals.plus /

› Womanizer /

› Womanizer Pro40 Clitoral Stimulator User Manual

Womanizer Pro40

Womanizer Pro40 Clitoral Stimulator User Manual

Model: Pro40

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Womanizer Pro40. Keep this manual for future reference.

- This device is intended for external clitoral stimulation only.
- Do not use if you have any open wounds, skin irritations, or medical conditions in the area of use. Consult a healthcare professional if you have concerns.
- Clean the device thoroughly before and after each use as described in the 'Cleaning and Maintenance' section.
- Keep out of reach of children.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

2. PRODUCT OVERVIEW

The Womanizer Pro40 is a clitoral stimulator designed with Pleasure Air Technology. This technology delivers contactless pulsating waves for a unique sensation.





Figure 2.1: The Womanizer Pro40 Clitoral Stimulator, featuring a sleek black and silver design with control buttons for power and intensity.

Key Features:

- **Pleasure Air Technology:** Contactless pulsating waves for clitoral stimulation.
- **6 Intensity Levels:** Adjustable suction from gentle to intense.
- **Waterproof (IPX7):** Suitable for use in the shower or bath.
- **Rechargeable:** USB charging with up to 4 hours of runtime.
- **Body-Safe Materials:** Made from silicone, latex-free, and phthalate-free.

Figure 2.2: An infographic detailing the main features of the Womanizer Pro40, including its six intensity levels, body-safe materials, waterproof design, and up to four hours of battery life.

3. COMPONENTS

Your Womanizer Pro40 package includes:

- Womanizer Pro40 Clitoral Stimulator
- USB Charging Cable
- Two different sized stimulation heads (one pre-attached)
- User Manual



Figure 3.1: The Womanizer Pro40 device displayed alongside its product packaging, which includes branding and model information.

4. CHARGING INSTRUCTIONS

Before first use, fully charge your Womanizer Pro40. A full charge provides up to 4 hours of use.

1. Locate the charging port on the device, usually covered by a silicone flap.

2. Insert the small end of the provided USB charging cable into the device's charging port.
3. Connect the larger USB end of the cable to a USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the device will show charging status (refer to device-specific light patterns for full charge indication).
5. Once fully charged, disconnect the cable and ensure the charging port is securely covered to maintain waterproofing.

Your browser does not support the video tag.

Video 4.1: This video provides a product overview of the Womanizer Pro40, showcasing its design, how to attach and remove the stimulation head, charging process, and basic operation.

5. SETUP

The Womanizer Pro40 comes with two different sized stimulation heads. Choose the head that provides the most comfortable and effective sensation for you.

1. To change the head, gently pull the attached head off the device.
2. Align the new head with the device's opening and push it firmly into place until it is secure.

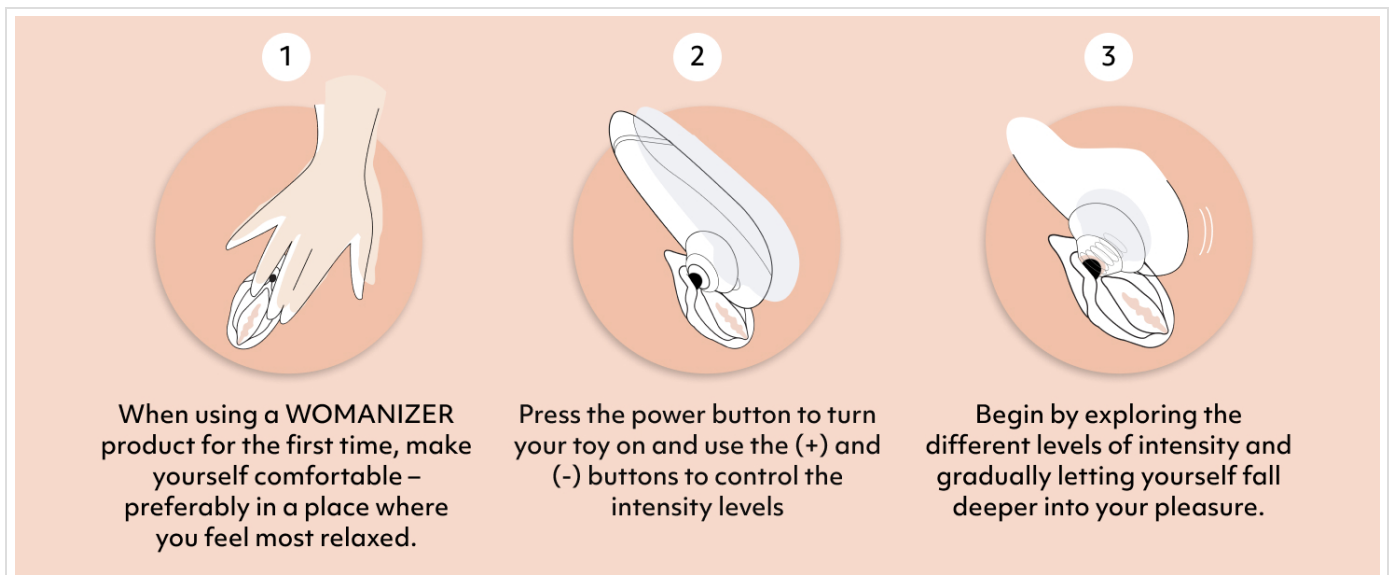


Figure 5.1: A three-step visual guide demonstrating the initial setup and operation of the Womanizer Pro40, from comfortable positioning to adjusting intensity.

6. OPERATING INSTRUCTIONS

The Womanizer Pro40 is designed for intuitive use with simple controls.

1. **Power On/Off:** Press and hold the power button (circular icon) for approximately 2 seconds to turn the device on or off.
2. **Adjusting Intensity:** Use the '+' button to increase the intensity of the pulsating waves and the '-' button to decrease it. There are 6 distinct intensity levels.
3. **Application:** Place the stimulation head over the clitoris without direct contact. Experiment with different positions and intensity levels to find what is most pleasurable.



Figure 6.1: The Womanizer Pro40 held in a hand, highlighting the six adjustable intensity levels for personalized use.

Your browser does not support the video tag.

Video 6.1: A short video demonstrating the Womanizer Pro40 in black, highlighting its quiet operation and the pulsating sensation of the Pleasure Air Technology.

7. CLEANING AND MAINTENANCE

Proper cleaning ensures hygiene and prolongs the life of your device.

1. After each use, remove the stimulation head.
2. Wash the stimulation head and the device's tip with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
3. Rinse thoroughly with clean water.
4. Dry completely with a lint-free cloth before storing.
5. Do not use alcohol, petroleum-based cleaners, or harsh chemicals, as these can damage the silicone material.



Figure 7.1: The Womanizer Pro40 shown partially submerged in water, illustrating its IPX7 waterproof rating suitable for use in wet environments, which also aids in cleaning.

8. STORAGE

Store your Womanizer Pro40 in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device using the provided USB cable.
Device does not charge.	Charging cable or port issue.	Ensure the cable is correctly inserted and try a different USB power source. Contact support if the issue persists.
Weak or inconsistent sensation.	Stimulation head not properly attached or worn.	Ensure the stimulation head is securely attached. Replace if worn or damaged.

10. SPECIFICATIONS

Feature	Detail
Model Name	Pro40
Brand	Womanizer
Material	Silicone
Color	Black (as per current product)
Dimensions	7.48 x 3.43 x 3.43 inches
Weight	4.94 ounces
Battery	1 Lithium Polymer (included)
Runtime	Up to 4 hours
Waterproof Rating	IPX7

11. WARRANTY AND SUPPORT

For warranty information, product support, or to register your device, please visit the official Womanizer website or contact their customer service. Keep your proof of purchase for any warranty claims.