

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta DW6040 Eco Intelligence Steam Iron User Manual](#)

Rowenta DW6040

Rowenta DW6040 Eco Intelligence Steam Iron User Manual

Model: DW6040

1. INTRODUCTION

Thank you for choosing the Rowenta DW6040 Eco Intelligence Steam Iron. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the iron's rating plate corresponds to your mains voltage.
- Do not leave the iron unattended while it is switched on or connected to the power supply.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron, power cord, or plug in water or any other liquid.
- Unplug the iron from the mains socket before filling with water, emptying, or cleaning.
- Do not operate the iron if it has been dropped, if there are visible signs of damage, or if it is leaking.
- Place the iron on a stable, heat-resistant surface when resting.
- The soleplate can become extremely hot. Avoid contact with skin.

3. PRODUCT FEATURES

The Rowenta DW6040 Eco Intelligence Steam Iron is designed for efficient and eco-friendly ironing. Key features include:

- **Eco Intelligence Technology:** The Eco Steam system saves up to 30% energy (compared to maximum setting) without compromising ironing efficiency. The eco-friendly design is made of 30% recycled material.

- **Powerful Steam Output:** Continuous steam output of 45 g/min for effective crease removal.
- **Steam Boost:** A powerful 180 g/min steam boost tackles stubborn creases and thick fabrics.
- **Precision Tip:** Designed to reach difficult areas for thorough ironing.
- **Microsteam 400 HD 3De Laser Soleplate:** Patented scratch-resistant soleplate with 400 micro-holes for optimal steam distribution and optimized energy consumption.
- **Vertical Steaming:** Ideal for delicate garments, suits, hanging items, and curtains.
- **Anti-Drip Function:** Prevents water stains on fabrics, even at low temperatures.
- **Integrated Anti-Calc System:** Helps prevent limescale build-up for long-lasting performance.
- **Ergonomic Handle:** Provides comfortable and smooth ironing.



Image 1: Overview of the Rowenta DW6040 Eco Intelligence Steam Iron, showcasing its white and green design with a precision tip and ergonomic handle.



Image 2: Graphic illustrating the Eco Intelligence technology, highlighting 30% energy saving and 30% recycled material for 100% efficiency.

4. SETUP

1. **Unpacking:** Carefully remove the iron from its packaging. Retain the packaging for storage or future transport.
2. **First Use:** Before first use, remove any protective film or stickers from the soleplate. It is normal for a small amount of smoke or odor to be produced during the first few minutes of use. This will disappear quickly.
3. **Filling the Water Tank:**
 - Ensure the iron is unplugged.
 - Open the water tank inlet cover.
 - Fill the tank with tap water up to the 'MAX' level indicator. Do not overfill.
 - Close the water tank inlet cover securely.
4. **Connecting to Power:** Plug the iron into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

1. **Temperature Setting:** Turn the thermostat dial to the desired temperature setting for your fabric type. Refer to the fabric care labels on your garments. The iron's indicator light will illuminate.
2. **Heating Up:** Wait for the indicator light to turn off, indicating that the iron has reached the selected temperature.
3. **Steam Ironing:**
 - Ensure the iron is at the correct temperature for steam (usually higher settings).
 - Adjust the steam control to the desired steam level.
 - For a powerful steam boost, press the steam boost button.
4. **Dry Ironing:** For dry ironing, set the steam control to the '0' position.
5. **Vertical Steaming:**

- Hang the garment on a hanger.
- Hold the iron vertically a few centimeters away from the fabric.
- Press the steam boost button repeatedly to release steam and remove wrinkles.

6. **Spray Function:** Press the spray button to moisten stubborn creases.

7. **After Use:** Unplug the iron and allow it to cool down completely before storing. Empty any remaining water from the tank.



Image 3: Close-up view of the iron's precision tip and spray nozzle, designed for reaching small areas and moistening fabrics.



Image 4: Top-down view of the Rowenta DW6040 iron resting on a dark fabric, showing the ergonomic handle and control buttons.

6. MAINTENANCE AND CLEANING

- **Cleaning the Soleplate:** If the soleplate becomes dirty, clean it with a damp cloth and a non-abrasive cleaner. Do not use metal scouring pads or abrasive cleaning agents.
- **Anti-Calc System:** The iron features an integrated anti-calc system. For optimal performance, regularly perform the self-clean function as described in the full manual (if available) or by following these general steps:
 - Fill the water tank.
 - Heat the iron to its maximum temperature.
 - Unplug the iron and hold it over a sink.
 - Activate the self-clean function (if a dedicated button exists) or shake the iron gently to allow water and steam to flush out mineral deposits.
 - Repeat if necessary.
- **Exterior Cleaning:** Wipe the exterior of the iron with a soft, damp cloth.
- **Storage:** Store the iron upright on its heel, with the cord neatly wrapped, once it has completely cooled down and the water tank is empty.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; thermostat set to 'OFF'.	Check power connection; try another outlet; set thermostat to desired temperature.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to '0'.	Fill water tank; increase temperature setting; adjust steam control.
Water drips from the soleplate.	Temperature too low for steam; anti-drip system not activated.	Increase temperature; wait for the iron to reach the set temperature before using steam.
White flakes or brown stains on fabric.	Limescale build-up; dirty soleplate.	Perform anti-calc self-clean function; clean the soleplate.

8. SPECIFICATIONS

- **Brand:** Rowenta
- **Model:** DW6040
- **Wattage:** 2500 W
- **Water Tank Capacity:** 0.3 L
- **Soleplate Material:** Stainless Steel (Microsteam 400 HD 3De Laser)
- **Continuous Steam Output:** 45 g/min
- **Steam Boost:** 180 g/min
- **Special Features:** Eco Intelligence Technology, Anti-Calc Function, Precision Tip, Anti-Drip Protection, Vertical Steaming
- **Product Dimensions:** 30L x 14W cm
- **Color:** White and Green

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Rowenta website. Keep your proof of purchase for warranty claims.