

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SHARDOR](#) /

› [SHARDOR Electric Coffee Grinder CG515B Instruction Manual](#)

SHARDOR CG515B

SHARDOR Electric Coffee Grinder

Model: CG515B

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the grinder from the outlet when not in use, before cleaning, or before adding/removing parts.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Avoid contact with moving parts. Ensure the lid is securely in place before operating.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors. This appliance is for household use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than its intended use.

PRODUCT OVERVIEW

Components

The SHARDOR Electric Coffee Grinder includes the following parts:

- Motor Base with Power Button
- Stainless Steel Grinding Cup with Blades
- Transparent Lid
- Coffee Powder Scoop
- Cleaning Brush

MULTI-FUNCTIONAL GRINDER

Grinding more than coffee beans.



Image: The SHARDOR Electric Coffee Grinder showing its main components: the motor base, grinding cup, transparent lid, coffee scoop, and cleaning brush.

SETUP

Before First Use

1. Unpack all components and remove any packaging materials.
2. Wipe the motor base with a damp cloth. Do not immerse it in water.
3. Wash the stainless steel grinding cup, transparent lid, coffee scoop, and cleaning brush with warm, soapy water. Rinse thoroughly and dry completely.

4. Ensure all parts are dry before assembly and use.

Assembly

1. Place the stainless steel grinding cup securely into the motor base.
2. Ensure the grinding cup is properly seated and locked into position.
3. The grinder is now ready for use.

OPERATING INSTRUCTIONS

Grinding Coffee Beans

1. Ensure the grinder is unplugged.
2. Add whole coffee beans to the grinding cup. Do not fill above the MAX line (approximately 1.4 oz / 40g).
3. Place the transparent lid securely onto the grinding cup. Ensure it is properly aligned and locked to activate the safety switch.
4. Plug the grinder into a standard electrical outlet.
5. Press and hold the power button to begin grinding. The grinding will stop when the button is released.
6. Monitor the grind consistency through the transparent lid. Refer to the 'Grind Settings' section for desired fineness.
7. Once the desired consistency is achieved, release the button and unplug the grinder.
8. Carefully remove the lid and pour out the ground coffee. Use the included scoop and brush to assist.

TRANSPARENT LID

Monitoring the status of beans grinding inside.



Image: The transparent lid allows you to monitor the grinding process and achieve your desired consistency.

MODERATE CAPACITY

Grind enough beans for 3-4 cups of fresh coffee.



3~4 CUPS



Image: The grinder can process enough beans for 3-4 cups of coffee.

Grinding Spices and Herbs

The SHARDOR Electric Coffee Grinder is also suitable for grinding various dry spices and herbs. Follow the same operating instructions as for coffee beans.

- Ensure spices are dry and free from moisture.
- Avoid grinding oily spices or nuts, as this may affect performance and cleaning.
- Clean the grinding cup thoroughly after grinding spices to prevent flavor transfer to coffee.

SMALL AND STYLISH



Image: The grinder can be used for various dry spices and herbs.

Instructional Video

Your browser does not support the video tag.

Video: Official product video demonstrating the SHARDOR Electric Coffee Grinder's features, including grinding coffee beans and spices, and preparing coffee.

GRIND SETTINGS

The fineness of the grind is determined by the duration of grinding. Pressing the power button for longer periods will result in a finer grind.

- **Coarse Grind:** Approximately 6 seconds of grinding. Suitable for French press.
- **Medium Grind:** Approximately 10 seconds of grinding. Suitable for drip coffee makers.
- **Fine Grind:** Approximately 15 seconds of grinding. Suitable for espresso machines.

You can stop grinding at any time to achieve your preferred consistency.

COARSE OR FINE, AS YOU WISH

Pulverize coffee beans from coarse to fine in seconds.



Image: Visual guide for achieving different grind consistencies based on grinding time.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. Always unplug the grinder before cleaning.
2. Remove the transparent lid and the grinding cup from the motor base.
3. Use the included cleaning brush to remove any residual coffee grounds or spices from the grinding cup and blades.
4. Wash the grinding cup, lid, scoop, and brush with warm, soapy water. Rinse thoroughly and dry completely.
5. Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water.
6. Ensure all parts are completely dry before reassembling or storing the grinder.

Storage

Store the grinder in a cool, dry place when not in use. Its compact design allows for easy storage in cabinets or drawers.

PRACTICAL AND COMPACT

Small enough to fit in any cabinets or drawers.



Image: The compact design allows for convenient storage.

TROUBLESHOOTING

If you encounter any issues with your SHARDOR Electric Coffee Grinder, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grinder does not turn on.	<ol style="list-style-type: none"> 1. Not plugged in. 2. Lid not securely closed. 3. Power button not pressed. 	<ol style="list-style-type: none"> 1. Ensure the power cord is firmly plugged into a working outlet. 2. Make sure the transparent lid is properly aligned and locked into place. 3. Press and hold the power button firmly.
Inconsistent grind.	<ol style="list-style-type: none"> 1. Insufficient grinding time. 2. Overfilling the grinding cup. 	<ol style="list-style-type: none"> 1. Increase grinding time for a finer consistency. 2. Do not exceed the MAX fill line. Grind in smaller batches if necessary.
Motor sounds strained.	<ol style="list-style-type: none"> 1. Overfilling. 2. Grinding hard, dense items. 	<ol style="list-style-type: none"> 1. Reduce the amount of material in the grinding cup. 2. Ensure items are suitable for grinding. Avoid extremely hard items that may damage the blades.

SPECIFICATIONS

Detailed specifications for the SHARDOR Electric Coffee Grinder:

Feature	Detail
Model	CG515B
Product Dimensions	3.7"L x 3.7"W x 6.8"H
Item Weight	1.56 pounds (0.71 Kilograms)
Material	Stainless Steel (Blades and Grinding Cup)
Wattage	200 watts
Capacity	1.4 oz / 40g (coffee beans)

SMALL AND STYLISH



Image: The compact dimensions of the grinder for easy placement.

WARRANTY AND SUPPORT

SHARDOR products are designed and manufactured to the highest quality standards. For information regarding warranty coverage or technical support, please refer to the warranty card included with your product or visit the official SHARDOR website. If you have any questions or require assistance, please contact SHARDOR customer service.