

[Manuals.plus](#) /

› [SINGER](#) /

› Singer Maxiwave 25CG Convection Microwave Oven User Manual

## SINGER Maxiwave 25CG

# Singer Maxiwave 25CG Convection Microwave Oven User Manual

Model: Maxiwave 25CG | Capacity: 25 Litres | Power: 1950 Watts

## 1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Always use oven mitts when handling hot items from the oven.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The microwave oven is for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Singer Maxiwave 25CG microwave oven.



Image 2.1: Front view of the Singer Maxiwave 25CG Convection Microwave Oven, showcasing its silver and black design with control panel and door handle.

## Key Features:

- **25 Litre Capacity:** Suitable for medium to large families.
- **1950 Watts Power:** Efficient cooking and heating.
- **8 Auto Cooking Menus:** Pre-programmed settings for common dishes.
- **11 Microwave Power Levels:** For precise control over cooking intensity.
- **Multi-stage Cooking:** Allows programming multiple cooking stages.
- **Weight Defrost:** Defrosts food based on its weight.
- **Convection Function:** For baking and roasting.
- **Grill & Combination Functions:** For grilling and combined cooking modes.
- **Quick Start Function:** For immediate cooking at full power.
- **Child Lock:** Enhances safety by preventing accidental operation.



8 Auto  
Cooking Menus



11 Microwave  
Power Levels



Turntable  
Tray



ON PRODUCT

Image 2.2: Visual representation of key features including 8 Auto Cooking Menus, 11 Microwave Power Levels, and the presence of a Turntable Tray inside the oven.



1950  
Watts



25 Ltr.  
Capacity



Weight  
Defrost



Image 2.3: Icons highlighting the oven's 1950 Watts power, 25 Litre Capacity, and the convenient Weight Defrost feature.

### Included Accessories:

- Baking Tray
- Grilling Rack

## INCLUDED ACCESSORIES



Baking  
Tray



Grilling  
Rack



ON PRODUCT

Image 2.4: The Baking Tray and Grilling Rack, which are included with the oven for various cooking methods.

### 3. SETUP AND INSTALLATION

#### Unpacking:

1. Remove all packaging materials from inside and outside the oven.
2. Check the oven for any damage such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Retain the carton and packing materials for future use or dispose of them responsibly.

#### Placement:

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation: leave a minimum of 20 cm (8 inches) clearance above the oven, 10 cm (4 inches) at

the rear, and 5 cm (2 inches) on both sides.

- Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.
- Do not place the oven in a cabinet unless specifically designed for built-in installation. This model is designed for freestanding use.

### Electrical Connection:

- Ensure the voltage indicated on the rating label matches your household power supply.
- Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

---

This section details how to use the various functions of your microwave oven.

### Control Panel Overview:

The control panel features a digital display, function buttons, and a rotary knob for setting time and power.

### Setting the Clock:

1. Press the 'Clock' button.
2. Rotate the knob to set the hour. Press 'Clock' again.
3. Rotate the knob to set the minutes. Press 'Clock' to confirm.

### Basic Microwave Cooking:

1. Place food in a microwave-safe container inside the oven.
2. Close the door.
3. Press the 'Microwave' button.
4. Rotate the knob to select the desired power level (1-11).
5. Rotate the knob to set the cooking time.
6. Press 'Start' to begin cooking.

### Grill Function:

1. Place food on the grilling rack (if applicable) in a heat-resistant dish.
2. Press the 'Grill' button.
3. Rotate the knob to set the grilling time.
4. Press 'Start'.

### Convection Function:

This function is ideal for baking and roasting, similar to a conventional oven.

1. Press the 'Convection' button.
2. Rotate the knob to select the desired temperature.

3. Press 'Convection' again to confirm the temperature.
4. Rotate the knob to set the cooking time.
5. Press 'Start'.



Image 4.1: Icons representing the Grill & Combination Functions, Convection Function, and Quick Start feature, indicating versatile cooking options.

### Combination Cooking:

Combines microwave power with grill or convection heat for faster and more even cooking.

1. Press the 'Micro+Grill' or 'Micro+Convection' button.
2. Rotate the knob to select the desired power/temperature combination.
3. Rotate the knob to set the cooking time.
4. Press 'Start'.

## Auto Cooking Menus:

The oven has 8 pre-programmed menus for convenience.

1. Press the 'Auto Menu' button repeatedly to cycle through the menu options, or rotate the knob to select.
2. Once the desired menu is displayed, rotate the knob to select the food weight or quantity.
3. Press 'Start'.

## Defrost Function (Weight Defrost):

1. Place the frozen food in the oven.
2. Press the 'Defrost' button.
3. Rotate the knob to select the weight of the food.
4. Press 'Start'. The oven will automatically calculate the defrosting time.

## Quick Start Function:

For quick heating at full microwave power.

- Press the 'Quick Start' button. Each press adds 30 seconds of cooking time at 100% microwave power.
- Press 'Start' to begin.

## Child Lock:

To prevent unsupervised operation, especially by children.

- **To activate:** Press and hold the 'Stop/Cancel' button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the 'Stop/Cancel' button for 3 seconds again. The lock indicator will disappear.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

### General Cleaning:

- Always unplug the oven before cleaning.
- Clean the oven cavity after every use with a damp cloth. For stubborn stains, use a mild detergent.
- The outer surfaces should be cleaned with a damp cloth. Do not allow water to enter the ventilation openings.
- The door and door seals should be cleaned frequently with a soft, damp cloth to remove any spills or splatters.
- The glass turntable and roller ring can be washed in mild soapy water or in a dishwasher.
- Do not use abrasive cleaners, steel wool, or harsh chemicals on any part of the oven.

### Odor Removal:

To remove odors from the oven cavity, combine a cup of water with the juice and skin of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes, then let it stand in the oven for another 5 minutes before removing.

## 6. TROUBLESHOOTING

---

If you encounter issues with your oven, refer to the following common problems and solutions before contacting service.

| Problem                | Possible Cause                                                                                                    | Solution                                                                                                                          |
|------------------------|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Oven does not start    | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated. | Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker; Deactivate child lock.                |
| Food not heating       | Door not closed properly; Cooking time/power level set too low; Food not suitable for microwave.                  | Close door firmly; Increase cooking time/power; Use microwave-safe dishes.                                                        |
| Sparkling inside oven  | Metal or foil in oven; Dish not microwave-safe; Food residue.                                                     | Remove all metal objects; Use only microwave-safe dishes; Clean oven cavity thoroughly.                                           |
| Turntable not rotating | Turntable not properly placed; Roller ring dirty or obstructed; Motor malfunction.                                | Ensure turntable and roller ring are correctly positioned; Clean roller ring and oven floor; Contact service if problem persists. |
| Oven light not working | Bulb burnt out.                                                                                                   | Contact qualified service personnel for bulb replacement.                                                                         |

## 7. SPECIFICATIONS

Technical details for the Singer Maxiwave 25CG Convection Microwave Oven.

| Feature                 | Specification                     |
|-------------------------|-----------------------------------|
| Brand                   | SINGER                            |
| Model                   | Maxiwave 25CG                     |
| Capacity                | 25 Litres                         |
| Energy Consumption      | 1950 Watts                        |
| Installation Type       | Freestanding                      |
| Oven Cooking Mode       | Microwave, Grill, Convection Heat |
| Colour                  | Silver/Black                      |
| Voltage                 | 230 Volts (AC)                    |
| Defrost System          | Weight Defrost                    |
| Door Orientation        | Left                              |
| Material (Inner/Outer)  | Stainless Steel                   |
| Item Weight             | 18 kg                             |
| Item Dimensions (LxWxH) | 56 x 47 x 35 Centimeters          |

| Feature          | Specification                                                                                                |
|------------------|--------------------------------------------------------------------------------------------------------------|
| Special Features | 11 Microwave Power Levels, 8 Auto Cooking Menus, Convection Function, Defrost, Grill & Combination Functions |

## 8. WARRANTY AND SUPPORT

### Warranty Information:

This Singer Maxiwave 25CG Convection Microwave Oven comes with a **2-year product warranty** from the date of purchase. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

### Customer Support:

For service, support, or warranty claims, please contact Singer customer service. Refer to the contact information provided with your product packaging or visit the official Singer website for details. When contacting support, please have your product model number (Maxiwave 25CG) and purchase date ready.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B07SQ9DLJQ>

More documents and user manuals: <https://manuals.plus/>