

Tiger JPC-G100

Tiger JPC-G100WA Pressure IH Rice Cooker

INSTRUCTION MANUAL

1. Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Tiger JPC-G100WA Pressure IH Rice Cooker. Please read this manual thoroughly before first use and retain it for future reference.

2. Safety Precautions

Observe the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the power cord is securely plugged into a grounded outlet.
- Do not immerse the main unit in water or other liquids.
- Keep hands and face away from the steam vent during operation to avoid burns.
- Do not operate the appliance if the power cord or plug is damaged.
- Always unplug the rice cooker before cleaning or when not in use.
- This appliance is for household use only.

3. Product Overview

The Tiger JPC-G100WA is a Pressure Induction Heating (IH) rice cooker designed for efficient rice preparation. It features a durable inner pot and an intuitive control panel.



Figure 3.1: Front view of the Tiger JPC-G100WA Pressure IH Rice Cooker. The image displays the white exterior, the digital display, and the control buttons for various cooking functions.



Figure 3.2: Side view of the Tiger JPC-G100WA Pressure IH Rice Cooker, showing its compact and rounded design.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Non-stick cooking pot.
- **Inner Lid:** Detachable for cleaning.
- **Measuring Cup:** For precise rice measurement.
- **Rice Spatula:** For serving cooked rice.

4. Setup

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Wash the inner pot, inner lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, level, and heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. The display will illuminate.

5. Operating Instructions

5.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water up to the corresponding water level

mark inside the pot for the type and quantity of rice being cooked.

4. **Place Inner Pot:** Ensure the inner pot is dry on the outside and place it securely into the main unit. Close the outer lid firmly.
5. **Select Menu:** Use the control panel buttons to select the desired cooking menu (e.g., White Rice, Brown Rice).
6. **Start Cooking:** Press the 'Start' button. The cooking indicator will light up, and the cooking process will begin.
7. **Completion:** Once cooking is complete, the rice cooker will typically switch to 'Keep Warm' mode automatically.

5.2 Advanced Cooking Features

This rice cooker utilizes a **Pressure IH (Induction Heating)** system with a unique **360° design** and **variable W pressure** to optimize heat distribution and cooking efficiency. The inner pot features specialized coatings to enhance convection and boiling, contributing to consistent rice texture.



Figure 5.1: Diagram illustrating the inner pot's dual-layer coating. The upper layer enhances convection, while the lower layer improves boiling efficiency, ensuring even heat distribution.

ねぼりと弾力を引き出す 可変W圧力炊き



Figure 5.2: Illustration of the variable pressure cooking mechanism. This system adjusts pressure during cooking to achieve optimal rice texture and flavor.

5.3 Specialized Menus

The JPC-G100WA includes various specialized cooking menus:

- **Quick Cook:** For faster rice preparation when time is limited.
- **Frozen Rice:** A dedicated setting for reheating or cooking rice intended for freezing.
- **Healthy Menus:** Options for cooking different grains like barley rice.

1合 最短17分

少量高速

電子レンジでも美味しく 冷凍ご飯

専用メニューを搭載

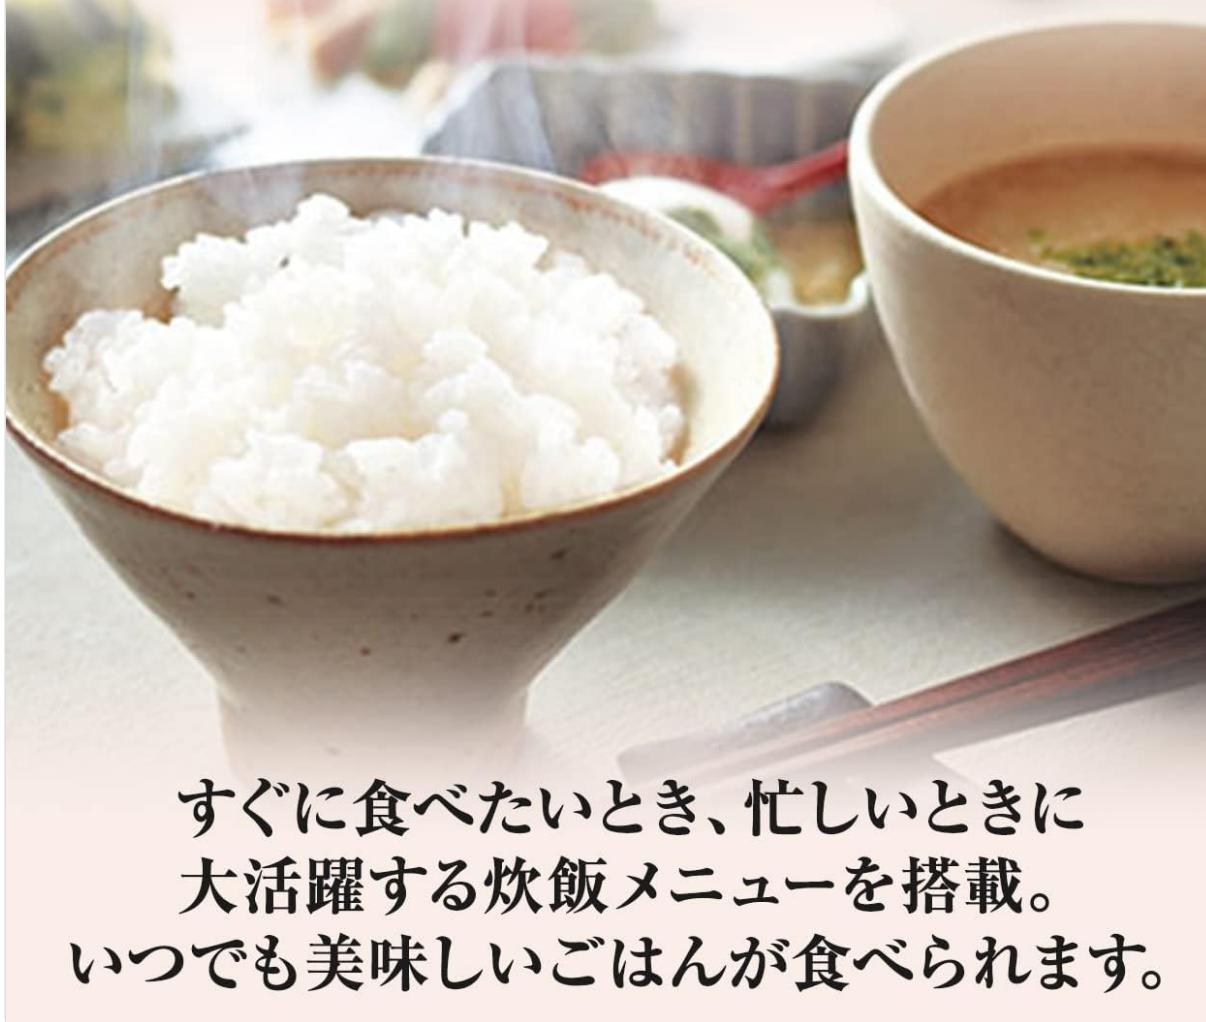


Figure 5.3: Display showing menu options for quick cooking and preparing rice for freezing. These functions are designed for convenience and specific rice preparation needs.


ヘルシーメニューに対応

「麦めし」メニュー

大麦をさまざまな料理にアレンジ。



押麦

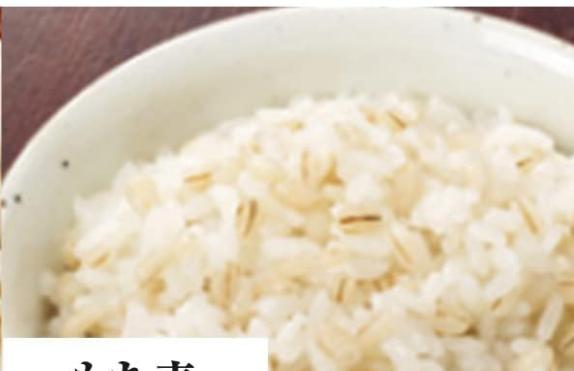

もち麦

「ゆで麦」コース

ヘルシーな食生活の楽しみが広がります。



※メニュー例



Figure 5.4: Examples of healthy menu options, specifically showing different preparations of barley rice. This feature supports diverse dietary preferences.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your rice cooker. Always unplug the unit and allow it to cool completely before cleaning.

6.1 Daily Cleaning

- Inner Pot:** Wash with warm, soapy water using a soft sponge. Avoid abrasive cleaners or scrubbers that could damage the non-stick coating.
- Inner Lid:** Detach the inner lid and wash it with warm, soapy water. Rinse and dry thoroughly.
- Main Unit Exterior:** Wipe with a damp cloth. Do not use harsh chemicals.

6.2 Cleaning Removable Parts

The rice cooker is designed with easily removable parts for convenient cleaning.



Figure 6.1: Image demonstrating the easily removable components of the rice cooker, such as the inner pot and inner lid, facilitating thorough cleaning.

7. Troubleshooting

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Rice is undercooked or hard.	Insufficient water; incorrect cooking mode selected.	Add correct amount of water; select appropriate cooking mode.
Rice is overcooked or mushy.	Too much water; incorrect cooking mode selected.	Reduce water amount; select appropriate cooking mode.
Rice cooker does not turn on.	Power cord not plugged in; power outage.	Check power connection; verify power supply.
Steam leaks from lid.	Lid not closed properly; inner lid gasket dirty or damaged.	Ensure lid is closed firmly; clean or replace inner lid gasket.

8. Specifications

Feature	Detail
Brand	Tiger
Model Number	JPC-G100WA
Capacity	1 Liters (5.5 cups)
Power Source	Corded Electric
Voltage	100 Volts
Wattage	1200 Watts
Color	White
Material	Stainless Steel
Special Feature	Removable Bowl
Product Dimensions	11.89 x 9.92 x 8.31 inches
Item Weight	0.212 ounces (approx. 6 grams)
Included Components	Instruction Manual
Product Care Instructions	Hand Wash

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or contact Tiger customer service directly. Keep your purchase receipt as proof of purchase.

Related Documents - JPC-G100

	<p>TIGER JAJ-A55S Electric Rice Cooker Operating Instructions Manual</p> <p>This manual provides operating instructions, safety precautions, and troubleshooting tips for the TIGER JAJ-A55S Electric Rice Cooker. Learn how to cook rice, use various menus, and maintain your appliance.</p>
	<p>TIGER JKT-W Series IH Rice Cooker Operating Instructions</p> <p>Explore the TIGER JKT-W Series IH Rice Cooker operating instructions for models JKT-W10W and JKT-W18W. This comprehensive manual provides essential safety guidelines, component details, menu options, cooking steps, timer functions, Keep Warm features, cleaning advice, and troubleshooting tips for your TIGER rice cooker. Designed for household use, it ensures safe and optimal performance.</p>
	<p>TIGER JBX-A18N Rice Cooker / Warmer Operating Instructions</p> <p>Operating instructions for the TIGER JBX-A18N Rice Cooker / Warmer, covering safety, usage, cleaning, and troubleshooting for household use.</p>
	<p>Tiger JBV-A10U / JBV-A18U Electric Rice Cooker User Manual</p> <p>This user manual provides comprehensive instructions for the TIGER JBV-A10U and JBV-A18U electric rice cookers, covering operation, safety guidelines, and maintenance. Available in multiple languages.</p>
	<p>Tiger Bengal Brute Assemblies: Mounting and Operating Instructions</p> <p>Comprehensive guide for Tiger Bengal Brute Assemblies, detailing safety, assembly, operation, maintenance, and parts for CNH T6010-80 and MAXXUM tractors.</p>
	<p>Tiger Boston Safety Anti-Slip Grip Installation and Care Guide</p> <p>Official installation and cleaning instructions for the Tiger Boston Safety anti-slip grip, ensuring secure and safe bathroom assistance.</p>