

[Manuals.plus](#) /

› [Zyliss](#) /

› Zyliss Easy Control Handheld Slicer - Official Instruction Manual

Zyliss E900044U

Zyliss Easy Control Handheld Slicer - Instruction Manual

Model: E900044U

INTRODUCTION

The Zyliss Easy Control Handheld Slicer is a versatile kitchen tool designed for efficient and safe slicing of various fruits and vegetables. It features two stainless steel blades for uniform and julienne cuts, adjustable slicing thickness, and an ergonomic design for comfortable use. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your slicer.



Figure 1: Zyliss Easy Control Handheld Slicer in original packaging.

SAFETY INFORMATION

WARNING: Blades are extremely sharp. Exercise extreme caution when handling and cleaning the slicer.

- Always use the provided food holder to protect your hands when slicing.
- Keep fingers away from the blades during operation and cleaning.
- Store the slicer in a safe place, out of reach of children.
- Ensure the slicer is placed on a stable, non-slip surface during use.

Hand protection

Food holder protects hands when slicing, slide lever allows for easy adjustment of slicing thickness.



Figure 2: The food holder is essential for hand protection during slicing.

SETUP

Before first use, wash all components of the slicer in warm, soapy water, rinse thoroughly, and dry. Inspect the slicer for any damage. Do not use if any part is damaged.

Components:

- Slicer Body with integrated blades
- Food Holder
- Blade Adjustment Lever



Figure 3: Overview of the Zyliss Handheld Slicer, showing its compact design and dimensions.

OPERATING INSTRUCTIONS

The Zyliss Easy Control Handheld Slicer offers both uniform slicing and julienne cutting capabilities with adjustable thickness.

Adjusting Slicing Thickness:

1. Locate the blade adjustment lever on the side of the slicer.
2. Slide the lever to select your desired slicing thickness. The slicer typically offers multiple settings for fine to thick slices.

Switching to Julienne Blades:

1. Ensure the slicer is clean and dry.
2. Push the button or lever (if applicable) to engage the julienne blades. Refer to the markings on the slicer for specific blade engagement.



Figure 4: Detail of the uniform slicing blade.



Figure 5: Detail of the julienne blade for fine strips.

Slicing Procedure:

1. Place the slicer on a stable surface or hold it firmly over a bowl. The non-slip feet provide stability.
2. Secure the fruit or vegetable onto the food holder.
3. With firm, even pressure, slide the food holder and its contents across the blade in a smooth, continuous motion.
4. Repeat until the desired amount of food is sliced.



The Zyliss logo is displayed in a dark blue oval on the left. Below it, a collection of white and blue Zyliss kitchen tools is arranged on a white surface. These include a hand-held slicer, a grater, a peeler, a zester, a citrus squeezer, a tomato slicer, and a vegetable chopper. Various fresh ingredients are also shown: a bowl of green salad, a bowl of diced vegetables, a halved avocado, a lemon, a tomato, and a piece of cheese.

Designed to Delight

It's a belief that all Zyliss products should not only do a brilliant job, simply and efficiently, but also make our customers smile every time they use them.

+ | Switzerland 1951

Figure 6: Demonstrating the slicing action with a tomato.

Your browser does not support the video tag.

Video 1: Official Zyliss demonstration of the Handheld Slicer in use, showing both slicing and julienne functions.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Zyliss Handheld Slicer.

Cleaning:

- The Zyliss Easy Control Handheld Slicer is **dishwasher safe**. Place it on the top rack for best results.
- For hand washing, use warm, soapy water and a brush to clean around the blades. Always use caution due to sharp edges.
- Rinse thoroughly and dry immediately to prevent water spots and maintain blade sharpness.

Storage:

Store the slicer with the blade adjustment lever set to the safest, most retracted position. Keep the food holder attached to protect the blades and for convenient storage.

TROUBLESHOOTING

If you encounter issues with your slicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Uneven slices	Inconsistent pressure or movement during slicing.	Apply even pressure and maintain a steady, continuous motion across the blade. Ensure food is securely held by the food holder.
Difficulty slicing hard vegetables	Blade setting too thin or food too hard.	Adjust to a thicker slice setting. For very hard vegetables, consider pre-softening slightly or using a different tool if the slicer struggles.
Food sticking to blade	Residue buildup or food moisture.	Ensure the slicer is clean. For sticky foods, a light spray of cooking oil on the blade may help, or slice immediately after washing and drying.

SPECIFICATIONS

- **Brand:** Zyliss
- **Model Number:** E900044U
- **Product Dimensions:** 2.44"L x 15.75"W x 5.16"H
- **Material:** Nylon body, Metal (Stainless Steel) blades
- **Color:** White/Red
- **Special Feature:** Multipurpose (Slicing and Julienne)
- **Recommended Uses:** Vegetable, Fruit
- **Care Instructions:** Dishwasher Safe
- **Item Weight:** 141 Grams (5 ounces)
- **Blade Shape:** V Shape

- **Operation Mode:** Manual
- **UPC:** 054067000442

WARRANTY AND SUPPORT

Zyliss products are designed for durability and performance. For specific warranty details, please refer to the product packaging or the official Zyliss website. If you require support or have questions about your Zyliss Easy Control Handheld Slicer, please contact Zyliss customer service through their official channels.

Online Support: Visit the official Zyliss website for FAQs and contact information.