

Manuals.plus /

› AIDITIYMI /

› AIDITIYMI BN59-01267A Replacement Remote Control User Manual for Samsung LCD TV HDTV

## AIDITIYMI BN59-01267A

# AIDITIYMI BN59-01267A Replacement Remote Control User Manual

Model: BN59-01267A | Brand: AIDITIYMI

## INTRODUCTION

This manual provides instructions for the AIDITIYMI BN59-01267A replacement remote control, designed for use with various Samsung LCD TV and HDTV models. This remote control offers direct functionality without the need for complex programming or pairing.

### Compatible Samsung TV Models:

- LN32C450E1V, M4500 Series, M5300 Series
- UN24M4500A, UN28M4500A, UN28M4500AF, UN32M4500A, UN32M4500AF
- UN32M530, UN32M5300, UN32M5300AF, UN32M5300AFXZA, UN32M530D, UN32M530DAFXZA
- UN40M5300, UN40M5300A, UN40M5300AFXZA, UN40M530D, UN40M530DAFXZA, UN40MU6290FXZA
- UN43M5300, UN43M530D, UN43MU6290FXZA
- UN49M5300, UN49M5300A, UN49M5300AF, UN49M530D, UN49M530DA, UN49M530DAF, UN49M530DAFXZA, UN49MU6290FXZA
- UN50M5300, UN50M5300AF, UN50M5300AFXZA, UN50M530D
- UN55MU6290FXZA, UN65MU6290FXZA, UN24M4500

## SETUP

### Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards or press the latch (if present) and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



**Figure 1:** Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA

battery insertion.

## **Initial Use**

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your Samsung TV and press the desired function button.

## **OPERATING INSTRUCTIONS**

---

This section details the primary functions of the buttons on your AIDITIYMI BN59-01267A remote control.



**Figure 2:** Front view of the AIDITIYMI BN59-01267A remote control, highlighting the layout of all functional buttons.

**Power ( ):** Turns the TV on or off.

**Source:** Selects the input source (e.g., HDMI 1, AV, Component).

**Number Buttons (0-9):** Directly selects TV channels or enters numerical input.

**PRE-CH:** Returns to the previously viewed channel.

**Volume (+/-):** Adjusts the TV's volume level.

**Mute ( ):** Mutes or unmutes the TV's audio.

**Channel (CH ^ / v):** Changes TV channels up or down.

**CH LIST:** Displays the channel list.

**E-MANUAL:** Accesses the electronic user manual (if supported by TV).

**Home (⏠):** Navigates to the TV's Smart Hub or Home screen.

**SLEEP:** Sets the TV's sleep timer.

**SETTINGS:** Opens the TV's settings menu.

**INFO (i):** Displays information about the current program or input.

**Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.

**RETURN (↶):** Returns to the previous menu or screen.

**EXIT:** Exits the current menu or application.

**Color Buttons (A, B, C, D):** Provide access to specific functions within certain menus or applications, as indicated on the TV screen.

**P.SIZE:** Adjusts the picture size/aspect ratio.

**CC:** Toggles Closed Captions on or off.

**REC:** Initiates recording (if supported by TV and connected device).

**Playback Controls ( , ◀ , ▶ , ):**  Control media playback (Rewind, Play, Pause, Fast Forward, Skip).

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

### Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for several months to prevent leakage.

## TROUBLESHOOTING

---

If you experience issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
  - Ensure the batteries are correctly installed with the proper polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Buttons Not Functioning:**
  - Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be causing sticking.
  - If only specific buttons are not working, it might indicate internal damage. Consider replacing the remote.
- **Intermittent Operation:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

## SPECIFICATIONS

---

Feature	Detail
Model Number	BN59-01267A
Brand	AIDITIYMI
Compatible Devices	Samsung LCD TV, HDTV (M4500, M5300 Series, etc.)
Power Source	2 x AAA Alkaline Batteries (not included)
Dimensions	6 x 2 x 0.6 inches (approximately)
Item Weight	2 ounces (approximately, without batteries)
Color	Black
Special Feature	Ergonomic design

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage, please refer to the documentation provided with your purchase or contact the retailer. For technical support or further assistance, please reach out to the AIDITIYMI customer service department.