

TOYOTOMI 11815498

TOYOTOMI Multi-Remote Control 11815498 for Window Air Conditioners User Manual

Model: 11815498

1. PRODUCT OVERVIEW

This document provides instructions for the TOYOTOMI Multi-Remote Control, model 11815498. This remote control is designed as a substitute for original TOYOTOMI window air conditioner remotes, specifically models RC-7, RC-8, and RC-9. While the number of buttons and their design may differ from your original remote, the existing button functions are maintained for compatible air conditioner units.

Before use, please ensure compatibility with your specific TOYOTOMI window air conditioner model. If you have any questions regarding compatibility, please contact TOYOTOMI customer support.



Image 1.1: TOYOTOMI Multi-Remote Control 11815498. This image displays the front view of the remote control, showing its buttons and display area.

2. COMPATIBLE MODELS

This remote control is compatible with the following TOYOTOMI window air conditioner models:

- TIW-A18DSE
- TIW-A18DE
- TIW-A18FSE
- TIW-A18GSE
- TIW-A180BSI
- TIW-A180CSI
- TIW-A18H
- TIW-A18J
- TIW-A18K
- TIW-A18L
- TIW-A180B
- TIW-A180C
- DW-A18H
- YW-A18K
- DW-A18K
- DW-A18C
- TIW-A160B
- TIW-A160C
- TIW-A16J
- TIW-A16K
- TIW-A16E
- TIW-A16F
- TIW-A16H
- DW-A16K
- DW-A16C

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two new AAA batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

- **Power Button:** Press to turn the air conditioner ON or OFF.
- **Temperature Adjustment Buttons (▲/▼):** Use these buttons to increase or decrease the desired temperature setting.
- **Mode Button:** Press repeatedly to cycle through available operating modes (e.g., Cool, Dry, Fan).

4.2 Advanced Functions

- **Fan Speed Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Timer Button:** Sets the ON/OFF timer for the air conditioner. Refer to your air conditioner's main manual for detailed timer programming.
- **Swing Button:** Activates or deactivates the automatic louver swing function.

Important: Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.

5. MAINTENANCE

5.1 Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and then wipe dry immediately. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

5.2 Storage

When not in use for extended periods, remove the batteries from the remote control to prevent leakage and corrosion. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote control is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm that the remote control is pointed directly at the air conditioner.
- **Limited operating range:**
 - Replace batteries if they are low.
 - Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the infrared signal.
- **Some buttons do not work:**
 - This remote is a substitute. Some functions or buttons present on the original remote may not be available or may have different labels. Refer to the compatible models list and the basic/advanced functions section.

7. SPECIFICATIONS

Brand	TOYOTOMI
Model Number	11815498
Features	Substitute Remote Control
Compatible Devices	Window Air Conditioners (TOYOTOMI RC-7, RC-8, RC-9 series and listed models)
Connectivity Technology	Infrared (IR)
Number of Buttons	12

8. WARRANTY AND SUPPORT

This TOYOTOMI product is covered by a standard manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official TOYOTOMI website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact TOYOTOMI customer service through their official channels.