

M4 Plus

Generic M4 Plus WiFi HDMI Dongle User Manual

Model: M4 Plus

INTRODUCTION

Thank you for choosing the Generic M4 Plus WiFi HDMI Dongle. This device allows you to wirelessly display content from your smartphone, tablet, laptop, or desktop onto a larger screen such as a TV or monitor. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your M4 Plus dongle to ensure optimal performance.

PRODUCT OVERVIEW

The M4 Plus WiFi HDMI Dongle is a compact wireless display receiver that supports various casting protocols like Airplay, DLNA, and Miracast. It is designed for cross-platform compatibility, making it suitable for use with a wide range of devices.

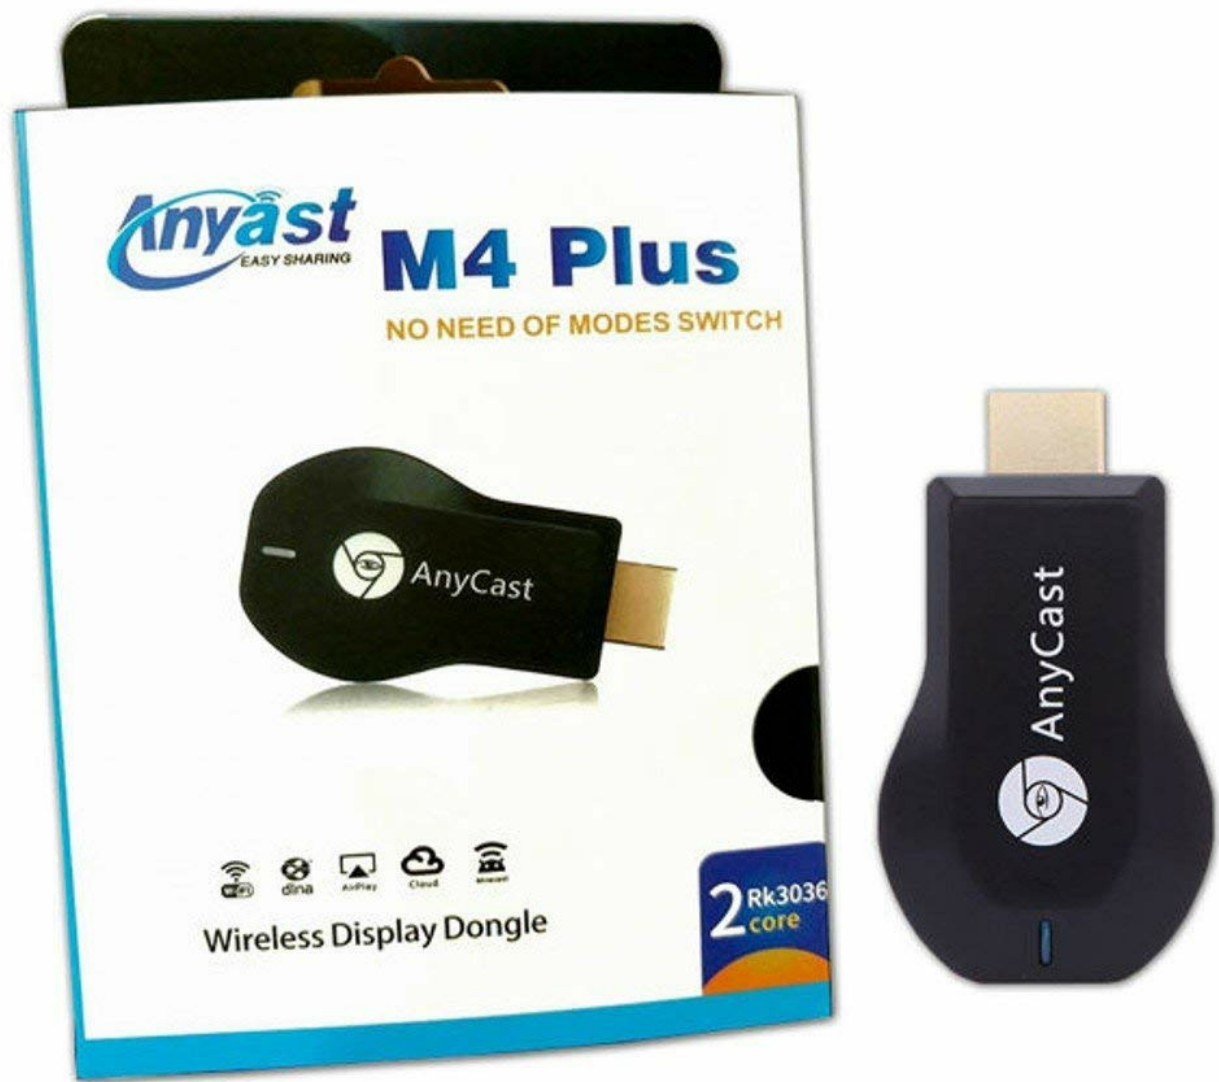


Image: Overview of the M4 Plus WiFi HDMI Dongle and its connectivity options with different devices.

Key Features:

- Supports Airplay, DLNA, and Miracast standards for broad compatibility.
- Compatible with TV, Laptop, Desktop, Tablet, and all Smartphones.
- Plug and play functionality, no application download required for basic use.
- Supports 1080p high-definition display.
- Operates on a Linux operating system for ease of use.



Image: Detailed list of product features.

SETUP INSTRUCTIONS

Follow these steps to set up your M4 Plus WiFi HDMI Dongle:

1. **Connect to Power:** Connect the micro USB end of the provided USB cable to the M4 Plus dongle. Connect the standard USB end of the cable to a USB power adapter (5V/1A recommended, not always included) or a USB port on your TV that provides sufficient power.
2. **Connect to Display:** Plug the HDMI connector of the M4 Plus dongle directly into an available HDMI port on your TV or monitor.
3. **Select HDMI Input:** Turn on your TV/monitor and use its remote control to select the corresponding HDMI input source to which the dongle is connected.
4. **Initial Screen:** Once connected, you should see the M4 Plus startup screen on your TV, which typically displays setup instructions, including a Wi-Fi network name (SSID) and password.
5. **Connect Your Device:** On your smartphone, tablet, or laptop, connect to the Wi-Fi network broadcast by the M4 Plus dongle (SSID and password shown on the TV screen).
6. **Configure Internet (Optional):** Open a web browser on your connected device and navigate to the IP address displayed on the TV screen (e.g., 192.168.49.1). This will open the dongle's settings page. From here, you can connect the dongle to your home Wi-Fi network for internet access and firmware updates.

OPERATING INSTRUCTIONS

After successful setup, you can begin mirroring or casting content from your devices.

For Android Devices (Miracast/Screen Mirroring):

1. Ensure your Android device is connected to the same Wi-Fi network as the M4 Plus dongle (or directly to the dongle's Wi-Fi if not connected to home Wi-Fi).

2. Navigate to your device's screen mirroring settings. This is often found under 'Settings' > 'Connected devices' > 'Connection preferences' > 'Cast' or 'Smart View', 'Wireless Display', 'Screen Mirroring', etc.
3. Select the M4 Plus dongle from the list of available devices. Your device's screen should now be mirrored on your TV.

For iOS Devices (Airplay):

1. Ensure your iOS device is connected to the same Wi-Fi network as the M4 Plus dongle.
2. Swipe down from the top-right corner (or up from the bottom for older models) to open the Control Center.
3. Tap 'Screen Mirroring'.
4. Select the M4 Plus dongle from the list. Your iOS device's screen should now be mirrored on your TV.

For Windows/Mac Laptops (DLNA/Miracast/Airplay):

1. Ensure your laptop is connected to the same Wi-Fi network as the M4 Plus dongle.
2. **Windows:** Press the Windows key + P, then select 'Connect to a wireless display' or 'Duplicate/Extend'. Choose the M4 Plus dongle.
3. **Mac:** Use Airplay from the menu bar (if available) or compatible casting software.

MAINTENANCE

To ensure the longevity and optimal performance of your M4 Plus WiFi HDMI Dongle, follow these simple maintenance guidelines:

- **Keep Clean:** Gently wipe the dongle with a soft, dry cloth to remove dust. Avoid using liquid cleaners or abrasive materials.
- **Proper Storage:** When not in use, store the dongle in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handle with Care:** Avoid dropping the device or subjecting it to strong impacts. Do not bend or twist the HDMI connector.
- **Power Supply:** Always use a stable 5V/1A USB power source. Insufficient power can lead to unstable operation.
- **Firmware Updates:** Periodically check the dongle's settings page (accessed via its IP address) for available firmware updates to improve performance and compatibility.

TROUBLESHOOTING

If you encounter issues with your M4 Plus WiFi HDMI Dongle, refer to the following troubleshooting tips:

- **No Display on TV:**
 - Ensure the dongle is securely plugged into the HDMI port.
 - Verify that the TV is set to the correct HDMI input source.
 - Check if the dongle is receiving adequate power (the indicator light should be on). Try a different USB power adapter or TV USB port.
- **Unstable Connection or Lag:**
 - Ensure your casting device is close to the dongle and your Wi-Fi router to minimize interference.
 - Reduce the number of active devices on your Wi-Fi network.
 - Check for and install any available firmware updates for the dongle.
 - Ensure your power supply is stable and sufficient (5V/1A).

- **Cannot Connect to Dongle's Wi-Fi:**

- Restart the dongle by unplugging and replugging its power cable.
- Ensure you are entering the correct password displayed on the TV screen.

- **No Audio:**

- Check the volume settings on both your casting device and the TV.
- Ensure your TV's audio output is correctly configured.

- **Compatibility Issues:**

- While the dongle supports various protocols, some older devices or specific applications might have limited compatibility.
- Ensure your device's operating system is up to date.

SPECIFICATIONS

Below are the technical specifications for the M4 Plus WiFi HDMI Dongle:

Features

ANYAST M4 PLUS

- Support Airplay/DLNA and Miracast standards, support most smart devices and provide cross-platform compatibility. Latest IOS can be supported.
- Connect USB to USB Power adapter, micro USB to the dongle and plug in the HDMI into your TV HDMI port.
- Fully support 1920x1080p resolution, provide you pixel-to-pixel display.
- Wifi wireless transmission, 1080p high-definition display.
- Linux operating system, more convenience to use.
- No need to download the APP, compatible with cell phone/ pad/ tablet/ pc system.
- Easy to use, plug and play.

eCubestore.com

Image: Technical specifications (Part 1).

Specification

ANYAST M4 PLUS



- OS and OS Version/ Release: Linux
- CPU Version/ Processor: RK3036
- CPU Speed (MHz): 1200MHz
- RAM (MB): DDR3 128MByte
- Internal Flash (MB): 128MByte
- Maximum Resolution: (1920*1080_60P) for H.265
- USB: USB 2.0
- Power: DC 5V/1A
- Wifi Module/ Version: IEEE 802.11a/g/b
- Wifi Frequency (2.4G/5.8G): 2.4G
- R/F Antenne: N/A
- Picture Format: JPEG, BMP

eCubestore.com

Image: Technical specifications (Part 2).

Feature	Detail
Brand	Generic
Model Name	M4 Plus
Connectivity Technology	HDMI, Wi-Fi
Connector Type	HDMI
Special Features	Chromecast, Miracast, Airplay, DLNA
Resolution	Up to 1080p (H.265)
Operating System	Linux
CPU	RK3036, 1200MHz
RAM	128MB DDR3
Internal Flash	128MB
USB	USB 2.0 (for power)
Power	DC 5V/1A
WiFi Module	IEEE 802.11a/g/b
WiFi Frequency	2.4G
Supported Internet Services	Netflix, Hulu, Amazon Prime Video (via casting device)
Compatible Devices	Laptop, Smartphone, Tablet, Television
Item Weight	0.06 Kilograms
Color	Black

Feature	Detail
System Support	iOS 8.0+, Android 4.4+, Windows 8.1+, Mac OS 10.9+
Video Formats	avi, divx, mkv, ts, dat, vob, mpg, mpeg, mov, mp4, rm, rmvb, wmv
Audio Formats	MP1/MP2/MP3, WMA, OGG, ADPCM-WAV, PCM-WAV, AAC
Voice Record	.mp3, .wav
File Formats	dobe PDF, MS Word, MS Excel, MS PowerPoint, i-works

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms may vary depending on the region and seller.

For technical assistance or further inquiries, please reach out to the product manufacturer or the point of purchase.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07SR1SY93>

More documents and user manuals: <https://manuals.plus/>