

manuals.plus /

- › [AGARO](#) /
- › [AGARO Regal 800 Watts Handheld Vacuum Cleaner User Manual](#)

AGARO Regal 33288

AGARO Regal 800 Watts Handheld Vacuum Cleaner User Manual

Model: Regal (33288)

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your AGARO Regal 800 Watts Handheld Vacuum Cleaner. Please read this manual thoroughly before using the appliance and retain it for future reference.

The AGARO Regal handheld vacuum cleaner is designed for dry vacuuming in home environments. Its lightweight and compact design, combined with an 800W motor and 6.5 kPa suction power, makes it suitable for quick clean-ups and reaching difficult areas.

PRODUCT OVERVIEW



Figure 1: AGARO Regal Handheld Vacuum Cleaner and its accessories, including the main unit, crevice nozzle, and multipurpose brush.

The AGARO Regal handheld vacuum cleaner is a corded, bag-less dry vacuuming appliance. It features a durable ABS plastic body and is designed for ease of use and portability.

Key Features:

- **Handheld & Lightweight:** Designed for comfortable and easy handling during cleaning tasks.
- **Efficient 800W Motor:** Provides strong suction power of 6.5 kPa for effective cleaning.
- **Durable ABS Body:** Constructed from robust ABS plastic for longevity and light weight.
- **0.8L Dust Collecting Capacity:** Sufficient capacity for typical household dry vacuuming needs.
- **Long Power Cord:** A 5-meter power cord allows for extended reach without frequent outlet changes.
- **Included Accessories:** Comes with a crevice nozzle for hard-to-reach areas and a multipurpose brush for various surfaces.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not use the vacuum cleaner on wet surfaces or to pick up liquids. This appliance is for dry vacuuming only.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Ensure the power cord is not damaged. Do not operate the vacuum with a damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the vacuum cleaner from the electrical outlet before cleaning or performing maintenance.
- Do not allow children to operate the vacuum cleaner. Supervise children and pets when the appliance is in use.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

SETUP

1. **Unpacking:** Carefully remove the vacuum cleaner and all accessories from the packaging. Inspect for any damage.

2. **Accessory Attachment:**

The AGARO Regal comes with a crevice nozzle and a multipurpose brush. To attach an accessory, align it with the suction inlet and push firmly until it clicks into place. Ensure a secure fit for optimal suction.



Crevice nozzle

Helps to access & clean narrow space , corners, vent, etc

Figure 2: Using the crevice nozzle to access and clean narrow spaces, corners, and vents.



Multipurpose cleaning brush

Easy cleaning of mattresses,
cushions, sofas curtains
& other delicate areas

Figure 3: The multipurpose cleaning brush is ideal for cleaning mattresses, cushions, sofas, curtains, and other delicate areas.

Flexible hose

Helps in easy access to
hard to reach areas



Figure 4: The flexible hose attachment provides easy access to hard-to-reach areas.

3. **Power Connection:** Unwind the 5-meter power cord and plug it into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the push button power switch on the handle of the vacuum cleaner. Press the button once to turn the unit ON. Press it again to turn the unit OFF.
2. **Vacuuming:** Guide the vacuum cleaner over the surface to be cleaned. The 800W motor provides 6.5 kPa suction power, effectively picking up dust, pet hair, pollen, mold spores, bread crumbs, and cigarette ash.



Figure 5: The vacuum's powerful suction effectively removes various types of debris.

- Dust Collection:** The vacuum cleaner utilizes bag-less technology, collecting debris in a transparent dust cup. Monitor the dust cup level and empty it when it reaches the MAX fill line to maintain optimal suction.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

1. Emptying the Dust Cup:

- Ensure the vacuum cleaner is unplugged before emptying.
- Press the dust cup release button (if applicable) or twist the dust cup counter-clockwise to detach it from the main unit.
- Empty the contents of the dust cup into a waste bin.

Bag-less technology



Figure 6: The bag-less design allows for easy and hygienic emptying of collected dust and debris.

2. Cleaning the Filter:

- The vacuum uses a cloth filter. After emptying the dust cup, remove the filter.
- Tap the filter gently over a waste bin to dislodge trapped dust. For a more thorough cleaning, rinse the filter under cool running water.
- Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Do not use the vacuum with a wet filter.

3. General Cleaning:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the suction inlet and accessories for any blockages and remove them if present.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; Power outlet not working; Power switch is off.	Ensure the power cord is securely plugged into a working outlet. Check the power switch is in the 'ON' position.
Low suction power.	Dust cup is full; Filter is clogged; Suction inlet or hose is blocked.	Empty the dust cup. Clean or replace the filter. Check for and remove any blockages in the suction path.
Unusual noise during operation.	Blockage in the hose or nozzle; Motor issue.	Turn off and unplug the vacuum. Check for and remove any blockages. If the noise persists, contact customer support.

Problem	Possible Cause	Solution
Dust escaping from the vacuum.	Dust cup not properly sealed; Filter is missing or damaged.	Ensure the dust cup is securely attached. Check that the filter is correctly installed and undamaged.

SPECIFICATIONS

Brand	AGARO
Model Name	Regal
Model Number	33288
Form Factor	Handheld
Wattage	800 Watts
Suction Power	6.5 kPa
Dust Cup Capacity	0.8 litres
Filter Type	Cloth
Cable Length	5 Metres
Product Dimensions (L x W x H)	5.9L x 5.9W x 19.7H Centimeters
Item Weight	1 kg 760 g
Noise Level	80 dB
Power Source	Corded Electric
Country of Origin	China

Dimensions



Figure 7: Product dimensions for the AGARO Regal Handheld Vacuum Cleaner.

WARRANTY AND SUPPORT

The AGARO Regal 800 Watts Handheld Vacuum Cleaner comes with a **1 Year Warranty** from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your product, please contact AGARO customer service.

- **Manufacturer:** Universal Corporation Ltd, agaro
- **Importer:** Universal Corporation Ltd, 4/1, Middleton St, Kankaria Estates, Park Street area, Kolkata, West Bengal 700071
- **Toll-Free Number:** 18001207897
- **Phone:** 033 6136 4500

Please retain your purchase receipt as proof of purchase for warranty purposes.

