

FANMIS 1818

FANMIS Model 1818 Analog Digital Sports Watch Instruction Manual

Model: 1818

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your FANMIS Model 1818 Analog Digital Dual Display Sports Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.



Image: Front view of the FANMIS Model 1818 Analog Digital Sports Watch.

PRODUCT FEATURES

The FANMIS Model 1818 watch is designed for versatility and durability, offering a range of functions:

- **Analog and Digital Dual Display:** Shows time in both analog and digital formats.
- **50M Water Resistance:** Suitable for daily use, splashes, rain, and short periods of swimming. Not recommended for diving or hot water activities.
- **LED Backlight:** Provides illumination for the digital display in low-light conditions.
- **Alarm Function:** Set daily alarms.
- **Stopwatch:** For timing events.

- **Dual Time:** Display a second time zone.
- **Date and Week Display:** Shows the current date and day of the week.
- **12H/24H Format:** Choose between 12-hour and 24-hour time display.



Image: Overview of the watch's main functions.

PARTS IDENTIFICATION

Familiarize yourself with the buttons and their functions:



Image: Close-up view of the watch face and buttons.

- **LIGHT Button (Top Left):** Activates the LED backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Stopwatch, Alarm, Dual Time).
- **START Button (Top Right):** Used to start/stop stopwatch, adjust settings in setting mode.
- **RESET Button (Bottom Right):** Used to reset stopwatch, select items in setting mode.

SETUP INSTRUCTIONS

Setting Digital Time and Date

1. From the normal time display, press the **MODE** button three times to enter the time setting mode.

The seconds will flash.

2. Press the **RESET** button to cycle through the settings: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. While a setting is flashing, use the **START** button to adjust the value.
4. To switch between 12-hour and 24-hour format, adjust the hour setting past 12 or 24.
5. Once all settings are correct, press the **MODE** button to exit the setting mode.

Setting Analog Time

The analog hands on this watch are typically synchronized with the digital time. Once the digital time is set, the analog hands should automatically adjust. If they do not, or if they are out of sync, please refer to the troubleshooting section or contact support.

Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter the alarm setting mode. The hour digits will flash.
2. Press the **START** button to adjust the alarm hour.
3. Press the **RESET** button to switch to minute setting. The minute digits will flash.
4. Press the **START** button to adjust the alarm minutes.
5. Press the **MODE** button to exit the alarm setting mode.
6. To turn the alarm ON/OFF, in alarm mode, press the **START** button. An alarm icon will appear/disappear.

OPERATING MODES

Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To resume timing after pausing, press the **START** button.
6. Press the **MODE** button to return to normal time display.

Activating the LED Backlight

Press the **LIGHT** button (top left) to illuminate the digital display. The backlight will remain on for a few seconds.

Dual Time Function

The watch features a dual time display. To access and set the second time zone:

1. From the normal time display, press the **MODE** button three times to enter the time setting mode.
2. Press the **MODE** button again (fourth press) to enter the Dual Time setting mode. The hour digits of the second time zone will flash.
3. Use the **START** button to adjust the hour.
4. Press the **RESET** button to switch to minute setting.
5. Use the **START** button to adjust the minutes.
6. Press the **MODE** button to exit the setting mode.

MAINTENANCE

Water Resistance (50M)

Your FANMIS Model 1818 watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for:

- Daily use, such as hand washing and rain.
- Shallow water swimming for short periods.

Important: Do not press any buttons while the watch is submerged in water. Avoid exposing the watch to hot water or steam (e.g., hot showers, saunas), as this can compromise the water-resistant seals.

Battery Replacement

The watch uses two batteries (one for the digital module and one for the analog movement). When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.



Image: Back view of the watch, showing the case back.

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or seals.



Image: Close-up of the watch strap and buckle.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving or incorrect time.	Analog battery low or hands out of sync.	Ensure digital time is set correctly. If issue persists, battery replacement may be needed.
Digital display is blank or dim.	Digital battery low or depleted.	Replace the digital battery.
Alarm not sounding.	Alarm function is turned off.	Verify the alarm is set and activated (alarm icon visible).

Problem	Possible Cause	Solution
Water or condensation inside the watch.	Water resistance compromised.	Stop using the watch immediately and seek professional repair to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	1818
Display Type	Analog-Digital
Watch Movement Type	Quartz
Water Resistance Depth	50 Meters (5ATM)
Case Material Type	Acrylonitrile Butadiene Styrene
Band Material Type	Rubber
Clasp Type	Buckle
Case Diameter	54 Millimeters
Case Thickness	20 Millimeters
Band Width	22 Millimeters
Band Length	265 Millimeters
Power Source	Battery Powered (2 batteries included)
Special Features	Alarm, Stopwatch, Dual Time, Date, Week, LED Backlight, 12H/24H

OFFICIAL PRODUCT VIDEO



Video: An official product video demonstrating the features and appearance of the FANMIS sports watch.

WARRANTY INFORMATION

Your FANMIS watch comes with a manufacturer's warranty. For specific details regarding warranty coverage and duration, please refer to the documentation included with your purchase or contact FANMIS customer support directly. The warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized repairs.

SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact FANMIS customer support. You can often find contact information on the official FANMIS website or through the retailer where you purchased the watch.

For general inquiries or to explore other products, visit the [FANMIS Store on Amazon](#).

