



[Manuals.plus](#) /

> [Aurabeam](#) /

> Aurabeam Universal Samsung TV Remote Control Instruction Manual BN59-01289A

Aurabeam BN59-01289A

Aurabeam Universal Samsung TV Remote Control Instruction Manual

Model: BN59-01289A

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Aurabeam Universal Samsung TV Remote Control. This remote is designed as a direct replacement for various Samsung TV remote models, offering seamless compatibility and ease of use without requiring programming.



Image: Front and back view of the Aurabeam Universal Samsung TV Remote Control. The front features standard TV remote buttons including a power button, number pad, volume and channel controls, navigation arrows, and dedicated buttons for Smart Hub and Sleep. The back shows a sleek, textured design with a battery compartment cover.

SETUP

The Aurabeam Universal Samsung TV Remote Control is designed for immediate use. No programming or pairing is required. Simply install the batteries, and it will be ready to operate your compatible Samsung TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: The back of the remote control with the battery compartment open, showing slots for two AAA batteries. The battery cover is shown detached next to the remote.

Note: Batteries are not included with the remote control.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your Samsung Smart TV. Below are the primary functions:

- **Power Button** (●): Turns the TV on or off.
- **Source Button**: Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Direct channel selection.
- **Volume Up/Down (VOL +/-)**: Adjusts the TV volume.
- **Channel Up/Down (CH +/-)**: Changes TV channels.
- **Mute Button**: Mutes or unmutes the TV audio.
- **Smart Hub Button** (⤴): Provides instant access to your TV's Smart Hub for apps and streaming services.
- **Sleep Timer Button (SLEEP)**: Activates the sleep timer function for automatic TV shutdown.

- **Navigation Arrows (Up, Down, Left, Right) and Enter Button** Used for menu navigation and selection.
- **Return Button:** Goes back to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV application or menu.



Image: A close-up view of the remote control's central buttons, highlighting the "SLEEP" button. This button allows for quick access to the sleep timer function.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can

be used, followed by a dry cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - This remote is designed to be compatible with a wide range of Samsung Smart TVs. However, some advanced or specific functions unique to certain original remote models might not be replicated.
 - Ensure the TV is powered on and functioning correctly.
- **TV not turning on/off:**
 - Verify that the TV is plugged into a power source.
 - Try using the power button directly on the TV to confirm it's operational.

SPECIFICATIONS

Brand	Aurabeam
Model	BN59-01289A (Universal Replacement)
Compatible Devices	Samsung Smart TVs, including models like The Frame, QLED, Neo QLED, Crystal UHD, and others. Replaces models such as BN59-01198G, BN59-01302A, AA59-00825A, AA59-00600A, BN59-01177A, AA59-00785A.
Batteries Required	2 x AAA batteries (not included)
Product Dimensions	8 x 2 x 0.5 inches (approximately)
Item Weight	2.89 ounces (approximately)
Special Feature	Universal, No Programming Required, Dedicated Sleep Timer and Smart Hub Buttons



Compatible with
the following Samsung
Smart TVs

OLED QLED

Crystal UHD

Neo QLED Frame

And Many More

Image: The remote control displayed alongside text indicating compatibility with Samsung Smart TVs, including OLED, QLED, Crystal UHD, Neo QLED, and Frame series.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any warranty-related inquiries or technical support, please refer to the seller or retailer from whom the product was purchased.

© 2023 Aurabeam. All rights reserved.

This manual is for informational purposes only. Aurabeam is a registered trademark.