



Manuals.plus /

- › JACQUES LEMANS /
- › JACQUES LEMANS 1-1117.1WR Liverpool Chronograph Watch User Manual

JACQUES LEMANS 1-1117.1WR

JACQUES LEMANS 1-1117.1WR Liverpool Chronograph Watch User Manual

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your JACQUES LEMANS 1-1117.1WR Liverpool Chronograph Watch. Please read this guide thoroughly to ensure optimal performance and longevity of your timepiece. This watch features a precise quartz movement, chronograph functionality, and a date display, all housed within a robust stainless steel case with 20 ATM water resistance.

PRODUCT OVERVIEW



A detailed view of the JACQUES LEMANS 1-1117.1WR Liverpool Chronograph Watch. The watch features a grey dial with three subdials, luminous hour markers, and rose gold-tone hands. The stainless steel case is complemented by a grey perforated leather strap. The crown and two pushers are visible on the right side of the case.

- **Crown:** Located at the 3 o'clock position, used for setting time and date.
- **Upper Pusher:** Located at the 2 o'clock position, used to start and stop the chronograph.
- **Lower Pusher:** Located at the 4 o'clock position, used to reset the chronograph.
- **Date Window:** Displays the current date, located between the 4 and 5 o'clock positions.
- **Subdials:** Three subdials for chronograph minutes (9 o'clock), running seconds (6 o'clock), and 24-hour

indicator (3 o'clock).

SETUP

Your JACQUES LEMANS 1-1117.1WR watch is equipped with a quartz movement, offering precise timekeeping and chronograph functions. Before first use, or after a period of inactivity, you may need to set the time and date.

1. Setting the Time

1. Pull the crown (located at the 3 o'clock position) out to position 2 (the furthest click). The small second hand in the subdial at 6 o'clock will stop.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. Observe the 24-hour subdial (at 3 o'clock) to ensure correct AM/PM alignment if applicable, though this subdial primarily serves as a 24-hour reference.
3. Once the time is set, push the crown back into position 1 (fully pushed in) to restart the watch.

2. Setting the Date

1. Pull the crown out to position 1 (the first click). The watch will continue to run.
2. Turn the crown counter-clockwise to adjust the date in the date window (located between 4 and 5 o'clock). Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Once the correct date is displayed, push the crown back into its original, fully pushed-in position.

3. Initial Chronograph Setup (if hands are misaligned)

If the chronograph hands (large central second hand, subdial hands) do not reset precisely to their zero positions, consult the 'Troubleshooting' section for calibration instructions.

OPERATING

1. Basic Timekeeping

The watch displays hours and minutes with the main hands. The subdial at 6 o'clock indicates the running seconds for the main time. The subdial at 3 o'clock provides a 24-hour indication, synchronized with the main hour hand.

2. Using the Chronograph

The chronograph function allows you to measure elapsed time independently of the main time display.

- **Start:** Press the upper pusher (at 2 o'clock) to start the chronograph. The large central second hand will begin to move, and the subdial at 9 o'clock will track elapsed minutes.
- **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time can then be read from the central second hand and the 9 o'clock subdial (up to 30 minutes).
- **Reset:** While the chronograph is stopped, press the lower pusher (at 4 o'clock) to reset all chronograph hands to their zero positions.

3. Water Resistance Guidelines

This watch is water-resistant to 20 ATM (200 meters), making it suitable for swimming, snorkeling, and recreational diving. To maintain water resistance:

- Always ensure the crown is fully pushed in before exposing the watch to water.
- Do not operate the crown or pushers while the watch is wet or submerged, as this can compromise the internal seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

MAINTENANCE

Proper care will ensure the longevity and performance of your JACQUES LEMANS watch.

1. Cleaning

Wipe the watch case and crystal with a soft, dry, lint-free cloth. For water-resistant models, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the watch's finish or seals.

2. Battery Replacement

When the watch stops running or the small second hand begins to jump in 2-second intervals (an End-of-Life indicator), the battery needs replacement. This procedure should be performed by a qualified watchmaker or an authorized service center to ensure proper battery type, sealing, and to maintain the watch's water resistance.

3. Leather Strap Care

Avoid prolonged exposure of the leather strap to water, direct sunlight, or extreme temperatures, as these can cause discoloration, drying, or damage. Clean the strap with a soft, damp cloth and allow it to air dry naturally. Do not use chemical cleaners on the leather.

4. Water Resistance Check

It is recommended to have the watch's water resistance checked annually by an authorized service center, especially if the watch is frequently exposed to water or if the case back has been opened for battery replacement.

TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common solutions:

- **Watch Not Running:**
Ensure the crown is fully pushed into position 1. If the watch still does not run, the battery may need replacement.
- **Date Not Changing Correctly:**
Check if the time is set correctly, particularly if the date changes at noon instead of midnight. If so, advance the hour hand by 12 hours. Avoid manually setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
- **Chronograph Hands Not Resetting to Zero:**
If the chronograph hands (central second hand, subdial hands) do not return to their 12 o'clock (zero) position when the lower pusher is pressed, they may need calibration. This typically involves pulling the crown out to position 2 and using the pushers (often the upper pusher for the central second hand, and the lower pusher for subdial hands) to advance the chronograph hands to their correct zero positions. Refer to specific movement instructions if available, or consult a professional watchmaker.

SPECIFICATIONS

Brand	JACQUES LEMANS
Model Number	1-1117.1WR
Movement Type	Quartz
Display Type	Analog
Functions	Chronograph, Date, Hour, Minute, Second (24-hour indicator)
Case Material	Stainless Steel
Case Diameter	44 mm
Case Thickness	13 mm
Water Resistance	20 ATM (200 Meters)
Crystal Material	Hardened Mineral Glass
Dial Color	Grey
Luminescence	Luminous indices, luminous hands
Strap Material	Calf Leather
Strap Color	Grey
Clasp Type	Pin Buckle
Lug Width	22 mm
Weight	80 Grams

WARRANTY AND SUPPORT

Your JACQUES LEMANS 1-1117.1WR watch comes with a manufacturer's warranty. Please refer to the warranty documents included in your original packaging for detailed information regarding coverage, terms, and conditions.

For service, repairs, or further assistance with your timepiece, please contact an authorized JACQUES LEMANS service center or your original point of purchase. Always ensure that any service is performed by qualified professionals to maintain the integrity and warranty of your watch.