

MagicPro Travel Steamer-001

MagicPro Portable Garment Steamer Instruction Manual

Model: Travel Steamer-001

1. INTRODUCTION

The MagicPro Portable Garment Steamer is designed for efficient and convenient wrinkle removal from various fabrics. This handheld steamer heats up quickly, providing powerful steam to refresh clothing, curtains, upholstery, and more. Its compact design makes it suitable for both home use and travel.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the steamer is unplugged before filling or emptying the water tank.
- Do not immerse the steamer in water or other liquids.
- Keep the steamer away from children and pets.
- Use only distilled or demineralized water to prevent mineral buildup and extend product life.
- Avoid directing steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- The steamer features an automatic shut-down system that activates if the unit becomes too hot or the water level is too low, ensuring user safety.
- Ensure the steamer is certified by Electrical Testing Laboratories (ETL) in compliance with North American safety standards.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your MagicPro Portable Garment Steamer:

- **Main Unit:** The body of the steamer containing the heating element and controls.
- **Detachable Water Tank:** A 300ml capacity tank for water.
- **Steam Nozzle:** The outlet for steam.
- **Power Button:** To turn the unit on/off.
- **Steam Trigger:** To activate steam release.

- **Indicator Light:** Shows heating status (red for heating, green for ready).
- **2-in-1 Fabric and Lint Brush:** An attachable accessory for enhanced steaming and lint removal.



Image 1: The MagicPro Portable Garment Steamer, highlighting its high-capacity detachable water tank.

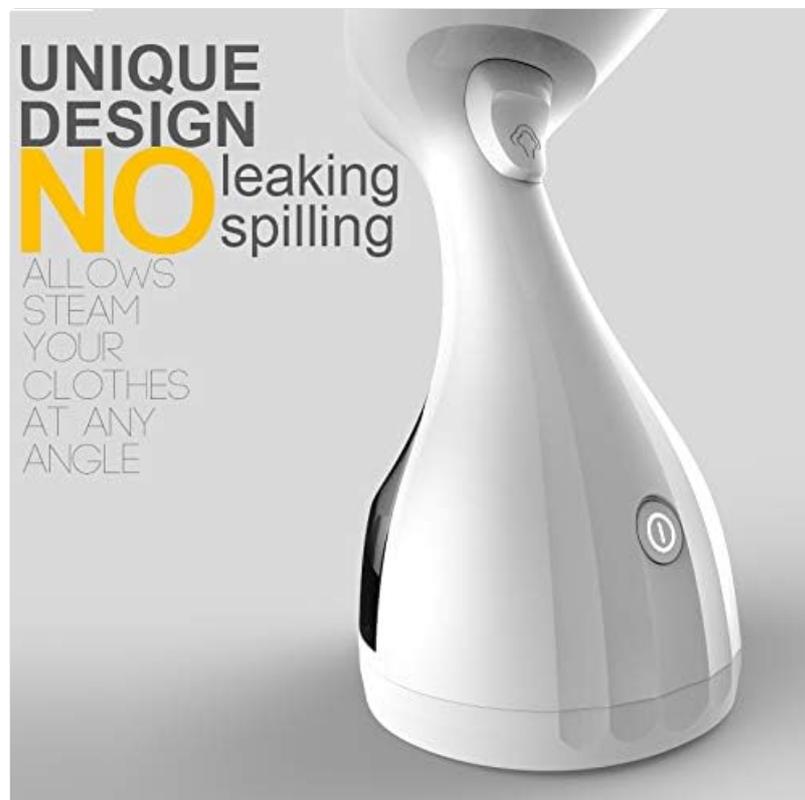


Image 2: Close-up of the steamer, illustrating its unique leak-proof design for steaming at any angle.

4. GETTING STARTED (SETUP)

1. **Detach Water Tank:** Press the release button located at the base of the handle to detach the water

tank.

2. **Fill Water Tank:** Open the cap on the water tank and fill it with distilled or demineralized water. Do not exceed the maximum fill line. Close the cap securely.
3. **Reattach Water Tank:** Align the filled water tank with the main unit and push it firmly until it clicks into place.
4. **Attach Brush (Optional):** If desired, attach the 2-in-1 fabric and lint brush to the steam nozzle.
5. **Plug In:** Plug the steamer into a standard electrical outlet. The indicator light will turn red, signifying that the unit is heating up.
6. **Wait for Heating:** The steamer will heat up in approximately 25 seconds. The indicator light will turn green when it is ready for use.

5. OPERATING INSTRUCTIONS

Once the indicator light is green, your steamer is ready. Hold the garment taut with one hand and the steamer with the other.

- **Steam Release:** Press the steam trigger to release a continuous flow of steam.
- **Steaming Technique:** Move the steam nozzle slowly over the fabric, from top to bottom. For stubborn wrinkles, hold the steamer closer to the fabric.
- **Fabric Compatibility:** This steamer is safe for use on most fabrics, including cotton, silk, linen, polyester, wool, and velvet.
- **Vertical and Horizontal Steaming:** The unique leak-proof technology allows for effective steaming whether the garment is hanging vertically or lying horizontally.
- **Using the Brush:** The included 2-in-1 fabric and lint brush can be used to help smooth out wrinkles and remove lint simultaneously.



Image 3: A user demonstrating the steamer on a hanging garment.



Image 4: A visual comparison of a wrinkled shirt before and after using the steamer, showing quick results.

6. CARE AND MAINTENANCE

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Detach and empty any remaining water from the tank.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.
- **Storage:** Store the steamer in a cool, dry place. Ensure the water tank is empty before storage.
- **Descaling:** If you notice reduced steam output or mineral residue, descale the steamer by filling the tank with a mixture of 50% white vinegar and 50% water. Run the steamer until the tank is empty, then repeat with clean water to rinse.

7. TROUBLESHOOTING

- **No Steam:** Check if the unit is plugged in and the indicator light is green. Ensure the water tank is properly filled and securely attached.
- **Automatic Shut-off:** If the steamer stops working unexpectedly, it may have activated its automatic shut-off due to low water or overheating. Refill the water tank and allow the unit to cool before restarting.

- **Water Leaking/Spitting:** Ensure the water tank is securely attached and not overfilled. The steamer is designed with leak-proof technology, but improper assembly can cause issues.

8. SPECIFICATIONS

Feature	Detail
Brand	MagicPro
Model Number	Travel Steamer-001
Color	White
Item Weight	2.83 pounds (1.29 Kilograms)
Wattage	240 watts
Voltage	110 Volts
Heat Time	25 Seconds
Water Tank Capacity	300 Milliliters
Package Dimensions	12.76 x 7.07 x 5.34 inches

9. WARRANTY AND CUSTOMER SUPPORT

Every MagicPro steamer comes with a hassle-free 1-year warranty and a 30-day refund policy. For any inquiries or support needs, please contact MagicPro customer service. We are committed to providing unbeatable customer service for a risk-free purchase.