

Goetland B07SVXT6XQ

Goetland 304 Stainless Steel Mess Kit Instruction Manual

Model: B07SVXT6XQ

1. PRODUCT OVERVIEW

This manual provides instructions for the Goetland 304 Stainless Steel Mess Kit, designed for outdoor cooking and dining. It features a durable, rust-proof construction suitable for camping, hiking, picnics, and other outdoor activities.

- The kit includes a two-compartment eating tray and a cooking pan, designed to fold together for compact storage and easy transport during treks, camping, and outdoor activities.
- Constructed from durable 304 (18/8) stainless steel, ensuring rust resistance and food safety. The kit is also dishwasher safe for easy cleaning.
- Designed in the classic US Military GI style, offering a functional and robust experience.
- Dimensions: Cooking Pan: 8.1 x 6.5 x 1.8 inches (20.5 x 16.5 x 4.5 cm). Eating Tray: 7.9 x 6.3 x 0.8 inches (20 x 16 x 2 cm). Handle Length: 8.3 inches (21 cm).

2. COMPONENTS

The Goetland Mess Kit (Model B07SVXT6XQ) includes the following components:

- **Cooking Pan:** The main cooking vessel with a folding handle.
- **Eating Tray:** A two-compartment tray that serves as a lid for the cooking pan and a plate for meals.



Figure 2.1: Mess Kit components laid out.

3. SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging.
2. **Separate Pan and Tray:** The eating tray is designed to fit snugly over the cooking pan. Gently lift the tray from the pan.
3. **Extend Handle:** The cooking pan features a folding handle. Extend the handle fully for use during cooking. Ensure it locks securely into place if applicable.
4. **Initial Cleaning:** Before first use, wash all components with warm, soapy water and rinse thoroughly. Dry completely.



Figure 3.1: Mess Kit in its compact, closed state.

4. OPERATING INSTRUCTIONS

4.1. Cooking with the Pan

- Place the cooking pan on a stable heat source (e.g., camping stove, campfire grate).
- Ensure the handle is fully extended and positioned away from direct heat to prevent it from becoming too hot.
- Cook food as desired. The stainless steel construction allows for even heating.
- Always use caution when handling the hot pan. Use heat-resistant gloves if necessary.

4.2. Using the Eating Tray

- The two-compartment tray can be used as a plate for serving and eating meals.
- It also functions as a lid for the cooking pan, helping to retain heat or protect food.

4.3. Storage and Portability

- Once cleaned and dried, the eating tray can be placed back onto the cooking pan.
- Fold the handle back into its compact position. The kit is designed to be secured with a hook for

compact storage.



Figure 4.1: Top and bottom view of the closed mess kit.



Figure 4.2: Mess Kit in an outdoor setting.

5. MAINTENANCE AND CARE

- **Cleaning:** The mess kit is dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry immediately to prevent water spots.
- **Drying:** Ensure all components are completely dry before storing to prevent moisture buildup and potential staining.
- **Storage:** Store the mess kit in a dry place. Its compact design allows for easy storage in backpacks or camping gear.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can scratch the stainless steel surface.

6. TROUBLESHOOTING

- **Food Sticking:** Ensure adequate oil or cooking fat is used when cooking. Stainless steel can be prone to sticking if not properly preheated or lubricated.
- **Discoloration:** High heat can sometimes cause blue or brown discoloration on stainless steel. This is harmless and can often be removed with a stainless steel cleaner or a mixture of vinegar and water.

- **Difficulty Closing:** Ensure the eating tray is correctly aligned with the pan and the handle is fully folded before attempting to secure the kit.

7. SPECIFICATIONS

Feature	Detail
Model Number	B07SVXT6XQ
Material	304 Stainless Steel (18/8)
Cooking Pan Size	8.1 x 6.5 x 1.8 inches (20.5 x 16.5 x 4.5 cm)
Eating Tray Size	7.9 x 6.3 x 0.8 inches (20 x 16 x 2 cm)
Handle Length	8.3 inches (21 cm)
Dishwasher Safe	Yes

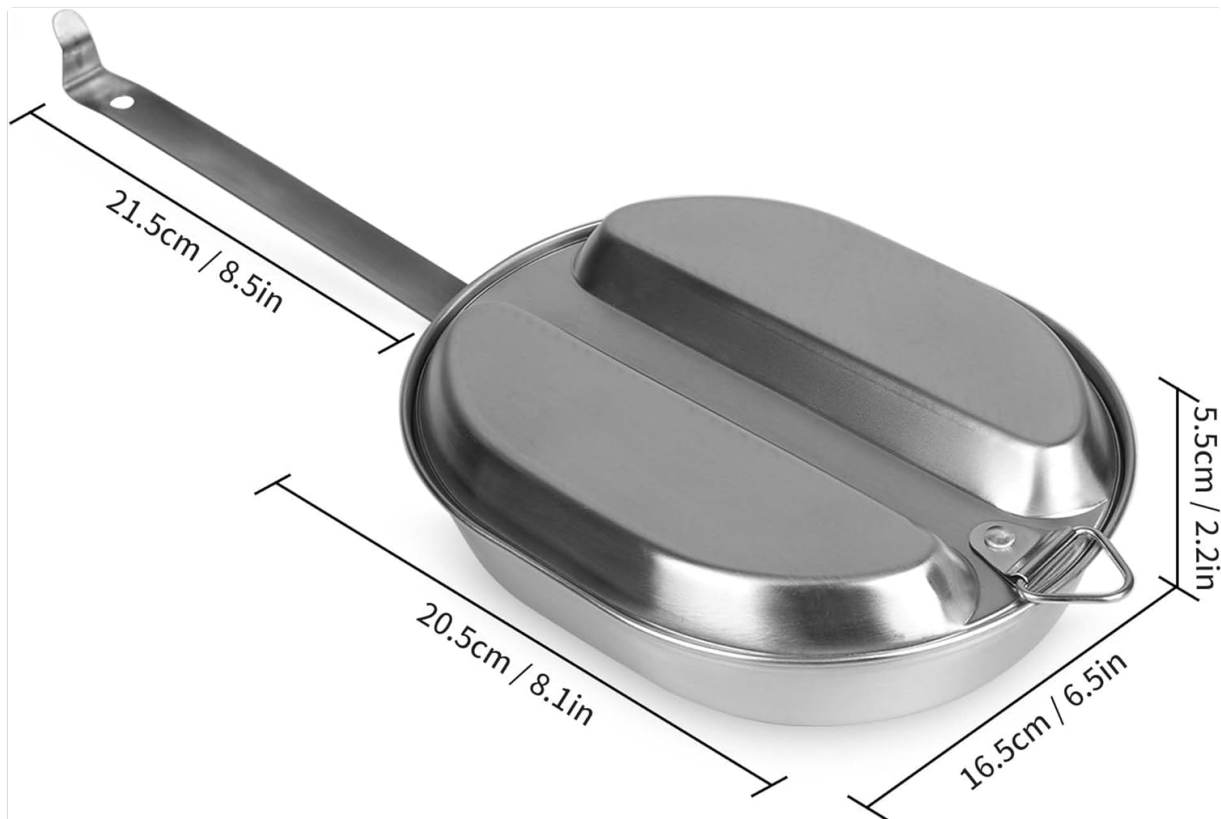


Figure 7.1: Mess Kit dimensions.

8. WARRANTY AND SUPPORT

Goetland is committed to providing high-quality products. While specific warranty details are not included in this manual, please refer to the product packaging or the official Goetland website for the most current warranty information.

For any questions, concerns, or support needs regarding your Goetland Mess Kit, please contact Goetland customer service through the retailer where the product was purchased or via the contact information provided on the official Goetland brand channels.

