

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Midea](#) /

> [Midea FS40-15AR DC Pedestal Fan User Manual](#)

## Midea FS40-15AR

# Midea FS40-15AR DC Pedestal Fan User Manual

Model: FS40-15AR

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read this manual carefully before operating the fan and retain it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the fan.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Unplug the fan from the outlet when not in use, when moving it from one location to another, and before cleaning.
- Keep the fan out of reach of children and pets.
- Do not operate the fan with a damaged cord or plug.
- Do not insert fingers or other objects through the grille when the fan is operating.
- Place the fan on a stable, flat surface to prevent it from tipping over.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Midea FS40-15AR Pedestal Fan.



# Fernbedienung Einstellbar



Image: The Midea FS40-15AR Pedestal Fan, showing its main body, fan head, base, and the included remote control.

- **Fan Head:** Includes front and rear grilles, fan blades, and motor housing.
- **Control Panel:** Located on the fan body, with LED display and control buttons.
- **Adjustable Stand:** Allows for height adjustment.
- **Base:** Provides stability for the fan.
- **Remote Control:** For convenient operation from a distance.

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your Midea FS40-15AR Pedestal Fan.

1. **Base Assembly:** Attach the fan stand to the base. Ensure it is securely fastened.
2. **Height Adjustment:** The fan features an adjustable stand. Loosen the height adjustment knob, extend or retract the stand to the desired height, and then tighten the knob securely.

# Einstellbare Höhe



**Image:** Illustration of the fan's adjustable height mechanism, showing arrows indicating upward and downward movement.

- Fan Head Assembly:** Secure the rear grille, fan blades, and front grille to the motor housing according to the diagrams in the full manual (not provided here). Ensure all components are correctly aligned and locked into place.
- Placement:** Place the assembled fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow and oscillation.
- Power Connection:** Plug the power cord into a suitable electrical outlet (220-240V).

## OPERATING INSTRUCTIONS

---

Your Midea FS40-15AR fan can be operated using the control panel on the unit or the included remote control.

### Control Panel



**Image:** Icons illustrating key features: 3 modes, 26 speeds, and a low noise level of 30 dB.

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Adjustment:** Use the speed control buttons to select from 26 available speed settings. The current speed will be displayed on the LED screen.
- **Mode Button:** Cycle through the available modes:
  - **Normal Mode:** Provides continuous airflow at the selected speed.
  - **Natural Mode:** Simulates natural breeze by varying fan speed.
  - **Sleep Mode:** Operates at a very low speed and noise level (as low as 27 dB) for quiet operation, ideal for sleeping.
  - **ECO Mode:** Adjusts fan speed automatically based on room temperature to optimize energy consumption.
- **Oscillation Button:** Press to activate or deactivate the 80-degree oscillation function, which distributes air across a wider area.
- **Timer Button:** Set the fan to automatically turn off after a specified period, up to 12 hours. Each press typically increases the timer by 1 hour.

## Remote Control

The remote control allows for convenient operation of all fan functions from a distance.



# 12 Stunden Timer



**Image:** The remote control for the Midea FS40-15AR fan, highlighting the power button and the 12-hour timer function.

# Fernbedienung Einstellbar



**Image:** A hand holding the remote control, pointing towards the Midea FS40-15AR fan, demonstrating wireless operation.

- Insert batteries into the remote control (type and orientation usually indicated inside the battery compartment).
- Point the remote control towards the fan's receiver for optimal response.
- All functions available on the control panel are also accessible via the remote control.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure optimal performance and longevity of your fan.

### 1. Cleaning the Exterior:

- Always unplug the fan before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the motor housing or electrical components.

### 2. Cleaning the Grilles and Blades:

- Periodically remove the front grille (refer to assembly instructions for removal) to clean dust from the fan blades.
- Use a soft cloth or a vacuum cleaner with a brush attachment to remove dust.
- Ensure all parts are completely dry before reassembling and operating the fan.

### 3. Storage:

- If storing the fan for an extended period, clean it thoroughly.
- Store it in its original packaging or cover it to protect it from dust.
- Store in a cool, dry place.

## TROUBLESHOOTING

---

If you encounter any issues with your Midea FS40-15AR fan, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power cord not properly plugged in.	Check if the power outlet is working. Ensure the power cord is securely plugged into the outlet and the fan.
Weak airflow.	Fan speed set too low. Grilles or blades are dusty.	Increase the fan speed setting. Unplug the fan and clean the grilles and blades as per maintenance instructions.
Fan makes unusual noise.	Loose parts. Obstruction in the fan blades.	Unplug the fan and check for any loose components or foreign objects. Ensure the fan is on a stable surface.
Remote control not working.	Dead batteries. Obstruction between remote and fan.	Replace the batteries in the remote control. Ensure there is a clear line of sight between the remote and the fan's receiver.
Oscillation not working.	Oscillation function is off. Mechanical obstruction.	Press the oscillation button to activate it. Check for any obstructions preventing the fan head from rotating.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

---

Technical details for the Midea FS40-15AR DC Pedestal Fan.

# Technische Daten

**Leistungsaufnahme:** 33W

**Spannung:** 220-240V,1Ph

**Max Windgeschwindigkeit:**

150m/min

**Luftleistung:**  $\geq 45\text{m}^3/\text{min}$

**Steuerung:** drahtlose

Fernbedienung, Bedienfeld

**Frequenz:** konvertiert

**Material Flügel:** Abs



**Image:** A visual representation of the Midea FS40-15AR fan alongside its technical data, including power consumption, voltage, and control methods.

Feature	Detail
Model Number	FS40-15AR
Brand	Midea
Type	DC Pedestal Fan
Power Consumption	30 Watts
Voltage	220-240V
Max Wind Speed	150 m/min
Airflow	$\geq 45\text{ m}^3/\text{min}$
Number of Speeds	26
Noise Level	27 Decibels (min)

Feature	Detail
Oscillation Angle	80 degrees
Timer Function	Up to 12 hours
Control Method	Wireless Remote Control, On-unit Control Panel
Material (Blades)	ABS Plastic
Product Dimensions (L x W x H)	45.3 x 40 x 137 cm
Weight	7.8 kg
Special Features	Adjustable Height, Tilttable Head, ECO Mode, Sleep Mode

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Midea website. Keep your purchase receipt as proof of purchase.

For technical assistance or service inquiries, please contact Midea customer service through their official channels.

- **Online Support:** [www.midea.com/global/support](http://www.midea.com/global/support)
- **Contact Information:** Refer to your regional Midea website for local contact details.