

[manuals.plus](#) /› [Arctic Cat](#) /› [Arctic Cat 0823-627 Drive Belt \(Gates\) User Manual](#)

## Arctic Cat 0823-627

# User Manual

## ARCTIC CAT 0823-627 DRIVE BELT (GATES)

Model: 0823-627 | Brand: Arctic Cat

### 1. INTRODUCTION

This manual provides essential information for the proper installation, operation, maintenance, and troubleshooting of your Arctic Cat 0823-627 Drive Belt. This drive belt is an OEM equivalent part designed for reliable performance in compatible Arctic Cat vehicles.

#### 1.1. Product Overview

The Arctic Cat 0823-627 Drive Belt is a critical component in the vehicle's drivetrain system, responsible for transmitting power from the engine to the wheels. Manufactured by Gates, this belt ensures optimal power transfer and durability.



**OEM PART NUMBER  
0823-627**

**Image Coming Soon**

Figure 1: Arctic Cat 0823-627 Drive Belt. This image displays the Arctic Cat logo, the OEM part number 0823-627, and indicates that a product image is coming soon, suggesting this is a placeholder or preliminary image.

## 1.2. What's in the Box

- 1 x Arctic Cat 0823-627 Drive Belt (Gates)

## 2. INSTALLATION (SETUP)

Proper installation is crucial for the longevity and performance of your drive belt. It is highly recommended that installation be performed by a qualified technician. Always refer to your vehicle's specific service manual for detailed instructions and torque specifications.

### 2.1. Safety Precautions

- Always wear appropriate personal protective equipment (PPE), including safety glasses and gloves.
- Ensure the vehicle is turned off, the engine is cool, and the battery is disconnected before beginning any work.
- Secure the vehicle on a stable, level surface using appropriate lifting equipment and jack stands.
- Be aware of hot surfaces and moving parts.

### 2.2. Installation Steps (General Guidelines)

1. **Preparation:** Gather necessary tools (e.g., wrenches, sockets, belt removal/installation tools if required by your vehicle model).
2. **Access the Drive System:** Remove any covers or components obstructing access to the drive belt and clutches.
3. **Remove Old Belt:** Follow your vehicle's service manual to properly loosen the clutches and remove the old

drive belt. Note the orientation of the old belt if applicable.

4. **Inspect Clutches:** Clean and inspect the primary and secondary clutches for wear, damage, or debris. Ensure they are free of grease or oil.
5. **Install New Belt:** Carefully install the new Arctic Cat 0823-627 Drive Belt. Ensure it is seated correctly in both the primary and secondary clutches. Pay attention to any directional arrows on the belt.
6. **Tensioning:** If your vehicle requires specific belt tensioning, follow the manufacturer's guidelines.
7. **Reassemble:** Reinstall all removed covers and components.
8. **Test:** Start the vehicle and perform a low-speed test to ensure proper belt engagement and operation before full use.

## 3. OPERATION GUIDELINES

---

Once installed, the drive belt operates automatically as part of the vehicle's transmission system. Adhering to proper operating practices can significantly extend the life of your belt.

### 3.1. Best Practices

- **Break-in Period:** For new belts, a break-in period is often recommended. Avoid aggressive acceleration, heavy loads, or sustained high speeds for the first 20-30 miles (or as specified by your vehicle manufacturer) to allow the belt to seat properly.
- **Smooth Operation:** Avoid sudden, harsh acceleration or deceleration, which can put excessive stress on the belt.
- **Load Management:** Do not exceed the vehicle's recommended towing or carrying capacities.
- **Regular Inspection:** Periodically check the belt for signs of wear or damage (see Maintenance section).

## 4. MAINTENANCE

---

Regular inspection and maintenance are key to maximizing the lifespan and performance of your Arctic Cat drive belt.

### 4.1. Inspection Schedule

- **Before Each Ride (Visual Check):** Quickly inspect for obvious damage or debris.
- **Every 50-100 Hours or Annually (Detailed Check):** Remove the belt and perform a thorough inspection.

### 4.2. What to Look For

- **Cracks or Fraying:** Inspect the edges and ribs for any signs of cracking, fraying, or missing material.
- **Glazing:** A shiny, hardened appearance on the belt surface indicates overheating and slippage.
- **Cord Separation:** Look for signs of the internal cords separating from the rubber.
- **Wear:** Check for excessive wear on the sides of the belt, which can lead to reduced performance.
- **Debris:** Ensure no foreign objects are lodged in the belt or clutch area.

### 4.3. Cleaning

If the belt or clutch surfaces are dirty, clean them with a lint-free cloth and a mild, non-petroleum-based cleaner specifically designed for belts or clutch components. Ensure all surfaces are dry before reassembly.

## 5. TROUBLESHOOTING

This section addresses common issues related to drive belt performance. Always consult a qualified technician if you are unsure about any repair or diagnostic procedure.

Symptom	Possible Cause	Solution
Belt Slipping	Worn belt, glazed belt, oil/grease on belt/clutches, incorrect belt tension.	Inspect belt for wear/glazing (replace if necessary). Clean belt and clutches. Check and adjust belt tension.
Excessive Noise (Squealing/Screeching)	Misalignment, worn belt, contaminated belt/clutches, worn clutch components.	Check clutch alignment. Inspect belt for wear (replace if necessary). Clean belt and clutches. Inspect clutch components for wear.
Reduced Performance/Loss of Power	Worn belt, incorrect belt type, clutch issues.	Inspect belt for wear (replace if necessary). Ensure correct belt model is installed. Have clutches inspected by a professional.
Belt Breaking Prematurely	Overheating, excessive load, improper installation, clutch issues, foreign objects.	Avoid aggressive driving. Do not overload vehicle. Ensure correct installation. Inspect clutches for issues. Clear debris from belt area.

## 6. SPECIFICATIONS

Key specifications for the Arctic Cat 0823-627 Drive Belt:

- **Part Number:** 0823-627
- **OEM Equivalent Part Number:** 0823-627
- **Brand:** Arctic Cat (Manufactured by Gates)
- **Fit Type:** Universal Fit (for compatible Arctic Cat models)
- **Item Weight:** Approximately 13.4 ounces
- **Product Dimensions:** Approximately 8 x 8 x 0.1 inches
- **Belt Style:** V-belt
- **Compatible Devices:** Vehicles (General)

*Note: Specifications are subject to change without notice. Always verify compatibility with your specific vehicle model.*

## 7. WARRANTY AND SUPPORT

### 7.1. Warranty Information

For specific warranty terms and conditions regarding the Arctic Cat 0823-627 Drive Belt, please refer to the official warranty documentation provided by Arctic Cat or Gates, or contact your authorized dealer. Warranty coverage typically addresses manufacturing defects and material flaws under normal use.

### 7.2. Customer Support

If you have questions or require assistance with your Arctic Cat 0823-627 Drive Belt, please contact your authorized Arctic Cat dealer or the official Arctic Cat customer support channels. When contacting support, please have your vehicle's model and serial number, as well as the drive belt's part number (0823-627), readily available.

For more information, visit the official [Arctic Cat website](#).

© 2025 Arctic Cat. All rights reserved. This manual is for informational purposes only.