

[Manuals.plus](#) /

> [Casio](#) /

> Casio AE-1400WH-3AVCF 10-Year Battery Digital Watch User Manual

## Casio AE-1400WH-3AV

# Casio AE-1400WH-3AVCF Digital Watch Instruction Manual

Model: AE-1400WH-3AVCF

## 1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Casio AE-1400WH-3AVCF Digital Watch. Please read this manual carefully to ensure proper use and to fully utilize all features of your watch.

The Casio AE-1400WH-3AVCF is a robust digital watch designed for durability and functionality, featuring a 10-year battery life and 100-meter water resistance. It includes multiple functions such as world time, stopwatch, countdown timer, and multiple alarms.



CASE DIAMETER: 44.16 MM

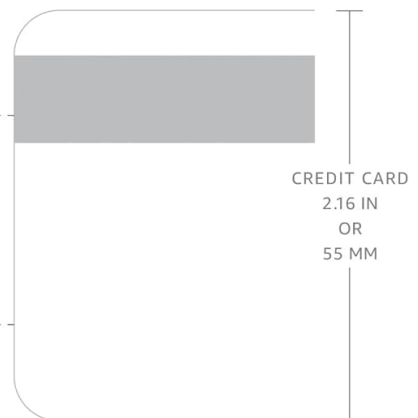


Figure 1: Front view of the Casio AE-1400WH-3AVCF Digital Watch.

## 2. GETTING STARTED: INITIAL SETUP

Upon first use or after a battery change, you may need to set the current time and date. Refer to the following steps:

1. **Entering Time Setting Mode:** Press and hold the **ADJUST** button (usually top-left) until the city code starts flashing. This indicates you are in the Home City setting mode.
2. **Selecting Home City:** Use the **FORWARD** (bottom-right) and **REVERSE** (top-right) buttons to select your desired Home City code.
3. **Adjusting Time and Date:** Press the **MODE** button (bottom-left) to cycle through the setting options: DST (Daylight Saving Time), 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day. Use the **FORWARD** and **REVERSE** buttons to adjust the flashing value.
4. **Exiting Setting Mode:** Once all settings are correct, press the **ADJUST** button to exit the setting mode.



Figure 2: Side view showing watch buttons for adjustment.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Timekeeping Mode

The watch normally displays the current time, day of the week, and date. The small world map display

indicates the current time zone.

### 3.2 World Time Mode

This watch can display the current time in 31 time zones (48 cities) around the world.

1. **Entering World Time Mode:** From the Timekeeping Mode, press the **MODE** button until 'WORLD TIME' appears on the display.
2. **Viewing Other Time Zones:** Use the **FORWARD** and **REVERSE** buttons to scroll through different city codes and view their current times.
3. **Swapping Home City and World Time City:** In World Time Mode, press the **ADJUST** button to swap your Home City time with the currently displayed World Time City.



Figure 3: World Time display with digital map.

### 3.3 Alarm Mode

The watch features 5 daily alarms and an hourly time signal.

1. **Entering Alarm Mode:** From the Timekeeping Mode, press the **MODE** button until 'ALARM' appears.
2. **Selecting an Alarm:** Use the **FORWARD** button to cycle through AL1 to AL5 and the SIG (Hourly Time Signal).
3. **Setting an Alarm:** With the desired alarm selected, press and hold the **ADJUST** button until the hour setting flashes. Use **FORWARD** and **REVERSE** to set the hour and minute. Press **MODE** to switch between hour and minute settings.
4. **Activating/Deactivating Alarm:** Press the **FORWARD** button in Alarm Mode (without holding ADJUST) to toggle the selected alarm ON/OFF.
5. **Exiting Alarm Mode:** Press the **ADJUST** button to exit the setting mode, or **MODE** to return to Timekeeping Mode.



Figure 4: Daily Alarm display.

### 3.4 Stopwatch Mode

The stopwatch measures elapsed time, split times, and two finishes.

1. **Entering Stopwatch Mode:** From the Timekeeping Mode, press the **MODE** button until 'STW' (Stopwatch) appears.
2. **Start/Stop:** Press the **FORWARD** button to start and stop the stopwatch.
3. **Reset:** While the stopwatch is stopped, press the **REVERSE** button to reset it to zero.
4. **Split Time:** While the stopwatch is running, press the **REVERSE** button to record a split time. Press **REVERSE** again to return to elapsed time display.

### 3.5 Countdown Timer Mode

The countdown timer can be set for a period of up to 24 hours.

1. **Entering Countdown Timer Mode:** From the Timekeeping Mode, press the **MODE** button until 'TMR' (Timer) appears.
2. **Setting the Timer:** Press and hold the **ADJUST** button until the hour setting flashes. Use **FORWARD** and **REVERSE** to set the desired countdown time. Press **MODE** to switch between hour and minute settings.
3. **Start/Stop/Reset:** Press the **FORWARD** button to start or stop the countdown. Press the **REVERSE** button while the timer is stopped to reset it to its starting time.

### 3.6 Illumination

The watch features an LED backlight for easy viewing in low light conditions.

- **Activating Illumination:** Press the **LIGHT** button (front-bottom) to illuminate the display.
- **Illumination Duration:** The illumination duration can be adjusted in the Timekeeping Setting Mode.

## 4. MAINTENANCE

---

### 4.1 Water Resistance

Your Casio AE-1400WH-3AVCF watch is water resistant to 100 meters (10 BAR). This means it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. Do not operate buttons while the watch is wet or submerged.



Figure 5: Water Resistance icon.

### 4.2 Battery Life

The watch is equipped with a 10-year battery. When the display becomes dim or the illumination function weakens, it is an indication that the battery needs to be replaced. Battery replacement should be performed by a qualified technician to maintain water resistance.

### 4.3 Cleaning

Wipe the watch with a soft, dry cloth. If necessary, use a mild soap solution and rinse thoroughly. Avoid using chemical cleaners or solvents.

## 5. TROUBLESHOOTING

- **Incorrect Time/Date:** Ensure your Home City setting is correct. If the time is still incorrect, follow the 'Initial Setup' instructions to re-adjust.
- **No Display/Dim Display:** The battery may be low or depleted. Replace the battery.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable) or that it is not wet. If the issue persists, a reset may be required (refer to the full manufacturer's manual for advanced reset procedures).

## 6. SPECIFICATIONS

<b>Model Number</b>	AE-1400WH-3AVCF
<b>Brand</b>	Casio
<b>Display Type</b>	Digital
<b>Case Material</b>	Resin
<b>Band Material</b>	Resin
<b>Water Resistance Depth</b>	100 Meters (10 BAR)
<b>Battery Life</b>	Approximately 10 years
<b>Features</b>	World Time (31 time zones, 48 cities), 5 Daily Alarms, Hourly Time Signal, 1/100-second Stopwatch, Countdown Timer, LED Backlight
<b>Dimensions</b>	10.5 x 2 x 0.5 inches (Product Dimensions)
<b>Item Weight</b>	0.15 Kilograms (5.22 ounces)





Figure 6: Case back details.

## 7. WARRANTY AND SUPPORT

This Casio watch comes with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support, repairs, or further assistance, please contact Casio customer service or an authorized service center. You can find additional information and support resources on the [Casio Store on Amazon](#).

