



Manuals.plus /

- › SOGO /
- › SOGO Multi-Capsule Espresso Coffee Machine CAF-SS-5675 Instruction Manual

**SOGO 8425490134806**

# SOGO Multi-Capsule Espresso Coffee Machine Instruction Manual

Model: 8425490134806

## INTRODUCTION

---

Thank you for choosing the SOGO Multi-Capsule Espresso Coffee Machine. This appliance is designed to provide a convenient and versatile coffee brewing experience, compatible with multiple capsule types. Please read this manual carefully before operating the machine to ensure safe and efficient use. Keep this manual for future reference.



Image: Front view of the SOGO Multi-Capsule Espresso Coffee Machine, showcasing its compact design and a cup of freshly brewed coffee.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the water reservoir lid is removed during the brewing cycle.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your SOGO Multi-Capsule Espresso Coffee Machine:

- Water Tank (Capacity: 1.6 Litres)
- Capsule Holder (Multi-capsule compatible)
- Brewing Head
- Control Buttons (Interface: Buttons)
- Drip Tray
- Carafe (Included component)
- Power Cord

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present. Retain packaging for future transport if needed.
2. **Initial Cleaning:** Before first use, wash the water tank, drip tray, and carafe with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Fill Water Tank:** Open the water tank lid and fill the tank with fresh, cold drinking water up to the MAX level indicator. Do not exceed the MAX line.
4. **Power Connection:** Place the machine on a stable, flat, heat-resistant surface. Plug the power cord into a grounded electrical outlet.
5. **First Use Cycle (Priming):**
  - Ensure the water tank is filled.
  - Place an empty cup or the carafe on the drip tray.
  - Turn on the machine using the power button. The indicator light will flash as the machine heats up.
  - Once the light stops flashing and remains steady, press the brew button without a capsule inserted. This will flush hot water through the system, cleaning it and priming the pump. Repeat this process 2-3 times.

## OPERATING INSTRUCTIONS

---

Your SOGO Multi-Capsule Espresso Coffee Machine is semi-automatic, offering ease of use for your daily coffee.

1. **Prepare the Machine:** Ensure the water tank is filled with fresh water and the machine is plugged in and powered on. Wait for the indicator light to stop flashing, indicating it has reached the optimal brewing temperature.
2. **Insert Capsule:** Open the capsule lever/compartments. Insert your desired coffee capsule into the

appropriate holder. Close the lever firmly until it clicks into place.

3. **Place Cup:** Position your coffee cup or the included carafe on the drip tray, directly under the coffee spout.
4. **Brew Coffee:** Press the desired brew button (e.g., Espresso, Lungo, or a specific volume button if available). The machine will begin brewing.
5. **Automatic Stop:** The machine features an automatic stop function. Brewing will cease once the pre-set volume is dispensed or the capsule is fully extracted. You can also manually stop brewing by pressing the brew button again.
6. **Remove Capsule:** After brewing, carefully open the capsule lever. The used capsule will typically drop into an internal collection bin. Dispose of the used capsule.
7. **Enjoy Your Coffee:** Your fresh espresso is ready to be enjoyed.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your coffee machine.

- **Daily Cleaning:**
  - Empty and rinse the drip tray and used capsule container daily.
  - Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scourers.
  - The carafe and other removable components are dishwasher safe.
- **Water Tank Cleaning:** Clean the water tank regularly with warm soapy water, rinse thoroughly, and refill with fresh water.
- **Reusable Filter:** If your machine uses a reusable filter, clean it after each use according to the filter's specific instructions.
- **Descaling:** Over time, mineral deposits (limescale) can build up in your machine, affecting performance and taste. Descale your machine every 3-6 months, or more frequently in areas with hard water.
  - Use a descaling solution specifically designed for coffee machines. Follow the instructions on the descaling product packaging.
  - Typically, this involves filling the water tank with the descaling solution, running several brew cycles without capsules, and then rinsing thoroughly with fresh water.
- **Storage:** If storing the machine for an extended period, empty and clean all components. Store in a dry, dust-free place.

## TROUBLESHOOTING

---

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet malfunction; machine fault.	Check power cord connection; test outlet with another appliance; contact support if issue persists.
No coffee dispenses.	Water tank empty; capsule not properly inserted; machine not primed; clogged spout.	Fill water tank; ensure capsule is correctly seated; perform priming cycle; clean coffee spout.
Coffee is cold or not hot enough.	Machine not preheated sufficiently; limescale buildup.	Wait for indicator light to stabilize; descale the machine.
Water leaks from machine.	Water tank not properly seated; drip tray full; internal seal issue.	Ensure water tank is correctly positioned; empty drip tray; contact support.

## SPECIFICATIONS

- **Model Number:** 8425490134806
- **Brand:** SOGO
- **Type:** Multi-Capsule Espresso Coffee Machine
- **Pressure:** 19 Bar
- **Power:** 850W
- **Water Tank Capacity:** 1.6 Litres
- **Color:** Black
- **Material:** Stainless Steel
- **Special Feature:** Automatic Stop
- **Operating Mode:** Semi-automatic
- **Interface:** Buttons
- **Filter Type:** Reusable
- **Included Components:** Carafe
- **Item Weight:** 2500 Grams (2.5 kg)
- **Package Dimensions:** 33 x 32.5 x 27.1 cm
- **Exterior Finish:** Matte
- **Dishwasher Safe Parts:** Yes (where applicable, e.g., carafe, drip tray)

## WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or to inquire about replacement parts, please contact SOGO customer service directly. Contact information can typically be found on the manufacturer's website or on the product packaging.

*Please retain your proof of purchase for warranty claims.*

