

[manuals.plus](#) /› [ARGO](#) /› [Argo Chic White Ceramic Wall-Mounted Fan Heater User Manual](#)

## ARGO Chic white

# Argo Chic White Ceramic Wall-Mounted Fan Heater User Manual

Model: Chic white

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Argo Chic White Ceramic Wall-Mounted Fan Heater. Please read it thoroughly before installation and use, and retain it for future reference.

## Product Overview

The Argo Chic White is a modern, wall-mounted ceramic fan heater designed for indoor use. It features a flat tempered glass front panel and a reflective finish, blending seamlessly into various room decors. Beyond heating, it also offers a summer ventilation function.



Image 1: Front view of the Argo Chic White heater highlighting its 3 modes, daily/weekly timer, and 1000W/2000W power settings.

## Key Features

- **Ceramic Heating Element:** Provides efficient and instant heat.
- **3 Heating Modes:** ECO, COMFORT, and ECO SMART for optimized energy consumption and comfort.
- **Programmable Timers:** Includes both a daily timer (1-12 hours) and a weekly timer for flexible operation.
- **LED Display:** Clear display on the front panel for easy monitoring of settings.
- **Infrared Remote Control:** Slim remote for convenient adjustment of settings from a distance.
- **Automatic Flap Oscillation:** Distributes heat evenly across the room.
- **Ambient Temperature Regulation:** Maintains desired room temperature.
- **IPX2 Water Resistance:** Suitable for use in environments with moderate humidity, such as bathrooms.

## 2. SAFETY INFORMATION

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not cover the heater to prevent overheating.
- Ensure the power supply matches the voltage specified on the appliance.
- Keep flammable materials away from the heater.
- Do not operate the heater with a damaged cord or plug.
- Unplug the heater when not in use or before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## Integrated Safety Systems

- **Overheating Protection:** The unit automatically shuts down if it detects excessive internal temperatures.
- **Open Window Detection:** The heater can detect a sudden drop in ambient temperature (e.g., when a window is opened) and will automatically switch off to conserve energy.

## 3. SETUP AND INSTALLATION

The Argo Chic White is designed for wall mounting. Ensure you choose a suitable location away from curtains, furniture, and other flammable materials, and where the air circulation is not obstructed.

### Wall Mounting

1. Select a wall location that is structurally sound and can support the weight of the heater (approximately 2 kg).
2. Ensure there is adequate clearance around the heater for proper air intake and output. Refer to the dimensions diagram for precise measurements.

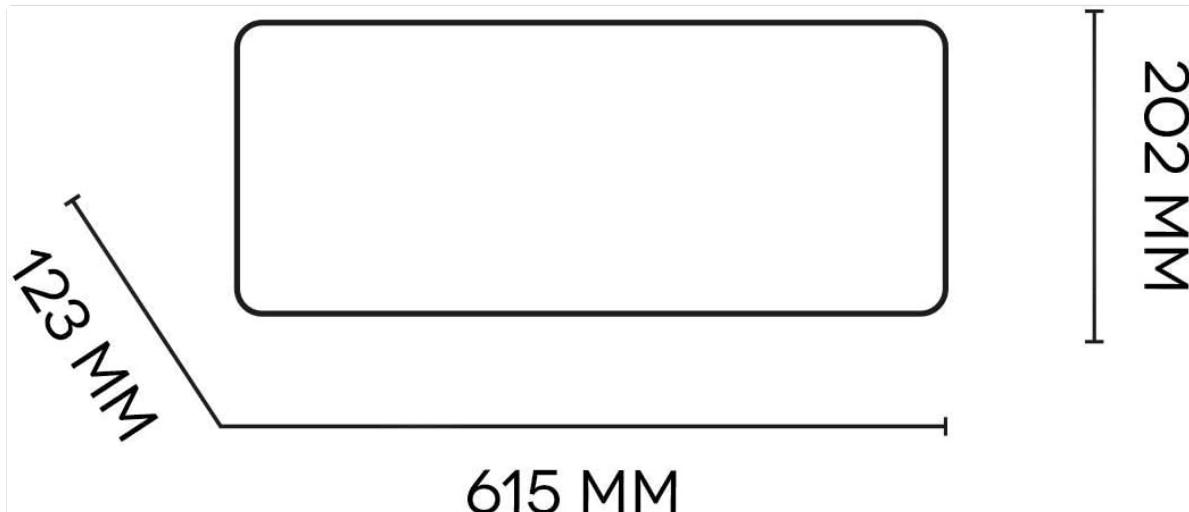


Image 2: Diagram showing the dimensions of the Argo Chic White heater: 615mm (width), 202mm (height), 123mm (depth).

3. Mark the drilling points on the wall using the provided mounting template (if included) or by measuring the mounting holes on the back of the unit.
4. Drill holes and insert appropriate wall plugs (not always included, check packaging).
5. Secure the mounting bracket (if separate) or the heater directly to the wall using screws.
6. Ensure the heater is securely fastened and level.



Image 3: The Argo Chic White heater elegantly mounted on a wall in a modern living space.

## Initial Power-Up

Once mounted, plug the heater into a suitable electrical outlet. The unit will enter standby mode.

## 4. OPERATING INSTRUCTIONS

The Argo Chic White can be operated using the control panel on the unit or the included infrared remote control.

### Control Panel



Image 4: Close-up view of the LED display and touch controls on the top right of the heater's front panel.

The LED display shows the current temperature and selected settings. Touch-sensitive buttons allow for basic control.

## Remote Control

For full functionality and convenience, use the slim infrared remote control.



Image 5: The remote control for the Argo Chic White heater, featuring buttons for power, mode, temperature adjustment, and timer settings.

**Note:**

- The remote control requires a CR2025 battery (not included).
- Point the remote control directly at the heater's receiver for optimal response.

## Functions

1. **Power On/Off:** Press the power button on the unit or remote to switch between standby and operating modes.
2. **Mode Selection:** Cycle through ECO, COMFORT, and ECO SMART heating modes using the mode button.
  - **ECO Mode:** Energy-saving mode, maintaining a comfortable temperature with lower power consumption.
  - **COMFORT Mode:** Provides maximum heating power for rapid room warming.
  - **ECO SMART Mode:** Intelligently adjusts heating power based on ambient temperature to optimize comfort and energy use.
3. **Temperature Adjustment:** Use the '+' and '-' buttons on the remote to set your desired temperature. The heater will work to maintain this temperature.
4. **Timer Functions:**
  - **Daily Timer (1-12 hours):** Set the heater to turn on or off after a specified number of hours.
  - **Weekly Timer:** Program specific on/off times for each day of the week. Refer to the detailed instructions in the full manual for weekly timer setup.
5. **Flap Oscillation:** Activate or deactivate the automatic oscillation of the air outlet flap to direct airflow.



Image 6: Close-up of the air outlet with the oscillating flap, which helps distribute warm air evenly.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your heater.

- **Cleaning:** Before cleaning, always unplug the heater and allow it to cool completely. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Air Inlet/Outlet:** Periodically check and clean the air inlet and outlet grilles to ensure they are free from dust and obstructions. Use a soft brush or vacuum cleaner.
- **Storage:** If storing the heater for an extended period, ensure it is clean and dry. Store it in its original packaging in a cool, dry place.

## 6. TROUBLESHOOTING

If you encounter issues with your Argo Chic White heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Main switch off; Overheating protection activated.	Check power plug and outlet; Ensure main switch is ON; Unplug and let cool for 30 minutes, then restart.
No heat output.	Incorrect mode selected; Temperature setting too low.	Select a heating mode (ECO, COMFORT, ECO SMART); Increase the desired temperature setting.
Remote control not working.	Battery depleted or incorrectly inserted; Obstruction between remote and heater.	Replace CR2025 battery; Ensure clear line of sight to the heater's receiver.
Heater turns off unexpectedly.	Overheating protection; Open window detection activated.	Check for obstructions around the heater; Close windows/doors or disable open window detection if applicable.

If the problem persists after attempting these solutions, please contact customer support.

## 7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	ARGO
Model Number	Chic white
Product Dimensions	20 x 30 x 60 cm
Item Weight	2 kg
Color	White
Style	With Weekly Timer
Number of Items	1
Power Socket Type	Wall mounting
Special Features	Oscillating

Feature	Detail
Indoor/Outdoor Use	Indoor
Batteries/Piles Needed?	No (for unit, remote requires CR2025)

## 8. PRODUCT OVERVIEW VIDEO

Watch this video for a visual summary of the Argo Chic White Ceramic Wall-Mounted Fan Heater's features and benefits.

Your browser does not support the video tag.

Video 1: A comprehensive overview of the Argo Chic White heater, showcasing its design, programmability, IPX2 rating, timer functions, and PTC heating technology.

## 9. WARRANTY INFORMATION

For detailed warranty terms and conditions, please refer to the warranty card included with your product packaging. Keep your proof of purchase for any warranty claims.

## 10. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to report a problem, please contact ARGO customer support. Contact details can typically be found on the manufacturer's website or in the product packaging.

© 2026 ARGO. All rights reserved.