

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Professional FCW10BSCWHA Portable Clothes Washer User Manual](#)

Farberware FCW10BSCWHA

Farberware Professional FCW10BSCWHA Portable Clothes Washer User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Farberware Professional FCW10BSCWHA Portable Clothes Washer. Please read all instructions carefully before use to ensure proper installation, operation, and maintenance. Retain this manual for future reference.



Figure 1.1: Farberware Professional FCW10BSCWHA Portable Clothes Washer. This image displays the overall design of the portable washing machine, featuring a silver and chrome finish with a dark, transparent top lid.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning, servicing, or performing any maintenance.
- Ensure the appliance is properly grounded.

3. PRODUCT FEATURES

The Farberware Professional FCW10BSCWHA Portable Clothes Washer is designed for convenience and efficiency. Key features include:

- **Portable Design:** Top-loading washer suitable for various living spaces.
- **Load Capacity:** Accommodates up to 7 lbs of laundry.
- **Wash Programs:** Six distinct wash programs (Normal, Heavy, Gentle, Speedy, Soak, Spin) for diverse fabric care.
- **Digital Controls:** User-friendly digital controls with an LED display for easy program selection and monitoring.
- **Stainless Steel Tub:** Durable stainless steel interior tub for long-lasting performance.
- **Water Levels:** Six adjustable water levels to optimize water and energy usage.
- **Spin Speed:** Powerful 800 RPM maximum spin speed for efficient water extraction.
- **Soft-Closing Lid:** Features a soft-closing cover with transparent tempered glass, allowing observation of the wash cycle.
- **Child Lock:** Integrated child lock function for enhanced safety.

PORTABLE CLOTHES WASHER

CONVENIENT

TOP-LOADING CLOTHES WASHER LETS YOU CLEAN UP TO 7 LBS. OF CLOTHES

EASY TO USE

DIGITAL LED CONTROLS & INCLUDES 6 WASH PROGRAMS

STRONG & SAVING

STAINLESS STEEL INTERIOR TUB PROVIDES DURABLE OPERATION & THE 6 WATER LEVELS OFFER WATER & ENERGY SAVINGS

POWERFUL DRYING

EXCEPTIONAL WATER EXTRACTION FOR EASIER DRYING WITH 800 RPM MAXIMUM SPIN SPEED



Figure 3.1: Overview of the portable clothes washer highlighting its key features such as portability, ease of use, durable construction, and powerful drying capabilities.

4. SETUP AND INSTALLATION

Proper setup is crucial for the safe and effective operation of your portable washer.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the washer for any damage that may have occurred during shipping. Report any damage to your retailer immediately.

4.2 Placement

- Place the washer on a firm, level surface to prevent excessive vibration and noise during operation.
- Ensure there is adequate space around the washer for ventilation and access.
- Position the washer near a water source (e.g., a sink faucet) and a drain.

4.3 Water Connection

The washer requires connection to a water supply and a drain. Follow these steps:

1. Connect the water inlet hose to the designated inlet on the back of the washer. Ensure a tight seal to prevent leaks.
2. Attach the other end of the water inlet hose to your faucet adapter.
3. Secure the drain hose to the washer's drain outlet.
4. Position the free end of the drain hose into a sink or suitable drain. Ensure it is securely placed to prevent it from dislodging during the drain cycle.



Figure 4.1: Detailed view of the water inlet and drain hose connections. This image illustrates how to properly connect the water supply to a faucet and secure the drain hose to prevent leaks.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance.

5. OPERATION

Operating your Farberware portable washer involves a few simple steps.

5.1 Loading Laundry

1. Open the top lid of the washer.
2. Place clothes loosely into the stainless steel tub, ensuring not to exceed the 7-lb load capacity. Overloading can affect washing performance and may damage the machine.
3. Close the lid securely.

HOLDS UP TO
7 LBS.
OF CLOTHES



Figure 5.1: Visual representation of the maximum 7 lbs load capacity. This image shows a basket filled with clothes, illustrating the approximate volume of laundry that can be washed in one cycle.

ASSEMBLY REQUIRED

TO ENSURE NO LEAKAGE, THE WATER INLET & DRAIN HOSES
MUST BE PROPERLY ASSEMBLED AND TIGHTENED



Figure 5.2: View inside the stainless steel washer tub. This image shows the agitator and the perforated drum designed for effective washing and spinning.

5.2 Adding Detergent

Add the appropriate amount of liquid or powder detergent directly into the detergent dispenser or directly into the tub before starting the wash cycle, following detergent manufacturer guidelines.

5.3 Control Panel Overview

The digital control panel allows you to select wash programs and settings.



EASY TO USE

FEATURES DIGITAL CONTROLS WITH LED DISPLAY



WASH CYCLES INCLUDE:
NORMAL, HEAVY, GENTLE,
SPEEDY, SOAK & SPIN

Figure 5.3: Close-up of the digital control panel with LED display. This image details the buttons for program selection, water level, and start/pause functions.

5.4 Selecting a Wash Program

Press the 'Program' button to cycle through the available wash programs:

- **Normal:** For everyday laundry.
- **Heavy:** For heavily soiled items.
- **Gentle:** For delicate fabrics.
- **Speedy:** A quick wash cycle for lightly soiled items.
- **Soak:** For pre-soaking heavily soiled items.
- **Spin:** For draining and spinning excess water from clothes.

5.5 Selecting Water Level

Press the 'Water Level' button to choose from the six available water levels, matching the water amount to your load size for optimal efficiency.

5.6 Starting the Wash Cycle

After selecting your desired program and water level, press the 'Start/Pause' button to begin the wash cycle. The LED display will show the remaining time.

5.7 Child Lock Function

To activate the child lock, press and hold the 'Program' and 'Water Level' buttons simultaneously for a few seconds until the child lock indicator appears on the display. This prevents accidental changes to settings during operation.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washer.

6.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6.2 Cleaning the Interior Tub

Periodically run a 'Normal' wash cycle with hot water and a cup of white vinegar or a specialized washing machine cleaner to remove detergent residue and odors.

6.3 Filter Cleaning

Check and clean the lint filter (if applicable, refer to specific location in your model) regularly to maintain efficient drainage and prevent lint buildup on clothes.

6.4 Winterizing and Storage

If storing the washer in an unheated area or during cold weather, ensure all water is drained from the hoses and pump to prevent freezing and damage. Disconnect hoses and store them properly.

7. TROUBLESHOOTING

Before contacting customer service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Washer does not start	Power cord unplugged; Lid not closed; Power outage; Child lock activated.	Ensure power cord is securely plugged in; Close lid completely; Check household circuit breaker; Deactivate child lock.
No water filling	Water supply turned off; Water inlet hose kinked or blocked.	Turn on water supply; Straighten hose; Check for debris in hose filter.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clear any blockages; Clean the drain pump filter.
Excessive vibration/noise	Washer not level; Overloaded or unbalanced load.	Adjust leveling feet to ensure the washer is stable; Redistribute laundry evenly in the tub; Reduce load size.
Lid opens during cycle	Safety feature engaged.	The machine is designed to pause or stop if the lid is opened during certain cycles for safety. Close the lid to resume.

8. SPECIFICATIONS

Detailed technical specifications for the Farberware Professional FCW10BSCWHA Portable Clothes Washer.

Model: FCW10BSCWHA

Brand: Farberware

Capacity: 1.0 Cu. Ft. / 7 lbs (load capacity)

Dimensions (W x D x H): 19.8 x 18.4 x 31 inches

Wash Programs: Normal, Heavy, Gentle, Speedy, Soak, Spin

Water Levels: 6

Maximum Spin Speed: 800 RPM

Material (Tub): Stainless Steel

Sound Level: 64 Decibels

Special Features: Child Lock, LED Display



Figure 8.1: Product dimensions of the Farberware Portable Clothes Washer. This image provides a visual reference for the width (19.8 in), depth (18.4 in), and height (31 in) of the appliance.

9. WARRANTY AND SUPPORT

9.1 Limited Warranty

This Farberware Professional FCW10BSCWHA Portable Clothes Washer comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

9.2 Customer Support

For warranty claims, technical assistance, or general inquiries, please contact Farberware customer support. Refer to your purchase documentation or the official Farberware website for the most current contact information.

Related Documents - FCW10BSCWHA

 <small>Farberware is a registered trademark of Farberware Company, Inc. International Home & Garden Division of Farberware International, Inc. © 2010 Farberware International, Inc. All rights reserved. www.farberware.com</small>	<p>Farberware FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine Instruction Manual Comprehensive instruction manual for the Farberware FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine, covering safety, installation, operation, maintenance, and warranty information.</p>
 	<p>Farberware 201797 Air Fryer Toaster Oven Owner's Manual Comprehensive owner's manual for the Farberware 201797 Air Fryer Toaster Oven, covering operation, safety, troubleshooting, and recipes. Provided by Appliance Factory Parts.</p>
	<p>Farberware 7-in-1 Programmable Pressure Cooker WM-CS6004W User Manual This manual provides essential safety instructions, operating procedures, parts identification, cleaning and maintenance guidelines, and troubleshooting tips for the Farberware 7-in-1 Programmable Pressure Cooker, model WM-CS6004W.</p>
	<p>Farberware FCD06SDWHT Dishwasher: Instruction Manual and User Guide Comprehensive guide for the Farberware FCD06SDWHT dishwasher, covering safety, operation, installation, maintenance, and troubleshooting. Learn how to properly load, run cycles, and care for your appliance.</p>

 <p>FARBERWARE® 7 QT. ELECTRIC WOK USE AND CARE INSTRUCTIONS MODEL FSW343</p>	<p><u>Farberware 7 Qt. Electric Wok FSW343: Use, Care, and Recipes</u> Comprehensive guide for the Farberware 7 Qt. Electric Wok (Model FSW343), including important safety instructions, operating procedures, care guidelines, and a collection of Chinese recipes.</p>
 <p>FARBERWARE®</p> <p><small>A Farberware registered trademark of Farberware Licensing Company, LLC. Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC. © 2019 Farberware Licensing Company, LLC. All rights reserved. Rev. 08/20/18</small></p>	<p><u>Farberware 0.7 Cu. Ft. Microwave Oven FMG07BLK Instruction Manual</u> Comprehensive instruction manual for the Farberware 0.7 Cu. Ft. Microwave Oven (Model FMG07BLK). Covers safety precautions, operation, features, cleaning, maintenance, and warranty information.</p>

Documents - Farberware – FCW10BSCWHA



[Farberware FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine Instruction Manual](#)

Comprehensive instruction manual for the Farberware FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine, covering safety, installation, operation, maintenance, and warranty information.

lang:en score:45 filesize: 989.6 K page_count: 16 document date: 2020-05-29



[\[pdf\] User Manual Instructions](#)

User Manual Farberware Professional FCW10BSCWHA 1 0 Cu Ft Portable Clothes Washer with 7 lb Load Capacity Silver Chrome Home Kitchen 91xk3Bz XDL m media amazon images I |||

Farberware is a registered trademark of Farberware Licensing Company, LLC Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC 2019 Farberware Licensing Company, LLC. All rights reserved. rev. 07/07/20 WL
FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine Lavadora P...

lang:en score:41 filesize: 920.2 K page_count: 16 document date: 2020-07-07

FARBERWARE®

Farberware is a registered trademark of Farberware Licensing Company, LLC. Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC. © 2019 Farberware Licensing Company, LLC. All rights reserved. Rev. 07/07/20 WL

[\[pdf\] User Manual Instructions](#)

Farberware Licensingm media amazon91xk3Bz XDLm amazon images I 91xk3Bz XDL |||

Farberware is a registered trademark of Farberware Licensing Company, LLC

Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC 2019 Farberware Licensing Company, LLC. All rights reserved. rev. 07/07/20 WL

FCW10BSCWHA 1.0 Cu. Ft. Portable Washing Machine Lavadora P...

lang:en score:27 filesize: 920.2 K page_count: 16 document date: 2020-07-07

[\[pdf\] User Manual Owner's Manual Instructions Catalog](#)

XQB32 1432YJ Use manual pc849 INSTALLATION INSTRUCTIONS BEFORE USING YOUR

PORTABLE WASHER x Remove the exterior and interior packing You will need following tools

815658024496 use lowes useandcareguides Before appliance is used it must be properly positioned installed as described in this so read carefully To reduce risk of fire c7c1b786 54d0 41e0 baaf

4890317f2265 images homedepot static catalog Images c7 Plug into a grounded 3 prong outlet do not remove grounding an adapter extension cord 2152400 secure img1 fg wfcdn docresources 927 215 1 cu ft Portable Top Load Washing Machine White Care Manual Farberware FCW10BSCWHA

0815658024496 1004520667 thdstatic 6 dic 2022 — Make sure that washing machine does stand on its power Ventilation openings obstructed by carpeting when portable washer Never clean parts with flammable fluids These fumes can create hazard or explosion And store gasoline other flammable ManualOwner ManualFarberware 1004520667x flammable INSTALLATION toolsBefore firex cord6 isFarberware Professional Cu Ft Washer Reviews Wayfairowner manualimages 4890317f2265images 4890317f2265lowes useimages 4890317f2265secure 2152400images 4890317f2265assets dm document 29d8880f 4a6a 41e6 adcc f49a12b9c6b9 owner manualsecure |||

2 33/, 1 6 7 RXU VDIHW DQG WKH VDIHW RI RWKHUV DUH YHU LPSRUWDQW :H KDYH SURYLGHG PDQ LPSRUWDQW VDIHW PHVVDJHV LQ WKLV PDQXDO DQG RQ RXU DSSOLDQFH OZD V UHDG DQG REH DOO VDIHW PHVVDJHV 7KLV LV WKH 6DIHW OHUW 6 PERO 7KLV V PERO DOHUWV RX WR SRWHQWLDO KD DUGV WKDW FDQ NLOO RU LQMX...

lang:i-klingon score:13 filesize: 5.73 M page_count: 15 document date: 2018-12-18