

- Manuals.plus /
- › TUREWELL /
- › TUREWELL USB Charging Cable for Cordless Water Flossers (Models FC159, FC1591, FC2630, FC2631, FC156, FC152)

TUREWELL FC159

TUREWELL USB Charging Cable Instruction Manual

For Cordless Water Flosser Models: FC159, FC1591, FC2630, FC2631, FC156, FC152

INTRODUCTION

This manual provides instructions for the TUREWELL USB charging cable, designed for use with specific TUREWELL cordless water flosser models. This cable facilitates recharging your device, ensuring continuous operation.



Image: The TUREWELL USB charging cable, featuring a standard USB-A connector on one end and a proprietary two-pin connector on the other, designed for specific water flosser models.

PRODUCT COMPATIBILITY

This USB charging cable is specifically compatible with the following TUREWELL cordless water flosser models:

- FC159
- FC1591
- FC2630
- FC2631
- FC156
- FC152

Important: Please verify your water flosser model number before using this charging cable. Use with incompatible models may result in improper charging or damage to the device.

SETUP

To set up your TUREWELL USB charging cable for use, follow these steps:

1. **Identify Power Source:** Locate a suitable USB power source. This can be a USB wall adapter (not included), a power bank, a car charger, or a computer's USB port.
2. **Connect USB-A End:** Insert the standard USB-A end of the charging cable into the chosen USB power source.
3. **Connect to Water Flosser:** Locate the charging port on your TUREWELL cordless water flosser. Carefully insert the two-pin connector end of the charging cable into the water flosser's charging port. Ensure a secure connection.

USB Charging



Image: Diagram illustrating how to connect the USB charging cable to a TUREWELL water flosser. It shows the charging port on the device and various compatible USB power sources such as a power adapter, power bank, car charger, and computer.

OPERATING INSTRUCTIONS

Once the cable is properly connected to both the power source and the water flosser, the device should begin charging. Refer to your water flosser's specific manual for indicators of charging status (e.g., LED lights).

- Allow the water flosser to charge fully before its first use or after extended periods of non-use.
- Disconnect the charging cable once the device is fully charged to conserve energy and prolong battery life.

MAINTENANCE

Proper care of your charging cable ensures its longevity and safe operation:

- **Cleaning:** Wipe the cable with a dry, soft cloth to remove dust or debris. Do not use liquid cleaners directly on the connectors.
- **Storage:** Store the cable in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable, especially near the connectors, to prevent internal wire damage.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage to the insulation or connectors. Discontinue use if any damage is observed.

TROUBLESHOOTING

If your water flosser is not charging, consider the following:

- **Check Compatibility:** Ensure your water flosser is one of the compatible models (FC159, FC1591, FC2630, FC2631, FC156, FC152).
- **Verify Connections:** Confirm that both ends of the charging cable are securely plugged into the power source and the water flosser.
- **Test Power Source:** Try plugging the USB-A end into a different USB power source (e.g., a different wall adapter or computer port) to rule out an issue with the power source.
- **Inspect Cable:** Examine the cable for any visible damage, such as cuts, kinks, or bent pins on the connectors. If damaged, replace the cable.
- **Water Flosser Issue:** If the cable and power source are confirmed to be working, the issue might be with the water flosser's charging port or internal battery.

SPECIFICATIONS

Product Dimensions	0.79 x 3.15 x 0.79 inches; 0.81 ounces
Item Model Number	FC159
Connector Type	USB Type A
Cable Type	USB
Compatible Devices	TUREWELL Cordless Water Flossers (FC159, FC1591, FC2630, FC2631, FC156, FC152)
Maximum Voltage	5 Volts
Color	White
Manufacturer	Chuangzhiwei

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your TUREWELL USB charging cable, please contact our customer service team. Refer to your product packaging or the original purchase platform for specific contact details.
Note: Warranty information may vary. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07SV36T6D>

More documents and user manuals: <https://manuals.plus/>