

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kenwood](#) /

› [Kenwood KAX941PL KMix Chef Sense Gourmet Note Attachment User Manual](#)

Kenwood KAX941PL

Kenwood KAX941PL KMix Chef Sense Gourmet Note Attachment

User Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully and retain them for future reference. Incorrect use of this appliance attachment can result in injury or damage to the product.

- Always ensure the main stand mixer unit is switched off and unplugged before attaching or removing the KAX941PL attachment.
- Keep fingers and utensils away from moving parts during operation.
- Do not process hot liquids or ingredients that are too hard for the attachment.
- Never immerse the main body of the attachment in water or other liquids. Refer to the cleaning section for proper care.
- This attachment is designed for household use only. Do not use it for commercial purposes.
- Ensure all parts are correctly assembled before operating the stand mixer with the attachment.

2. PRODUCT OVERVIEW

The Kenwood KAX941PL KMix Chef Sense Gourmet Note attachment is designed to expand the functionality of your compatible Kenwood stand mixer. This attachment is typically used for specific food preparation tasks, integrating seamlessly with the mixer's power outlet.



Figure 1: Overview of the Kenwood KAX941PL attachment.

The attachment consists of a main housing unit and specific processing components (e.g., blades, discs, or grinding mechanisms, depending on the specific function of this 'Gourmet Note' attachment). It connects to the high-speed or slow-speed outlet of your Kenwood stand mixer.

3. SETUP AND ASSEMBLY

Follow these steps to correctly attach the KAX941PL to your Kenwood stand mixer:

1. Ensure your Kenwood stand mixer is switched off and unplugged from the power outlet.
2. Locate the appropriate attachment outlet on your stand mixer (refer to your stand mixer's manual for specific outlet locations).
3. Remove the protective cover from the attachment outlet.
4. Align the KAX941PL attachment with the outlet. The attachment has a specific keying mechanism to ensure correct orientation.
5. Gently push the attachment into the outlet until it clicks securely into place. Some models may require twisting a locking ring to secure it.
6. Verify that the attachment is firmly seated and does not wobble.





Figure 2: Detail of the attachment's connection mechanism.

4. OPERATING INSTRUCTIONS

Once the KAX941PL attachment is securely installed, you can begin operation:

1. Prepare your ingredients according to your recipe. Ensure ingredients are cut to an appropriate size for the attachment.
2. Place the necessary collection bowl or container under the attachment's output, if applicable.
3. Plug in your Kenwood stand mixer.
4. Turn on the stand mixer and select a suitable speed setting. Start with a low speed and gradually increase if needed, observing the processing.
5. Carefully feed ingredients into the attachment's feed tube. Use the provided food pusher to guide ingredients, never your fingers.
6. Monitor the processing and switch off the mixer once the desired consistency is achieved or all ingredients are processed.
7. Switch off the stand mixer and unplug it before removing the attachment or processed food.

Note: Refer to your specific recipe or the stand mixer's manual for recommended speed settings for various tasks when using attachments.

5. CARE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your KAX941PL attachment:

1. Always unplug the stand mixer and remove the attachment before cleaning.
2. Disassemble the attachment into its individual components (e.g., housing, blades, discs, feed tube).

3. Wash all removable parts in warm, soapy water. Use a brush to remove any stubborn food residue. Rinse thoroughly.
4. Some parts may be dishwasher safe; consult your stand mixer's manual or the attachment's packaging for specific dishwasher compatibility. If not specified, hand washing is recommended.
5. Wipe the main housing unit of the attachment with a damp cloth. Never immerse the main housing in water.
6. Dry all parts thoroughly before reassembling or storing to prevent rust or mildew.
7. Store the attachment in a clean, dry place.

6. TROUBLESHOOTING

If you encounter issues with your KAX941PL attachment, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Attachment not fitting securely.	Incorrect alignment or protective cover not fully removed.	Ensure correct alignment and that the protective cover from the mixer's outlet is completely off. Push firmly until it clicks.
Attachment not operating.	Mixer not plugged in, mixer not switched on, or attachment not fully engaged.	Check power supply, ensure mixer is on, and re-seat the attachment firmly.
Loud noise or vibration during operation.	Attachment not properly assembled or ingredients are too hard/large.	Switch off and unplug. Check assembly. Reduce ingredient size or quantity.
Food not processing effectively.	Incorrect speed setting, dull blades/discs (if applicable), or overloading.	Adjust speed. Ensure components are sharp and clean. Process smaller batches.

If the problem persists after attempting these solutions, please contact Kenwood customer support.

7. SPECIFICATIONS

Model: KAX941PL

Product Dimensions: 2.36 x 2.36 x 5.91 inches

Item Weight: 6 ounces

Manufacturer: Kenwood

ASIN: B07SVQVQRT

Date First Available: November 2, 2023

Compatibility: Designed for use with compatible Kenwood KMix and Chef Sense stand mixers.

8. WARRANTY AND SUPPORT

Kenwood products are manufactured to the highest quality standards and are covered by a manufacturer's

warranty. For specific warranty details, please refer to the warranty card included with your original stand mixer or visit the official Kenwood website.

For technical support, spare parts, or service inquiries, please contact Kenwood Customer Service:

Website: www.kenwoodworld.com

Phone: Refer to your region's Kenwood website for local contact numbers.

When contacting support, please have your product model number (KAX941PL) and the serial number of your stand mixer readily available.

© 2023 Kenwood. All rights reserved.