

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CUCKOO](#) /

› [CUCKOO One-Touch Personal Blender and Food Mixer \(CFM-D60W\) Instruction Manual](#)

CUCKOO CFM-D60W

CUCKOO One-Touch Personal Blender and Food Mixer (CFM-D60W) Instruction Manual

Brand: **CUCKOO** | Model: **CFM-D60W**

INTRODUCTION

Thank you for choosing the CUCKOO One-Touch Personal Blender and Food Mixer. This versatile appliance is designed for ease of use and efficiency, making it ideal for preparing protein shakes, smoothies, and various food items. Its compact and portable design, combined with powerful motor performance, ensures quick and consistent results. This manual provides essential information for safe and effective operation, maintenance, and troubleshooting.

- **High-Powered Efficient Motor:** Prepare dishes quickly with the high-powered motor.
- **Easy-to-Use Functionality:** Simple one-touch operation for instant and convenient use.
- **Overheat Safety Function:** This safety feature activates when overheating is detected, protecting the appliance.
- **Reliable and Accredited:** Boasts an ETL certification for safety and quality.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before cleaning or assembling/disassembling parts.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while blending to prevent injury.
- Ensure the blade assembly is securely attached to the container before placing it on the motor base.
- Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow a cool-down period between cycles.
- The Overheat Safety Function will automatically shut off the unit if it overheats. If this occurs, unplug the unit and let it cool down for at least 15 minutes before resuming use.
- This appliance is not intended for use by children. Keep out of reach of children.

PACKAGE CONTENTS

Your CUCKOO Personal Blender package includes the following components:

- Motor Base
- Large Container (500ml)
- Small Container with Lid (300ml)
- 4-Leaf Mixer Blade
- 2-Leaf Grinder Blade
- Instruction Manual

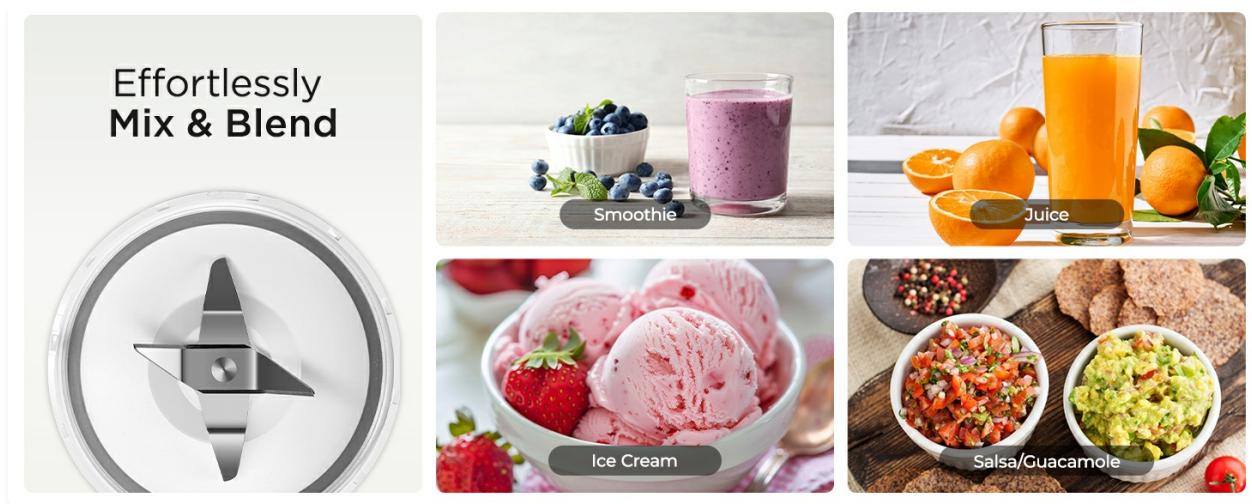


Image: All components included in the CUCKOO Personal Blender package, including the motor base, two containers of different sizes, and two types of blade assemblies.

SETUP

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Wash Parts:** Before first use, wash the containers, lids, and blade assemblies with warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
3. **Place Motor Base:** Position the motor base on a clean, dry, and stable countertop. Ensure it is away from water and heat sources.



BIDETS

Experience the Essence of Elegance and Cleanliness with Cuckoo Bidets.

Image: A user demonstrating the 'Twist, Lock & Blend' mechanism, showing how to securely attach the container with the blade assembly to the motor base.

OPERATING INSTRUCTIONS

- 1. Add Ingredients:** Fill your chosen container (500ml or 300ml) with your desired ingredients. Do not exceed the MAX fill line indicated on the container. For best results with frozen fruits or ice, ensure they are cut into smaller pieces (less than 1 inch).
- 2. Attach Blade Assembly:** Screw the appropriate blade assembly (4-leaf mixer blade for blending, 2-leaf grinder blade for grinding) onto the open end of the container until it is securely tightened.
- 3. Place on Motor Base:** Invert the container and place it onto the motor base. Align the tabs on the container with the slots on the motor base.
- 4. One-Touch Blending:** Press down firmly on the container to activate the blending function. The blender will operate as long as you maintain pressure. For continuous blending, twist the container clockwise until it locks into place.
- 5. Stop Blending:** To stop blending, release pressure or twist the container counter-clockwise to unlock it from the motor base.
- 6. Serve:** Remove the container from the motor base, unscrew the blade assembly, and replace it with a drinking lid or storage lid as desired.



DESIGNED IN KOREA

PREMIUM QUALITY & CRAFTSMANSHIP

Image: A hand demonstrating the simple one-button operation of the CUCKOO Personal Blender, highlighting its ease of use for quick blending tasks.



AIR PURIFIERS

Breathe Pure, Live Fresh with Cuckoo Air Purifiers. Our Air Purifier Technology is your shield against pollutants, ensuring a breath of pristine freshness in every moment.

Image: Examples of blending and grinding applications, showcasing the versatility of the 4-leaf mixer blade for smoothies and the 2-leaf grinder blade for items like coffee beans or spices.

MAINTENANCE & CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your CUCKOO Personal Blender.

- 1. Unplug:** Always unplug the motor base from the power outlet before cleaning.
- 2. Separate Parts:** Disassemble the container, blade assembly, and lids.

- 3. Wash Containers & Lids:** The containers and lids are dishwasher-safe (top rack recommended) or can be washed by hand with warm, soapy water.
- 4. Clean Blade Assembly:** Carefully wash the blade assembly with warm, soapy water. Use a brush to clean around the blades to remove any food residue. Handle blades with extreme caution as they are sharp.
- 5. Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- 6. Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.



Package Contents

- ① Motor Base
- ② Large Containers 500ml
- ③ Small Container with Lid 300ml
- ④ 4-Leaf Blade Mixer Blade
- ⑤ 2-Leaf Blade Grinder Blade

Image: A hand cleaning the blade assembly under running water, demonstrating the ease of cleaning for dishwasher-safe parts.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| Blender does not turn on. | Not plugged in; container not properly assembled/locked; overheated protection activated. | Ensure unit is plugged in. Securely attach and lock the container to the motor base. If overheated, unplug and let cool for 15 minutes. |
| Ingredients are not blending smoothly. | Too many ingredients; not enough liquid; ingredients too large. | Reduce ingredient quantity. Add more liquid. Cut large ingredients into smaller pieces. Use pulse function for stubborn items. |
| Leakage from container. | Blade assembly not tightened properly; container overfilled. | Ensure blade assembly is tightly screwed onto the container. Do not fill past the MAX line. |

SPECIFICATIONS

| Feature | Detail |
|--------------|----------|
| Brand | CUCKOO |
| Model Number | CFM-D60W |

| Feature | Detail |
|--------------------|--|
| Color | White |
| Special Feature | Compact, Portable |
| Capacity | 17 Fluid Ounces (approx. 500ml) |
| Product Dimensions | 4.2"D x 4.2"W x 11.8"H |
| Power Source | Corded Electric |
| Voltage | 120.0V |
| Controls Type | Push Button |
| Blade Material | Plastic (referring to blade housing, blades are metal) |
| Container Material | Plastic |
| Item Weight | 2.31 pounds |
| Manufacturer | Made in Korea |

WARRANTY & SUPPORT

Your CUCKOO Personal Blender (CFM-D60W) comes with a **1 Year Limited Warranty**.

For warranty claims, technical support, or any inquiries regarding your product, please refer to the contact information provided in the included instruction manual or visit the official CUCKOO website.