

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOBAGA](#) /

› [VOBAGA Coffee Mug Warmer \(Model: Calentadores para Teteras\) - Instruction Manual](#)

VOBAGA Calentadores para Teteras

VOBAGA Coffee Mug Warmer

Model: Calentadores para Teteras

INTRODUCTION

Thank you for choosing the VOBAGA Coffee Mug Warmer. This device is designed to keep your beverages at your preferred warm temperature, ensuring a pleasant drinking experience throughout the day. Please read this manual carefully before use and retain it for future reference.

Your Warm Drink, Ready Whenever



Image: The VOBAGA Coffee Mug Warmer keeping a beverage warm in an office setting.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Do not immerse the warmer in water or other liquids.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Exercise extreme caution when moving an appliance containing hot liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

- 1 x VOBAGA Coffee Mug Warmer
- 1 x User Manual

PRODUCT OVERVIEW

The VOBAGA Coffee Mug Warmer is a compact and efficient device designed to maintain the temperature of your hot beverages. It features a touch-sensitive power button that also controls temperature settings, an automatic shut-off function, and a residual heat reminder for safety.



Image: Dimensions of the VOBAGA Coffee Mug Warmer, showing its compact size and cord length.

SETUP

1. Unpack the VOBAGA Coffee Mug Warmer and place it on a flat, stable, and heat-resistant surface.
2. Ensure the power cord is free from kinks or damage.
3. Plug the UL-approved power cord into a standard 110-120V electrical outlet.

OPERATING INSTRUCTIONS

Power On/Temperature Settings

1. Place your mug (see 'Mug Compatibility' section) onto the heating plate.
 2. Touch the **Power Button** once to turn on the warmer and set it to the highest temperature setting (Red light: 149°F/65°C).
 3. Touch the **Power Button** a second time for the medium temperature setting (Purple light: 131°F/55°C).
 4. Touch the **Power Button** a third time for the lowest temperature setting (Blue light: 104°F/40°C).
-

Three temperature Settings



140°F - 149°F
(High Temp)



122°F - 131°F
(Middle Temp)



95°F - 104°F
(Low Temp)



Tips: Mug is not included.

Image: Visual representation of the three temperature settings (High, Medium, Low) indicated by different colored lights.

Automatic Shut-Off

- The warmer features an automatic shut-off function after 4 hours of continuous operation. This enhances safety and energy efficiency.

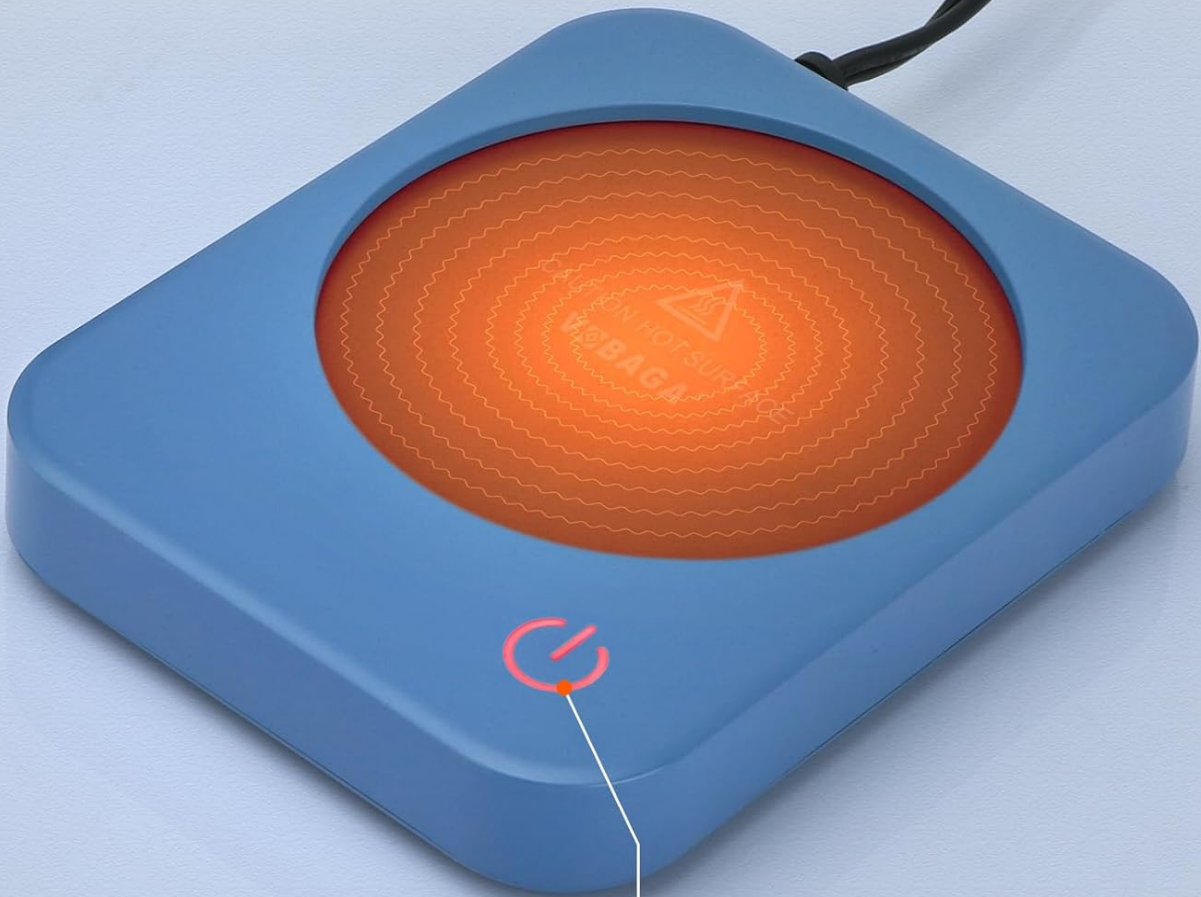


Image: The 4-hour auto shut-off feature ensures safety and energy saving.

Residual Temperature Reminder

- After turning off the warmer (either manually or automatically), the red light will flash for a period. This indicates that the heating plate is still hot and caution should be exercised to prevent accidental scalding. The red light will stop flashing once the surface temperature drops below 97°F (36°C).

Residual Heat Reminder



After turning off, the **red light flashes** to remind that **the heating plate is still hot** to prevent accidental scald

Image: The red light flashes to remind users that the heating plate is still hot after use.

Power Off

- To manually turn off the warmer, touch the **Power Button** until all indicator lights are off.

MUG COMPATIBILITY

For optimal performance, it is crucial to use the correct type of mug:

- **Recommended:** Thin-walled, flat-bottomed, or slightly concave-bottomed mugs. Materials such as tableware, stainless steel, and glass cups are suitable.
- **Not Recommended:** Vacuum-sealed cups or insulated cups. These types of mugs are designed to retain heat and will not allow the warmer to effectively transfer heat to the beverage. Deep concave bottoms may also reduce heating efficiency.

Mug Warmer for Any Drink



Image: The VOBAGA Coffee Mug Warmer is compatible with various mug types, including ceramic, stainless steel, and glass, for versatile use.

KEY FEATURES

- **3-Temperature Settings:** Easily adjust the temperature to 149°F/65°C (High), 131°F/55°C (Medium), or 104°F/40°C (Low) with a simple touch.
- **4-Hour Automatic Shut-Off:** For safety and energy conservation, the warmer automatically turns off after 4 hours of continuous use.
- **Residual Heat Reminder:** A flashing red light indicates when the heating plate is still hot, preventing accidental burns.
- **Spill-Proof Design:** Constructed with high-tech, heat-resistant, and fire-resistant materials, the spill-proof design ensures easy cleaning and durability.
- **Extended Power Cord:** A 60-inch (1.4m) UL-approved power cord provides convenient placement options.

MAINTENANCE

To ensure the longevity and optimal performance of your VOBAGA Coffee Mug Warmer, follow these maintenance guidelines:

- **Cleaning:** Always unplug the warmer and allow it to cool completely before cleaning. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** When not in use, store the warmer in a cool, dry place, away from direct sunlight and moisture.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. Do not wrap the cord tightly around the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in correctly. Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another device.
Beverage is not warm enough.	Incorrect temperature setting. Unsuitable mug type.	Increase the temperature setting. Use a thin-walled, flat-bottomed mug. Avoid insulated or vacuum-sealed cups.
Red light flashes after turning off.	Residual heat reminder.	This is a normal safety feature. The light will turn off once the heating plate has cooled down sufficiently. Avoid touching the hot surface.
Warmer turns off unexpectedly.	4-hour automatic shut-off activated.	This is a safety feature. If you wish to continue warming, simply turn the unit back on.

SPECIFICATIONS

- **Model:** Calentadores para Teteras
- **Rated Voltage:** 110-120V
- **Rated Power:** 20 Watts
- **Product Dimensions:** 5.3"L x 4.5"W x 0.7"H (13.5 cm L x 11 cm W x 2 cm H)
- **Item Weight:** 0.56 Pounds (9 ounces)
- **Cord Length:** 60 inches (1.4 meters)
- **Temperature Settings:** 149°F/65°C (High), 131°F/55°C (Medium), 104°F/40°C (Low)
- **Automatic Shut-Off:** After 4 hours
- **Safety Features:** Residual heat reminder, spill-proof design, UL approved cord
- **UPC:** 602815748865

WARRANTY AND SUPPORT

Specific warranty information for the VOBAGA Coffee Mug Warmer is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact VOBAGA customer service directly through their official website or the retailer where the product was purchased.

