

Manuals.plus /

› cimetech /

› cimetech Wireless Keyboard and Mouse Combo Instruction Manual

cimetech KF10US-TUR

cimetech Wireless Keyboard and Mouse Combo Instruction Manual

Model: KF10US-TUR

Brand: cimetech

1. INTRODUCTION

Thank you for choosing the cimetech Wireless Keyboard and Mouse Combo. This ultra-thin, sleekly designed set provides a comfortable and efficient typing experience with reliable 2.4G wireless connectivity. This manual will guide you through the setup, operation, and maintenance of your new wireless peripheral set.

2. KEY FEATURES

- **Exquisite Thin and Lightweight Design:** Ultra-thin scissor pedal wireless keyboard and mouse set for unparalleled lightweight experience and tidy workspace.
- **Comfortable Typing Experience:** Scissor-leg structure for sensitive, stable, soft, and silent keystrokes. Ergonomic wireless mouse for natural wrist relaxation and reduced fatigue.
- **2.4G Wireless Connect and Plug and Play:** Connect both keyboard and mouse with one USB receiver (stored near mouse battery compartment). Strong and reliable wireless connection up to 10 meters (33 ft) away with virtually no delays or dropouts.
- **Strong Compatibility:** Perfectly compatible with Windows, Mac, and Android systems. Suitable for office, home, or on-the-go use.
- **High Quality and Durable:** Made with high-quality materials and exquisite workmanship for solidity and durability, ensuring long-term use.

3. SETUP GUIDE

3.1 Unboxing and Components

Upon opening the package, you will find the wireless keyboard, the wireless mouse, and a single USB receiver. The USB receiver is typically stored inside the mouse's battery compartment.



Figure 1: cimotech Wireless Keyboard and Mouse Combo (Blue version shown).

3.2 Installing Batteries

The keyboard and mouse require batteries for operation. The mouse typically uses one AA battery, and the keyboard uses two AA batteries. Batteries are not usually included.

1. **For the Mouse:** Open the battery compartment cover on the underside of the mouse. Insert one AA battery, ensuring correct polarity (+/-). The USB receiver is stored here; remove it before inserting the battery. Close the cover.
2. **For the Keyboard:** Open the battery compartment cover on the underside of the keyboard. Insert two AA batteries, ensuring correct polarity (+/-). Close the cover.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the keyboard and mouse, including battery installation and USB receiver location.

3.3 Connecting the USB Receiver

The keyboard and mouse share a single 2.4G USB receiver. This allows for a simple plug-and-play setup without the need for additional software or drivers.

1. Locate the USB receiver inside the mouse's battery compartment and remove it.
2. Plug the USB receiver into an available USB port on your computer (desktop, laptop, PC, etc.).

3. Turn on the keyboard and mouse using their respective ON/OFF switches (usually located on the underside).
4. Your computer should automatically detect and install the necessary drivers. The keyboard and mouse should be ready for use within a few seconds.



Figure 2: Illustration of the USB receiver and its plug-and-play functionality.

4. OPERATING INSTRUCTIONS

4.1 Keyboard Usage

The keyboard features a full-size layout with a numeric keypad, function keys (F1-F12), and multimedia shortcuts accessible via the 'Fn' key.

- **Typing:** The scissor-leg structure provides a comfortable and quiet typing experience.
- **Numeric Keypad:** Use the dedicated numeric keypad for efficient data entry. Ensure 'Num Lock' is active (indicated by an LED on the keyboard).
- **Function Keys (Fn + F1-F12):** These keys provide quick access to multimedia controls (volume, play/pause, etc.) and system functions. Refer to your operating system's documentation for specific key assignments.

Easy Typing™

Improve Your Typing Efficiency

EasyTyping keys are more stable and flexible than traditional keys, improving the user's typing experience and accuracy



Figure 3: Demonstrating comfortable typing on the keyboard.

4.2 Mouse Usage

The ergonomic mouse is designed for comfortable long-term use.

- **Movement:** The mouse provides smooth and precise cursor control.
- **Clicking:** Standard left and right-click buttons.
- **Scroll Wheel:** Use the scroll wheel for vertical scrolling. The scroll wheel may also have a clickable function (middle click).
- **DPI Adjustment:** Some models may feature a DPI adjustment button (often near the scroll wheel) to change cursor sensitivity. The default DPI is typically 1600.



Figure 4: The ergonomic design of the mouse for comfortable use.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when performance degrades (e.g., lag, intermittent connection). Always use fresh, high-quality AA batteries.
- **Storage:** When not in use for extended periods, turn off the keyboard and mouse to conserve battery life. Store the USB receiver inside the mouse to prevent loss.
- **Avoid Extreme Conditions:** Do not expose the devices to extreme temperatures, direct sunlight, or high humidity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low or dead batteries; USB receiver not properly connected; Device turned off.	Replace batteries; Ensure USB receiver is firmly plugged in; Turn on devices using the ON/OFF switch.
Lag or intermittent connection	Interference from other wireless devices; Distance from receiver; Low battery.	Move closer to the receiver (within 10m/33ft); Avoid placing near other wireless devices (e.g., Wi-Fi routers); Replace batteries.
Cursor erratic or not moving smoothly	Dirty optical sensor (mouse); Using mouse on unsuitable surface.	Clean the optical sensor on the mouse; Use a mouse pad or a smooth, non-reflective surface.
Keyboard keys not working	Num Lock/Caps Lock off; Software issue.	Check Num Lock/Caps Lock indicators; Restart your computer; Re-pair the devices by unplugging and re-plugging the USB receiver.

7. SPECIFICATIONS

- **Product Dimensions:** 14.37 x 5.51 x 0.24 inches
- **Item Weight:** 1.32 pounds
- **Item Model Number:** KF10US-TUR
- **Brand:** cimetech
- **Color:** Blue (for this specific variant)

- **Connectivity Technology:** 2.4G Wireless (USB, Radio Frequency)
- **Special Features:** Portable, Ergonomic, Lightweight
- **Compatible Devices:** Laptop, Personal Computer (Windows, Mac, Android)
- **Manufacturer:** cntorich
- **Country of Origin:** China
- **First Available Date:** June 5, 2019

8. WARRANTY AND SUPPORT

cimetech products are designed for quality and durability. For any technical issues or support inquiries, please refer to the contact information provided with your product packaging or visit the official cimetech website. Our customer service support team is available to assist you with any technical problems you may encounter.

Please retain your proof of purchase for warranty claims.