

## Jimmy JV51

# Jimmy JV51 Cordless Vacuum Cleaner User Manual

Model: JV51 | Brand: Jimmy

## 1. PRODUCT OVERVIEW

The Jimmy JV51 electric broom is a powerful and lightweight cordless vacuum cleaner designed to simplify your home cleaning. It features a powerful 400W brushless digital motor with 115 AW (Air Watts) of suction power, ensuring efficient cleaning performance. Equipped with anti-mite technology, it helps eliminate mites and other harmful bacteria, contributing to a healthier environment. The integrated HEPA filter purifies the air during cleaning, capturing fine dust and allergens. Its lightweight and portable design, powered by a 54 Wh lithium battery, offers up to 40 minutes of runtime. The versatile design includes a 2-in-1 flat nozzle, an upholstery brush, and an anti-mite brush for comprehensive cleaning.

### Key Features:

- **Powerful Suction:** 400W brushless digital motor with 115 AW suction for deep cleaning.
- **Advanced Filtration:** HEPA filter captures 99% of fine pollen and dust, purifying the air.
- **Long Runtime:** Up to 40 minutes of continuous cleaning on a single charge.
- **Versatile Attachments:** Includes a turbo brush, rotating roller, 2-in-1 flat nozzle, upholstery brush, and anti-mite brush for various cleaning needs.
- **Lightweight & Portable:** Ergonomic design for easy maneuverability and car cleaning.
- **Transparent Dustbin:** Easy to monitor and empty collected debris.



Image: The Jimmy JV51 Cordless Vacuum Cleaner, showcasing its red and white design with the main floor brush attached.

## 2. SETUP GUIDE

Follow these steps to assemble and prepare your Jimmy JV51 vacuum cleaner for first use.

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure all included parts are present: main vacuum unit, extension tube, main floor brush, 2-in-1 flat nozzle, upholstery brush, anti-mite brush, charging adapter, and wall mount bracket.
2. **Attach Extension Tube:** Connect the extension tube to the main vacuum unit until it clicks securely into place.
3. **Attach Main Floor Brush:** Connect the main floor brush to the other end of the extension tube, ensuring it

clicks firmly.

4. **Initial Charging:** Before first use, fully charge the vacuum cleaner. Connect the charging adapter to the charging port on the battery pack (located on the main unit). The charging indicator light will show the charging status. A full charge typically takes a few hours.
5. **Install Wall Mount (Optional):** If desired, install the wall mount bracket in a convenient location near a power outlet. This allows for easy storage and charging. Refer to the wall mount instructions for proper installation.

### 3. OPERATING INSTRUCTIONS

Learn how to effectively use your Jimmy JV51 for various cleaning tasks.

#### Powering On/Off:

- To turn on the vacuum, press the power button located on the handle.
- To turn off the vacuum, press the power button again.

#### Suction Modes:

- The vacuum typically operates in a standard suction mode. For tougher dirt or carpets, a MAX mode may be available (refer to specific button on your unit if present).
- The 115 AW suction power is effective for most cleaning needs.

#### Using Attachments:

- **Main Floor Brush:** Ideal for cleaning hard floors and low-pile carpets. The turbo brush and rotating roller efficiently pick up debris.
- **2-in-1 Flat Nozzle:** Attach directly to the main unit or extension tube for cleaning narrow gaps, corners, and delicate surfaces.
- **Upholstery Brush:** Designed for cleaning sofas, curtains, and other fabric surfaces.
- **Anti-Mite Brush:** Specifically designed to remove dust mites and allergens from mattresses, pillows, and upholstered furniture.

#### Battery Life:

The 54 Wh lithium battery provides up to 40 minutes of runtime, depending on the suction mode and attachments used. For optimal performance, fully charge the battery before each use.

### 4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Jimmy JV51 vacuum cleaner.

#### Emptying the Dustbin:

- The transparent dustbin allows you to see when it needs emptying.
- To empty, detach the dustbin from the main unit (refer to your unit's specific release mechanism).
- Open the dustbin lid and empty contents into a trash bin. It is recommended to do this outdoors to avoid dust.

dispersion.

- Close the lid and reattach the dustbin securely.

### Cleaning the HEPA Filter:

- The HEPA filter should be cleaned regularly, ideally after every few uses or when suction power decreases.
- Remove the filter from the dustbin (twist or pull as per design).
- Tap the filter gently over a trash can to remove loose dust.
- If heavily soiled, rinse the filter under cold running water. Ensure it is completely dry (allow 24-48 hours) before reinserting it into the vacuum. Do not use hot water or detergents.

### Cleaning Brushes:

- Periodically check the main floor brush and other rotating brushes for tangled hair or debris.
- Remove the brush roller from its housing (usually by unlocking a latch).
- Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
- Wipe the brush and its housing with a damp cloth. Ensure all parts are dry before reassembling.

### Battery Care:

- Always use the original charging adapter provided with the vacuum.
- Avoid fully discharging the battery frequently. Recharge it when the power indicator is low.
- Store the vacuum in a cool, dry place when not in use for extended periods.

## 5. TROUBLESHOOTING

If you encounter issues with your Jimmy JV51, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dustbin is full.	Empty the dustbin.
	Filter is clogged.	Clean or replace the HEPA filter.
	Brush roller or tube is blocked.	Check and clear any blockages in the brush head or extension tube.
Brush roller not rotating.	Tangled hair or debris.	Remove and clean the brush roller.

Problem	Possible Cause	Solution
	Brush head not properly attached.	Ensure the brush head is securely connected to the extension tube or main unit.
Short battery runtime.	Battery not fully charged.	Ensure the battery is fully charged before use.
	Using MAX mode continuously.	Runtime is shorter in MAX mode. Use standard mode for longer cleaning sessions.

## 6. TECHNICAL SPECIFICATIONS

Detailed specifications for the Jimmy JV51 Cordless Vacuum Cleaner.

Specification	Value
Brand	Jimmy
Model Number	JIMMY JV51
Color	Red
Product Dimensions (L x W x H)	60 x 22 x 23 cm (23.6 x 8.7 x 9.1 inches)
Power	400 Watts
Voltage	400 Volts (Internal motor voltage, not input)
Noise Level	75 dB
Runtime	Up to 40 minutes
Features	HEPA, Lightweight, Portable
Item Weight	2.9 Kilograms (6.4 lbs)
Filter Type	Cloth (HEPA)
Surface Recommendation	Hard Floor
Power Source	Battery Powered
Included Components	Vacuum Cleaner, Brushes, User Manual
Cordless?	Yes
Battery Type	1 Lithium-ion (included)

## 7. WARRANTY INFORMATION

Specific warranty terms for the Jimmy JV51 may vary by region and retailer. Please retain your proof of purchase (receipt or invoice) as it will be required for any warranty claims.

- **Standard Warranty:** Most Jimmy products come with a standard manufacturer's warranty covering defects in materials and workmanship for a specified period (e.g., 1-2 years).
- **Exclusions:** The warranty typically does not cover damage caused by misuse, neglect, unauthorized repairs, normal wear and tear, or consumable parts like filters and brushes.
- **Claim Process:** In case of a defect, contact the retailer where you purchased the product or the official Jimmy customer support in your region. They will guide you through the warranty claim process, which may involve providing product details, proof of purchase, and a description of the issue.

## 8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Jimmy JV51 Cordless Vacuum Cleaner, please contact:

- **Retailer Support:** The store or online platform where you purchased the product can often provide initial support and guidance.
- **Manufacturer Support:** Visit the official Jimmy website for your region to find contact information for their customer service department. This typically includes phone numbers, email addresses, or online contact forms.
- **Online Resources:** Check the official Jimmy website for FAQs, video tutorials, and additional product information that may help resolve your issue.

When contacting support, please have your product model (JV51) and purchase details ready to facilitate a quicker resolution.