

[Manuals.plus](#) /

› [Enido](#) /

› Enido Flameless Flickering LED Candles with Remote (Model 0806) - Instruction Manual

Enido 0806

Enido Flameless Flickering LED Candles with Remote (Model 0806)

Instruction Manual



INTRODUCTION

Thank you for choosing the Enido Flameless Flickering LED Candles. This set provides a realistic flickering effect, designed for both indoor and outdoor decorative purposes. These battery-operated candles offer a safe and convenient alternative to traditional candles, featuring remote control functionality and a timer for ease of use.

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Enido LED candles. Please read it thoroughly before use and retain it for future reference.



Image: A complete set of Enido flameless LED candles and their remote controls.

SETUP

1. **Unpacking:** Carefully remove all candles and remote controls from the packaging. Inspect for any damage.

2. **Battery Installation (Candles):**

- Each candle requires two (2) AA batteries (not included).
- Locate the battery compartment cover at the bottom of each candle.
- Twist or slide the cover to open.
- Insert two AA batteries, ensuring correct polarity (+/-).
- Securely close the battery compartment cover.

3. **Remote Control Preparation:**

- The remote controls come with a plastic sheet inserted to prevent battery drain during shipping.

- Pull out this plastic sheet from the battery slot before first use.

4. Placement:

- Place the candles on a stable, flat surface.
- While designed for outdoor use and described as water-resistant, it is important to note that product specifications indicate the item is 'Not Water Resistant' and 'Is Waterproof: False'. Therefore, avoid direct exposure to heavy rain or immersion in water to prevent damage.
- These candles are suitable for dining tables, fireplaces, patios, and other decorative settings.

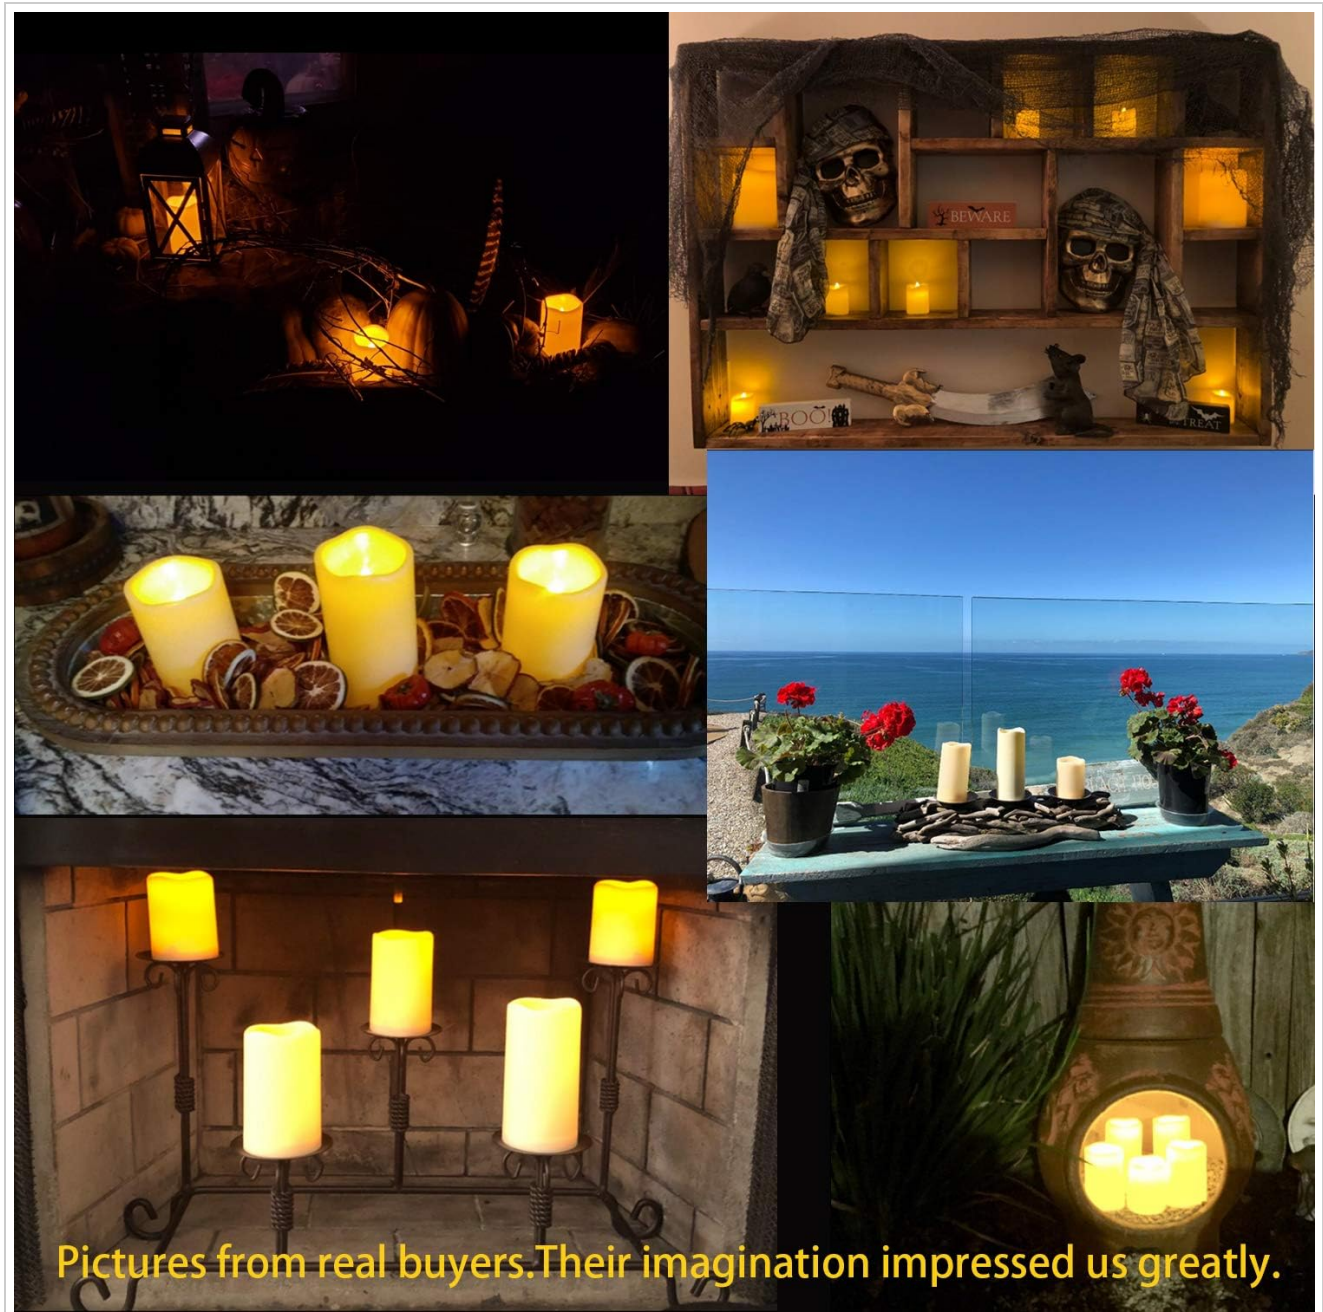


Image: Flameless candles illuminating a fireplace area.

OPERATING INSTRUCTIONS

The Enido LED candles are operated using the included remote control. Ensure the remote has a clear line of sight to the candles for optimal functionality.

Remote Control Functions:

- **ON/OFF Button:** Press 'ON' to turn the candles on, and 'OFF' to turn them off.
- **Timer Buttons (2H, 4H, 6H, 8H):** Press one of these buttons to activate the automatic timer function. Once set, the candles will remain on for the selected duration and then turn off. They will automatically turn on again at the same time the next day for the set duration. To cancel the timer, press the 'OFF' button.
- **MODE Button:** Toggles between two lighting modes:
 - **Candle (Flicker):** Simulates the natural flickering of a real flame.
 - **Light (Steady):** Provides a constant, steady illumination.
- **DIM Buttons (+/-):** Adjusts the brightness level of the candles. Press '+' to increase brightness and '-' to decrease brightness.



Image: Remote control for the flameless LED candles, highlighting its functions.

MAINTENANCE

- **Battery Replacement:** When the light dims significantly or the candles stop responding, it's time to replace the batteries. Follow the battery installation steps in the Setup section. Always replace all batteries in a candle at the

same time with new ones. Do not mix old and new batteries.

- **Cleaning:** The candles are made of resin plastic. To clean, gently wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the candles in water.
- **Storage:** If storing the candles for an extended period, remove the batteries to prevent leakage and potential damage to the product. Store in a cool, dry place.

TROUBLESHOOTING

Candles do not turn on:

- Ensure batteries are correctly installed with proper polarity.
- Check if the batteries are depleted and replace them if necessary.
- For the remote control, verify that the plastic insulation sheet has been removed.
- Ensure the remote control has a clear line of sight to the candles.

Remote control is not working or only controls some candles:

- Replace the remote control battery if needed.
- Point the remote directly at the candles you wish to control. Obstructions can interfere with the signal.
- If multiple candles are close together, they may respond simultaneously. To control individual candles, separate them or block the signal to unwanted candles.

Candles are flickering irregularly or dimming:

- This usually indicates low battery power. Replace the batteries in the affected candles.

Water damage despite being advertised for outdoor use:

- While the product is designed for outdoor aesthetics, official specifications state it is 'Not Water Resistant' and 'Is Waterproof: False'.
- Avoid direct exposure to heavy rain, prolonged wet conditions, or immersion in water. Use in covered outdoor areas or bring indoors during inclement weather.

SPECIFICATIONS

Brand	Enido
Model Number	0806
Product Dimensions	3"D x 3"W x 6"H (various heights in pack)
Item Weight	2.23 Pounds (total for pack)
Material	Resin, Rubber (plastic body)
Light Source Type	LED
Light Color	Warm Yellow
Power Source	Battery Powered (2 AA batteries per candle, not included)
Control Method	Remote Control

Special Features	Energy Efficient, Timer, Water Resistant (Note: See Troubleshooting for clarification on water resistance)
Number of Items in Pack	9 Candles, 2 Remote Controls
UPC	714035474377

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Enido Flameless Flickering LED Candles, please contact the manufacturer, KINGBIG, or your retailer. Please have your model number (0806) and purchase information available when contacting support.

Specific warranty details may vary by region and retailer. Please refer to your purchase documentation for information regarding warranty coverage.

