Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amazon Basics /
- > Amazon Basics Electric Coffee and Spice Grinder (Model CG9402-UL) Instruction Manual

Amazon Basics CG9402-UL

Amazon Basics Electric Coffee and Spice Grinder

Model: CG9402-UL

Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Amazon Basics Electric Coffee and Spice Grinder. Please read this manual thoroughly before first use and retain it for future reference.



The Amazon Basics Electric Coffee and Spice Grinder, shown here on a kitchen counter, is designed for grinding coffee beans, herbs, and spices.

Important Safety Information

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- · Read all instructions.
- $\bullet\,$ Do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- · Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Check the grinding chamber for the presence of foreign objects before use.
- Ensure the lid is securely locked in place before operating the grinder.

Product Overview

The Amazon Basics Electric Coffee and Spice Grinder is designed for efficient grinding of various dry ingredients. Familiarize yourself with its components for proper use.



The main unit of the Amazon Basics Electric Coffee Grinder features a stainless steel housing and a transparent lid.



Inside the grinding chamber, heavy-duty stainless steel blades are visible, designed for effective grinding.

Components:

- Motor Base: The main body containing the motor and power cord.
- **Grinding Chamber:** The internal area where ingredients are placed for grinding, equipped with stainless steel blades.
- **Transparent Lid:** A clear lid that covers the grinding chamber, allowing visibility during operation. It also acts as the activation switch.
- Power Cord: For connecting the grinder to an electrical outlet.

Setup

Follow these steps to prepare your grinder for first use:

- 1. **Unpack:** Carefully remove all packaging materials and inspect the grinder for any damage.
- 2. **Clean:** Before initial use, wipe the exterior of the motor base with a damp cloth. Clean the grinding chamber and lid with a dry cloth. Do not immerse the motor base in water.
- 3. **Placement:** Place the grinder on a stable, dry, and level surface.
- 4. **Power Connection:** Ensure the grinder is unplugged before adding ingredients.



The grinder with its power cord, ready for connection to a standard electrical outlet.

Operating Instructions

This section details how to operate your electric grinder for optimal results.

- 1. **Prepare Ingredients:** Ensure coffee beans, spices, or other ingredients are dry.
- 2. **Fill Grinding Chamber:** Remove the transparent lid. Add the desired amount of ingredients to the grinding chamber. Do not fill past the 'MAX' indicator line. The capacity is approximately 2.1 ounces (60 grams) of coffee beans.
- 3. **Secure Lid:** Place the transparent lid securely onto the motor base. The grinder will not operate unless the lid is properly seated and engaged.



The transparent lid features a 'MAX' fill line and an integrated power button for operation.

- 4. Plug In: Plug the power cord into a standard 120V AC electrical outlet.
- 5. **Grind:** Press down firmly on the lid to activate the grinding blades. Hold the lid down for continuous grinding.
- 6. **Monitor Grind:** Observe the grinding process through the transparent lid. Release pressure on the lid to stop grinding. Pulse the grinder for coarser results, or hold longer for finer grinds. For coffee, 10-15 seconds typically yields a medium grind suitable for drip coffee.
- 7. **Unplug and Remove:** Once the desired consistency is achieved, release the lid and unplug the grinder from the outlet. Carefully remove the lid and pour out the ground ingredients.

Maintenance and Cleaning

Regular cleaning ensures the longevity and performance of your grinder.

- 1. **Unplug:** Always ensure the grinder is unplugged from the power outlet before cleaning.
- 2. **Empty Chamber:** Remove any remaining ground ingredients from the grinding chamber.



The grinding chamber with the lid removed, illustrating the area to be cleaned.

- 3. **Clean Grinding Chamber:** Use a small brush (not included) or a dry cloth to carefully remove any residual grounds from the blades and interior of the chamber. Do not use water or immerse the chamber.
- 4. **Clean Lid:** The transparent lid can be wiped clean with a damp cloth. Ensure it is completely dry before reattaching.
- 5. **Clean Exterior:** Wipe the exterior of the motor base with a damp cloth. Do not use abrasive cleaners or scourers.
- 6. **Storage:** Store the grinder in a dry place with the lid securely in place.

Troubleshooting

If you encounter issues with your grinder, refer to the following common problems and solutions:

- Grinder does not turn on:
 - $\circ~$ Ensure the power cord is securely plugged into a working electrical outlet.
 - Verify the transparent lid is correctly and securely seated on the motor base. The grinder has a safety interlock that prevents operation if the lid is not properly closed.

• Ingredients are not grinding evenly:

- Ensure you are not overfilling the grinding chamber. Do not exceed the 'MAX' fill line.
- Pulse the grinder in short bursts and shake gently to redistribute ingredients for more even grinding.

Grinder stops during operation:		
 The grinder may have overheated. Unplug the unit and allow it to cool down for at least 10-15 minutes before attempting to use it again. 		
 Check for any obstructions in the grinding chamber. 		
Specifications		
Detailed technical specifications for the Amazon Basics Electric Coffee and Spice Grinder.		



Dimensional overview of the grinder, indicating its compact size.	
Feature	Detail
Brand	Amazon Basics
Model Number	CG9402-UL
Color	Stainless Steel
Product Dimensions (L x W x H)	3.72" x 3.5" x 6.9"
Capacity	2.1 ounces (approx. 60 grams)
Voltage	120 Volts
Item Weight	1.54 pounds
Blade Material	Stainless Steel
Recommended Uses	Grinding coffee beans, herbs, spices, grains, and nuts

Warranty and Support

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Amazon Basics website. Contact customer service for assistance with any issues not covered in this manual.

Related Documents - CG9402-UL



Amazon Basics Stainless Steel Electric Coffee Bean Grinder User Manual

User manual for the Amazon Basics Stainless Steel Electric Coffee Bean Grinder (Model B07SYTRPSG). Covers important safeguards, intended use, operation, cleaning, maintenance, and specifications for household use.



Amazon Basics Stainless Steel Electric Coffee Bean Grinder User Manual

Comprehensive user manual for the Amazon Basics Stainless Steel Electric Coffee Bean Grinder (Model B07SYTRPSG), covering safety precautions, operation, cleaning, maintenance, and specifications.

